 
 
 




M101-120001	T-SPRING*(IDEM REF 1200012)
M101-1200012	T-SPRING (IDEM REF 120001)*****
M101-1200012-	T-SPRING (IDEM REF 120001)
M101-124001	HUB
M101-125001	ROLLER
M101-126001	HUB A
M101-127001	SEALING STRIP
M101-128001	SEALING STRIP
M101-129001	SEALING STRIP
M101-130001	TUBE
M101-131002	TUBE
M101-134001	SHAFT
M101-135001	SCREW
M101-137001	GEAR
M101-138001	HUB B
M101-141001	LEAF SPRING
M101-142001	ATCH
M101-143001	GUIDE SCREW
M101-144001	SPRING
M101-145001	KNOB
M101-146001	LOCK BUTTON
M101-147001	COVER
M101-151001	STAD
M101-152001	HOOK
M101-153001	LEVER A
M101-154001	SHOULDER SCREW
M101-155001	LEVER B
M101-157001	SPRING
M101-161001	TRIPOD SOCKET
M101-163001	STRAP EYELET A
M101-165001	STRAP EYELET B
M101-167001	PEDESTAL
M101-169001	STRAP EYELET C
M101-170001	SPOOL HOLDER
M101-178001	SEALING STRIP U
M101-179001	STOP PLATE
M101-181001	SHAFT
M101-182001	LEVER A
M101-183001	LEVER B
M101-188001	SEALING STRIP L
M101-191001	SHAFT
M101-192001	R LEVER
M101-195001	PEDESTAL
M101-197001	HUB
M101-198001	GEAR
M101-199001	SCREW
M101-211001	SPRING
M101-212001	SPONGE
M101-2130013	HOLDER A
M101-214001	HOLDER B
M101-215001	SEALING STRIP
M101-216001	SEALING STRIP
M101-217001	SEALING STRIP
M101-220001	LEAF SPRING
M101-230001	KNOB ASS'Y
M101-236001	SPRING




M104-000001	BATTERY CASE ASS'Y
M104-112001	LEAF SPRING
M104-114001	CASE
M104-118001	C-RING
M104-120001	BATTERY CHAMBER COVER
M106-000001	SHUTTER CURTAIN ASS'Y
M107-000001	BELLOWS ASS'Y
M108-110001	FILM SPOOL HOLDER
M108-110002	SPOOL KNOB ASS'Y L
M108-111002	SPOOL KNOB L
M108-112001	SPRING L
M108-113002	SPOOL HOLDER PLATE
M108-114002	SPOOL HOLDER
M108-115001	COVER
M108-117002	SHAFT R
M108-118002	SPRING
M108-119002	STOPPER
M108-120002	SPOOL KNOB ASS'Y R
M108-121002	SPOOL KNOB R
M108-122002	SPRING R
M108-126002	PRING HOLDER
M109-000001	PULLY ASS'Y
M109-1170013	LOCK LEVER
M109-140001	GEAR
M109-146001	SEALING STRIP
M110-3000	SPEED REGULATING GOVERNOR
M111-000001	WINDING MECHANISM ASS'Y
M111-100001	WINDING MECHANISM ASS'Y C
M111-110001-00	WINDING MECHANISM ASS'Y B
M111-112001-08	SPRING
M111-113001-01	SR LEVER
M111-113001-04	HOLDER
M111-113001-05	SPRING
M111-114001-02	FILM SPOOL HOLDER
M111-114001-03	SHAFT
M111-114001-04	SCREW
M111-114001-05	SPRING
M111-114001-07	GEAR
M111-114001-08	GEAR
M111-114001-09	SCREW
M111-115001-01	GEAR
M111-115001-04	SPRING
M111-115001-06	PAWL
M111-115001-07	SPRING
M111-1150012-04	SPRING
MY11113	SHUTTER
MY11213	SHUTTER
MY11313	SHUTTER
MY11113-31451	BRAKE PLATE
MY11113-31471	SPRING
MY11113-31541	SPRING
MY11113-31581	PLATE
MY11113-31701	SET PLATE
MY11113-31751	SPRING
MY11113-31761	HUB
MY11113-31801	OPERATING LEVER




MY11113-31831	SPRING
MY11113-3181	COLLAR
MY11113-31901	DRIVE LEVER
MY11113-32101	CONTROL LEVER
MY11113-32131	SPRING
MY11113-32201	ARMATURE LEVER
MY11113-32241	SPRING
MY11113-32301	DRIVE LEVER
MY11113-32341	SPRING
MY11113-32351	SHOULDER SCREW
MY11113-32361	WASHER
MY11113 32501	MAGNET
MY11113-32601	SR CAM
MY11113-32641	SPRING
MY11113-32691	COLLAR
MY11113-32701	SR LEVER
MY11113-32741	SPRING
MY11113-32801	LEVER
MY11113-32901	S CHARGE LEVER
MY11113-33211	CONTACT PLATE A
MY11113-33651	SPRING
MY11113-33701	SR MAGNET ASS'Y
MY11113-33901	APERTURE-ACT, LEVER ASS'Y
MY11113-34211	FPC BOARD S
MY11113-34261	FPC BOARD X
M111-200001	WINDING MECHANISM ASS'Y D
M111-210001-00	WINDING MECHANISM ASS'Y A ***** (non rentable)
M111-212001-01	R LEVER A
M111-213001-01	STOP LEVER
M111-213001-03	HUB
M111-213001-05	R LEVER B
M111-213001-06	HUB
M111-213001-08	SPRING
M111-213001-11	WASHER (6W3.2X0.3)
M111-213001-12	SPRING
M111-214001-09	SPRING
M111-2140014-08	SPRING
M111-215001-01	RM COUPLING LEVER
M111-215001-05	RM PLATE
M111-2160013-02	PAWL
M111-2160013-04	COLLAR
M111-217001-01	SWITCH LEVER
M111-217001-05	HUB
M111-217001-06	SPRING
M111-217001-07	SWITCH PC BOARD
M111-310001-00	E-COUNTER ASS'Y
M111-4100012-00	WINDING SHAFT ASS'Y
M111-41100-08	SPRING
M111-4110012-01	WINDING LEVER
M111-412001-01	WIRE
M111-412001-04	STOPPER
M111-413001-05	SCREW
M111-4130013-01	GEAR
M111-510001-00	C DIVIDING DEVICE ASS'Y
M111-610001-00	COUNTER GEAR ASS'Y
M111-610001-15	SPRING

  



M111-911001-01	CHANGE OVER LEVER
M111-911001-04	SPRING
M111-911001-06	SCREW
M111-912001-01	STOP LEVER
M111-912001-05	SHAFT
M111-913001-01	LEVER
M111-913001-04	SPRING
M111-913001-06	FILM COUNTER GEAR U
M111-913001-07	FILM COUNTER GEAR L
M111-914001-02	R GEAR
M111-915001-02	R DISK
M111-915001-04	WASHER (6W3.2X0.3)
M111-915001-06	SPRING(IDEM 111-9150015-06)
M111-915001-07	COLLAR
M111-915001-09	PAWL A
M111-915001-10	SPRING
M111-915001-15	HOLDER A
M111-915001-17	PAWL B
M111-9150012-05	COLLAR
M111-915001-21	SPRING
M111-9150013-14	SPRING
M111-9150015-06	SPRING (IDEM 111-915001-06)*****
M111-9150015-06-	SPRING(IDEM 111-915001-06)
M111-916001-01	COUNTER GEAR
M11313-34211	F.P.C BOARD S
M11313-34261	F.P.C BOARD X
M122-000001	ETRACTING MOUNT ASS'Y
M122-100001	MOUNTING BASE RING ASS'Y
M122-111001	BASE RING
M122-112001	CHANGE OVER RING
M122-113001	RING
M122-114001	MASK
M122-120001	S SET RING
M122-125001	FIXING RING
M122-131001	R LEVER
M122-132001	STUD
M122-133001	SPRING
M122-134001	LOCK PIN
M122-135001	LEAF SPRING
M122-136001	MOUNT RING (S145-10311)
M122-141001	SPRING
M122-142001	LEVER
M122-143001	STUD
M122-144001	PIN
M122-150001	S SET PLATE
M122-160001	CHANGE OVER LEVER
M122-166001	STUD A
M122-167001	STUD B
M122-168001	STUD
M122-169001	SPRING
M122-1700012	STOPPER PLATE
M122-180001	RANGE LEVER ASS'Y
M122-189001	SEALING STRIP
M122-191001	REAR FRAME
M122-192001	PIN HOLDER
M122-193001	PLATE

 


M122-1940011	F.P.C. BOARD ASS'Y
M122-196001	SIGNAL PINS HOUSING
M122-197001	SPRING
M122-198001	SIGNAL PINS HOUSING
M122-210001	MIDDLE BARREL ASS'Y
M122-311001	MAIN FRAME
M122-312001	R BUTTON
M122-313001	SPRING
M122-315001	PIN
M122-3160013	STUD
M122-317001	SEALING RUBBER
M122-318001	PIN
M122-320001	LEVER A
M122-324001	LEVER B
M122-325001	SHAFT
M122-326001	SPRING
M122-911001	PLATE
M122-913001	PEDESTAL
M122-915001	ANGLE PLATE
M122-920001	S SET PLATE
M122-924001	SHAFT
M122-925001	PEDESTAL B
M122-927001	SPRING
M122-930001	LOCK LEVER A
M122-934001	HUB A
M122-936001	SPRING
M122-940001	LOCK LEVER B
M122-944001	HUB B
M122-946001	SPRING
M132-1001	SET LEVER
M144403	CABLE RELEASE ADAPTATER RC402
M146-000001	RANGE FINDER ASSY
M146-000002	RANGE FINDER ASSY
M152-000001	BACK COVER ASS'Y*****
M152-000002	BACK COVER ASS'Y*****
M152-114001	SHAFT
M152-115001	SPRING
M152-1160012	SHAFT
M152-1160023	SHAFT
M152-1170012	SCREW
M152-1170024	SCREW
M152-130001	SIDE PALTE
M152-133002	PLATE
M152-134001	PLATE
M152-134002	PLATE
M152-141001	FILM HOLDER
M152-151001	LEAF SPRING
M152-152001	ROLLER
M152-153001	SHAFT
M152-153002	SHAFT
M152-156001	HOLDER
M152-158002	RUBBER
M152-1590022	HOLDER
M152-171001	MEMO HOLDER
M152-172001	PLATE
M152-1730012	CHANGE OVER PLATE

 



M152-173002	CHANGE OVER PLATE
M152-174001	WINDOW
M152-176001	WASHER (6W3.2X0.3)
M152-1800013	HOLDER
M152-186001	SPRING WASHER
M152-190001	PRESSURE PLATE
M152-194001	SCREW
M152-195001	LIGHT BUFFLE PLATE
M152-197001	RUBBER
M152-198001	PLATE
M152-199001	COLLAR
M154-000001	TOP COVER ASS'Y*****
M154-000002	TOP COVER ASS'Y
M154-111001	TOP COVER
M154-111002	TOP COVER
M154-113001	WINDOW A
M154-114001	WINDOW B
M154-115001	WINDOW
M154-1170012	WINDOW C
M154-118001	WINDOW F
M154-119001	SEALING INSULATION
M154-122001	PLATE
M154-124001	PIN
M154-125001	INSULATION PLATE
M154-126001	CONTACT PLATE
M154-127001	CONTACT PLATE
M154-128001	INSULATION PLATE
M154-132001	R SOCKET
M154-133001	HOLDER
M154-1340013	NUT
M154-135001	CAP
M154-141001	KNOB
M154-142001	CONTACT PLATE
M154-145001	SHUTTER RELEASE BUTTON
M154-1500012	SR BASE PLATE
M154-161001	LEVER
M154-162001	FLANGE PIN
M154-163001	LEAF SPRING
M154-164001	WASHER
M154-166001	SHAFT
M154-167001	SPRING
M154-170001	LEVER
M154-175001	LEAF SPRING
M154-178001	FRAME
M154-179001	EYE-CUP
M155-000001	BOTTOM COVER ASS'Y
M155-112001	COUPLING LEVER
M155-113001	KNOB
M155-1140015	SCREW
M155-116001	COLLAR
M155-118001	SPRING
M165-000001	SHUTTER RELEASE MG. ASS'Y
M165-165001	PLATE
M166-100001	TV P.C. PLATE ASS'Y
M166-110001	TV BASE PLATE
M166-120001	TV CLICK DISK

  



M166-125001	TV P.C. BOARD
M166-130001	DISK
M166-135001	CV P.C. BOARD
M166-136001	COLLAR
M166-1400012	CONTACT DISK
M166-151001	GEAR
M166-152001	CONTACT PLATE
M166-153001	SCREW
M166-1540012	ISO P.C. DISK
M166-1550012	DISK
M166-156001	NUT
M166-160001	TV LOCK PLATE
M166-200001	TV DIAL ASS'Y
M166-210001	TV DIAL KNOB HOUSING
M166-215001	GEAR
M166-216001	RING
M166-217001	LEAF SPRING
M166-221001	DISK
M166-222001	ISO SCALE DISK
M166-223001	SCREW
M166-2240013	SHUTTER SPEED SCALE
M166-225001	FIXING NUT
M166-226001	NUT
M171	SHUTTER ASSY
M171-0001	BASE PLATE
M171-0003	SHUTTER CASE
M171-0137	APERTURE ACT LEVER
M171-1001	COCKING RING
M171-1019	RELEASE LEVER
M171-1039	SPRING
M171-4522	SYNCHRO CONTACT (VOIR 313-1606)
M171-4524	SPRINX
M171-4621	COLLAR
M171-6003	ARMATURE
M171-6014	COIL (M1)
M171-6028	ARMATURE LEVER
M171-6029	SPRING
M171-6032	PC- PLATE
M171-6033	FPC PLATE
M172	SHUTTER ASSY
M172-6032	PC – PLATE
M173	SHUTTER ASSY
M173-0137	APERTURE ACT LEVER
M173-6032	PC – PLATE
M 174	SHUTTER ASSY
M174-0137	APERTURE ACT LEVER
M174-6032	PC – PLATE
M174-6033	FPC PLATE
MP175	SHUTTER ASSY
M175-0137	APERTURE ACT LEVER
M175-110001	MAIN F.P.C. BOARD A
M175-120001	MAIN F.P.C. BOARD B*****
MP175-6032	PC – PLATE
MP175-6033	FPC PLATE
M176	SHUTTER ASSY
M177	SHUTTER ASSY

 



M178	SHUTTER ASSY
M179	SHUTTER ASSY
M181	SHUTTER ASSY
M181-0137	APERTURE ACT LEVER
M182	SHUTTER ASSY
M182-0137	APERTURE-ACT LEVER
M185	SHUTTER ASSY
M186	SHUTTER ASSY
M191-000001	BODY MOUNT CAP ASS'Y
M199-115001	HOLDER B
M199-120001	SWITCH BOARD
M199-129001	SHOULDER SCREW
M199-130001	SWITCH
M199-138001	COVER
M199-147001	WASHER (T=0.03)
M199-147002	WASHER (T=0.05)
M199-147003	WASHER (T=0.1)
M199-147004	WASHER (T=0.02)
M199-150001	RANGE LEVER
M199-150002	RANGE LEVER ASS'Y
M199-159001	SHAFT
M199-160001	CAM LEVER ASS'Y
M199-166001	SCREW
M199-167001	SCREW
M199-1710012	CRANK LEVER
M199-174001	SLIDE LEVER
M199-178001	COLLAR
M199-179001	SCREW
M199-181001	SHAFT
M199-182001	STUD
M199-183001	SPRING
M199-184001	SPRING
M199-185001	SHAFT
M199-191001	SHAFT
M199-192001	EM LEVER
M199-194001	SPRING
M199-211001	SCREW
M199-213001	SPRING
M199-214001	PAWL
M199-217001	SPD LENS
M199-218001	PLATE
M199-219001	SPRING
M199-221001	PIN
M199-222001	STUD
M199-223001	SPRING
M199-224001	INSULATION PLATE
M199-226001	SHOULDER SCREW
M199-227001	RUBBER
M199-228001	HOLDER A
M199-229001	HOLDER B
M199-232001	CONTACT PLATE A
M199-234001	CONTACT PLATE B
M199-235001	COLLAR
M199-2410016	SELECTOR LEVER
M199-245001	PLATE
M199-246001	SWITCH CONTACT LEVER

  


M199-248001	COLLAR
M199-249001	SCREW
M199-250001	SELF-TIMER PLATE ASS'Y
M199-255001	KNOB
M199-259001	CONTACT PLATE
M199-260001	SELF-TIMER LED
M199-266001	PLATE
M199-270001	GRIP
M199-273001	RUBBER R
M199-281001	GRIP L
M199-282001	RUBBER L
M199-283001	SR SWITCH
M199-287001	COVER
M199-288001	EM BUTTON
M199-291001	HINGE
M199-294001	SCREW
M199-295001	SCREW
M199-296001	PLATE
M199-297001	LOCK BUTTON
M199-298001	SCREW
M199-299001	SPRING
M199-311001	SHAFT
M199-312001	KNOB
M199-314001	AE BUTTON
M199-315001	FIXING NUT
M199-316001	SPRING
M199-317001	DISK
M199-320001	FILM ADVANCE LEVER
M199-325001	SPRING WASHER
M199-32600012	SCREW(IDEM 199-326001)
M199-326001	SCREW(IDEM 199-3260012)
M199-3260012	SCREW (IDEM 199-326001)*****
M199-3260012	SCREW (IDEM 199-326001)
M199-327001	DECORATION RUBBER(IDEM 199-3270012)
M199-3270012	DECORATION RUBBER *****
M199-3270012-	DECORATION RUBBER (IDEM 199-327001)
M199-332001	CAP
M199-333001	NUMBER PLATE
M212 100001	BASE FRAME ASS Y
M212 200001	WINDING SPOOL ASS'Y
M22244	# 1ES SHUTTER ASS'Y
M268-110001	STOPPER DISK
M268-113001	CLOSE-UP LENS
M268-114001	BAYONET RING
M268-115001	LEAF SPRING
M268-116001	HOLDER
M268-121001	DECORATION RING
M268-122001	FINDER LENS
	HOLDER
M304211	220 ROLL FILM INSERT W/CASE
MP313-1606	SYNCHRO CONTACT (171-4522)
M315-000001	LENS ASS'Y
M315-000002	LENS ASS'Y
M315-000003	LENS ASS'Y
M321-111001	NAME RING
M321-111002	NAME RING

  


M321-111003	NAME RING
M321-121001	FILTER RING
M321-121002	FILTER RING
M321-121003	FILTER RING
M321-211001	APERTURE RING
M321-211002	APERTURE RING
M321-211003	APERTURE RING
M321-230001	APERTURE CONTROL RING
M321-230002	APERTURE CONTROL RING
M321-311001	FOCUSING RING
M321-311002	FOCUSING RING
M321-311003	FOCUSING RING
M323-411001	RANGE COUPLING RING
M329-110001	CONTACT PINS HOUSING
M329-121001	HOLDER
M329-121002	HOLDER
M337-111001	RING
M337-120001	COCKING RING
M337-120002	COCKING RING
M340-000001	HELICOID ASS'Y
M340-000002	HELICOID ASS'Y
M340-000003	HELICOID ASS'Y
M360-000001	MOUNT RING ASS'Y
M360-000002	MOUNT RING ASS'Y
M360-113001	PLATE
M360-113002	PLATE
M360-116001	MOUNT COVER
M360-116002	MOUNT COVER
M360-121001	COUPLING LEVER
M360-121002	COUPLING LEVER
M360-122001	COUPLING ARM
M391-211001	REAR LENS CAP
M392-111001	LENS HOOD (Y11119)
M392-111002	LENS HOOD (Y11219)
M392-111003	LENS HOOD (Y11319)
M395-222001	WASHER T=0.03
M395-222002	WASHER T=0.1
M395-222003	WASHER T=0.05
M395-223001	WASHER T=0.5
M395-223002	WASHER T=0.3
M395-223003	WASHER T=0.1
M395-223004	WASHER T=0.08
M395-223005	WASHER T=0.05
M395-223006	WASHER T=0.2
M395-245001	RING
M395-311001	SPRING (6223-04231)
M395-321001	SPRING
M395-511001	FIXING RING
M395-571001	RUBBER GRIP
M395-571002	RUBBER GRIP
M395-581002	SEALING STRIP
M395-581003	SEALING STRIP
M395-611001	NUMBER SEAL
M3PB2.6X4.5	SCREW
M481-R-G91	SPEED REGUL. GOVERNOR
M483 - 0000	# 0 type 483 SHUTTER ASS'Y

  



M-501-2005	MASTER CAM
M509-0037	RETAINER
M0590-11531	W3 GEAR ?
M730-2001	COKING PINION
M730-2005	DRIVING CAM
M730-2013	SPRING
M730-3028	SPEED REGULATING GOUVERNOR
M736-1019	BLADE ACTUATING RING
M773-0149	COLLAR
M781	SHUTTER ASSY
M791	SHUTTER ASSY / RB - SD
M791-0001	BASE PLATE
M791-0003	SHUTTER CASING
M791-0005	SPEED SETTING DISK
M791-0020	BLADE HOLDING PLATE
M791-0218	IDLE GEAR
M791-0666	CONTROL LEVER
M791-0803	SECTOR C
M791-0804	SECTOR D
M791-1001	COCKING RING
M791-1003	COCKING RING SPRING
M791-1039	SPRING
M791-1427	SEAT GEAR (B)
M791-1428	DRIVE LEVER
M791-1436	SPRING
M791-1492	SPRING
M791-1981	SUPPORT SECTOR B
M791-2001	SET GEAR
M791-2005	DRIVE CAM
M791-2013	DRIVE SPRING
M791-2019	SECTOR ACTUALING RING
M791-2026	SPRING
M791-2031	SHUTTER SECTOR (A)
M791-2126	SPRING
M791-2133	SECTOR (B)
M791-2140	SECTOR HOLDING PLATE
M791-2162	SHUTTER SUB SECTOR (B)
M791-2198	SPRING
M791-2206	DRIVE CAM B
M791-2213	MIDDLE GEAR
M791-3001	RG 1st GEAR
M791-3013	BASE PLATE
M791-3014	SPRING
M791-3016	BASE
M791-3662	PAWL
M791-4522	SYNCHRO CONTACT
M791-4530	CONTACT
M791-4612	COLLAR
M791-4621	COLLAR
M812-0037	RETAINER
M824	SHUTTER ASSY 70 / 2.8 M
M847-3009	RG 2ND GEAR
M847-3011	RG ESCAPE WHEEL
M847-3102	RG 3RD GEAR
M870-2005	DRIVE CAM FOR TYPE 870
M871	SHUTTER ASSY / RB-SD

 



M02010-11131	RUBBER
M02010-11141	CUSHION
M02010-11151	SEALING PAPER
M02010-1131T1	SHADING FRAME
M02010-11411	CUSHION
M02010-11711	PIN (S149-30101)
M02010-11721	SPRING (S149-40051)
M02010-11731	PIN HOUSING
M02010-11741	GUIDE
M02010-11761	COVER
M02010-11771	SEALING STRIP
M02010-12001	BOTTOM BASE PLATE ASS'Y
M02010-13001	WINDING MECHANISM ASS'Y
M02010-1311T1	M BASE PLATE
M02010-13351	RUBBER
M02010-13441	SPRING
M02010-1351T1	PLATE
M02010-1361T1	PAWL
M02010-13631	SPRING
M02010-1371T1	REVERSE GEAR
M02010-13741	SCREW
M02010-1381T1	S2 GEAR
M02010-13891	SPRING
M02010-14101	CLUTCH BASE PLATE
M02010-1431T1	MR LEVER
M02010-14331	PRING
M02010-1441T1	MR CHARGE LEVER
M02010-14431	WASHER
M02010-14441	SCREW
M02010-1451T1	S LEVER
M02010-14561	SPRING
M02010-14571	COLLAR
M02010-1461T1	REVERSE LEVER
M02010-14651	SPRING
M02010-14701	F BASE PLATE
M02010-14841	SPRING
M02010-14871	SPRING
M02010-14951	SPRING
M02010-15131	SPRING
M02010-1531T1	S4 SWITCH
M02010-15381	CLUTCH REVERSE LEVER
M02010-1541T1	SECTOR GEAR
M02010-1551T1	WINDING LEVER
M02010-15541	SPRING
M02010-1561T1	G BASE PLATE
M02010-1571T1	G1 GEAR
M02010-1581T1	G2 GEAR
M02010-15961	COLLAR
M02010-15981	SPRING
M02010-1611T1	F1 GEAR
M02010-16161	NUT
M02010-1621T1	COUPLER PLATE
M02010-16231	SPRING
M02010-16301	F3 BASE PLATE
M02010-1635T1	F IDLE GEAR
M02010-16501	WINDING BASE PLATE

 


M02010-16571	SHAFT
M02010-16591	SPRING
M02010-16691	SPRING
M02010-16701	MR BASE PLATE
M02010-16971	RUBBER
M02010-16991	SCREW
M02010-17001	SHUTTER MECHANISM ASS'Y
M02010-17111	SHUTTER BASE PLATE
M02010-17161	GUIDE SIGNAL PIN
M02010-17171	ANGLE PLATE
M02010-17251	GEAR
M02010-17301	SHUTTER CURTAIN ASS'Y
M02010-17571	GEAR
M02010-18001	S3 BASE PLATE ASS'Y
M02010-18191	SEALING INSULATION
M02010-18282	WASHER
M02010-18321	PLATE
M02010-18941	SPRING
M02010-18971	SCREW
M02010-18981	SHAFT
M02010-19141	SPRING
M02010-1921T1	TRIGGER PLATE
M02010-19261	SHAFT
M02010-19271	SPRING
M02010-19281	WASHER
M02010-19501	FIRST CURTAIN BASE PLATE
M02010-19841	SPRING
M02010-19861	BASE PLATE
M02010-19881	COLLAR
M02010-19901	MOVING COIL ASS'Y
M02010-1995T1	MC BASE PLATE
M02010-21001	SR BASE ASS'Y
M02010-21191	GUIDE
M02010-2411T1	MB BASE PLATE
M02010-24161	R. A LEATHERETTE
M02010-24171	R. A LEATHERETTE
M02010-24181	R. A LEATHERETTE
M02010-24191	R. A LEATHERETTE
M02010-24221	SCREW
M02010-24251	SPRING
M02010-24261	COVER
M02010-24411	MB BASE FRAME
M02010-2451T1	MIRROR ARM ASS'Y
M02010-25111	SPRING
M02010-25121	MB PLATE
M02010-25231	FITTING PLATE
M02010-25251	MB CONTACT HOLDER
M02010-25252	MB CONTACT HOLDER
M02010-25271	RUBBER
M02010-25281	FITTING PLATE
M02010-25341	MB PLATE
M02010-25701	TV BASE PLATE ASS'Y
M02010-25771	SPRING
M02010-26101	RIGHT SIDE BOARD ASS'Y
M02010-26181	SPRING
M02010-26241	SPRING

  



M02010-26311	BC BASE PLATE
M02010-26341	BC CONTACT PLATE
M02010-26501	ACCESSORY SHOE BASE ASS'Y
M02010-26541	ACCESSORY SHOE
M02010-26551	FRAME
M02010-26561	SIGNAL PIN
M02010-26591	COVER
M02010-26611	X-CONTACT PIN
M02010-26621	PIN
M02010-26631	X-SYNCHRO CONTACT
M02010-26711	RELEASE LEVER
M02010-26721	FITTING PLATE
M02010-26741	SPRING
M02010-26761	COLLAR
M02010-26811	X-SYNCHRO CONTACT
M02010-26841	BASE PLATE
M02010-26871	CORD
M02010-27111	FRONT COVER
M02010-27151	TV COVER
M02010-27171	TV RELEASE BUTTON
M02010-27211	TV DIAL
M02010-27231	COLLAR
M02010-27241	WASHER
M02010-27261	TV INDICATOR PLATE
M02010-27301	LEFT SIDE PANEL ASS'Y
M02010-27321	WINDOW
M02010-27331	MULTIPLE-EXPOSURE LEVER
M02010-27341	EXTENSION PLATE
M02010-27361	RUBBER
M02010-27371	SCREW
M02010-27411	SHUTTER BUTTON GUIDE
M02010-27421	SHUTTER BUTTON
M02010-2745T1	FITTING PLATE
M02010-27461	GUIDE PLATE
M02010-27501	RIGHT SIDE PANEL ASS'Y
M02010-27521	MIRROR-UP LEVER
M02010-27531	SPRING
M02010-27541	MIRROR-UP CAM
M02010-27561	BC BUTTON
M02010-27571	NUT
M02010-27581	RC COVER
M02010-28111	BTTON COVER
M02010-28131	SCREW
M02010-2821T1	BATTERY CHAMBER COVER ASS'Y
M02010-29001	NAME FRAME ASS'Y
M02010-29112	COUPLING
M02010-29131	SPACER
M02010-29141	FRAME PLATE
M02010-2921T1	COUPLING BASE PLATE
M02010-31002	MAIN F.P.C. BOARD
M02010-31111-RS	60 SECOND F.P.C.
M02010-3113T1	BATTERY CASE ASS'Y
M02010-31151	CONTACT PLATE
M02010-31161	CONTACT PLATE
M02010-31741	SHAFT
M02010-31751	SHAFT

  



M02010-3191T1	AE CONTACT F.P.C. BOARD
M02010-32141	COVER "voir 645 Super"
M02010-32151	SERIAL NO. PLATE
M02070-11511	SOCKET HOLDER
M02070-2411T1	MB BASE PLATE
M02070-24191	R.A RETHERETTE
M02070-24611	PRISM
M02070-25211	PROTECTING GLASS
M02070-26501	ACCESSORY SHOE BASE ASS'Y
M02070-27301	LEFT SIDE PANEL ASS'Y
M02070-27501	RIGHT SIDE PANEL ASS'Y
M02070-31001	MAIN F.P.C. BOARD
M02070-31002	MAIN F.P.C. BOARD
M02070-3131T1	MAIN F.P.C. BOARD
M02070-31551	PLATE
M02070-31561	COVER
M02070-31571	STUD
M02070-32151	CAP
M02070-33001	SENSOR HOUSING ASS'Y
M02070-33211	MICRO SOCKET
M02150-01012	FRONT LENS ASS'Y
M02150-01021	REAR LENS ASS'Y
M02150-0311T1	HELICOID ASS'Y
M02150-03161	FOCUSING RING
M02150-03361	APERTURE CONTROL LEVER
M02150-04101	SHUTTER SET RING ASS'Y
M02150-04811	APERTURE RING
M02150-04911	APERTURE CONTROL RING
M02150-04921	ARM
M02150-05101	MOUNT RING ASS'Y
M02150-05121	ARM
M02150-05131	DIAPHRAGM OPENING TAB
M02150-05151	FIXING RING
M02150-05311	MOUNT COVER
M02150-05411	F.P.C. BOARD (S)
M02150-05421	F.P.C. BOARD (M)
M02150-05461	PLATE
M02150-08111	NAME RING
M02250-01011	FRONT LENS ASS'Y
M02250-01021	REAR LENS ASS'Y
M02250-0311T1	HELICOID ASS'Y
M02250-03161	FOCUSING RING
M02250-08111	NAME RING
M02310-01011	FRONT LENS ASS'Y
M02310-01021	MIDDLE LENS ASS'Y
M02310-01031	INNER LENS ASS'Y
M02310-01041	REAR LENS ASS'Y
M02310-01261	WASHER (T=0.2)
M02310-01271	WASHER (T=0.1)
M02310-01281	WASHER (T=0.05)
M02310-01311	WASHER (T=0.5)
M02310-01321	WASHER (T=0.3)
M02310-01331	WASHER (T=0.2)
M02310-01341	WASHER (T=0.1)
M02310-01351	WASHER (T=0.08)
M02310-01361	WASHER (T=0.05)

 


M02310-02121	DIVING DISK
M02310-02161	FIXING DISK
M02310-02211	DIAPHRAGM
M02310-02221	CONTROL CAM
M02310-02241	SHOULDER SCREW
M02310-02251	APERTURE CONTROL ARM
M02310-02261	RETAINING RING
M02310-03111	INNER BARREL
M02310-03121	DIAPHRAGM HOLDER
M02310-03131	CAM BARREL
M02310-03141	FIXING NUT
M02310-04311	BARREL
M02310-04331	RING
M02310-04341	BUTTON
M02310-04381	SCREW
M02310-04391	STOPPER
M02310-04411	INDEX RING
M02310-04421	STOPPER
M02310-04431	RING
M02310-04441	RING
M02310-04461	LENS DISTANCE SCALE
M02310-04471	RUBBER GRIP
M02310-04491	BARREL
M02310-04541	HOOD B
M02310-04551	VELVETEEN
M02310-04561	RING
M02310-04581	PROTECTOR
M02310-04591	RUBBER GRIP
M02310-04611	PAD
M02310-0462T1	INNER TUBE
M02310-04641	MIDDLE BARREL
M02310-04671	REAR BARREL
M02310-04691	INDEX RING
M02310-04721	RING
M02310-04731	ARM A
M02310-04751	ARM B
M02310-04811	APERTURE RING
M02310-04841	LEAF SPRING
M02310-04851	SHAFT
M02310-04911	RING
M02310-04951	WASHER (T=0.5)
M02310-04961	WASHER (T=0.3)
M02310-04971	WASHER (T=0.1)
M02310-04981	WASHER (T=0.05)
M02310-04991	WASHER (T=0.08)
M02310-05111	TRIPOD RING
M02310-05131	KNOB
M02310-0531T1	PLATE
M02310-05511	MOUNT RING
M02310-05541	LEVER B
M02310-05571	RING
M02310-05611	LEVER C
M02310-05631	SPRING
M02310-08111	NAME RING
M02310-08131	EXTENSION HOOD
M02310-08141	PROTECTOR

  


M02310-09111	FRONT LENS CAP
M02310-S5101	TRIPOD RING ASS'Y
M02320-01011	FRONT LENS ASS'Y
M02320-01021	REAR LENS ASS'Y
M02320-02151	LUG PLATE
M02320-02221	STUD
M02320-02231	SS PLATE
M02320-02241	PIN
M02320-02261	FF PLATE
M02320-02271	FIXING NUT
M02320-02301	MOTOR
M02320-02401	REDUCTION GEAR
M02320-02601	AM CHARGING LEVER
M02320-0261T1	HOOK BASE
M02320-02641	STUD
M02320-02651	LEVER
M02320-02671	SPRING
M02320-02701	SWITCH
M02320-0311T1	HOLICOID ASS'Y
M02320-03161	FOCUSING RING
M02320-03211	PLATE
M02320-03311	APERTURE CONTROL LEVER-1
M02320-03351	APERTURE CONTROL LEVER-2
M02320-03361	APERTURE CONTROL LEVER-3
M02320-03411	HOOK
M02320-03431	SHOULDER SCREW
M02320-04101	SHUTTER SET RING ASS'Y
M02320-04121	NAME PLATE
M02320-04131	KNOB
M02320-04141	STOPPER PLATE
M02320-04151	LEAF SPRING
M02320-04351	MU ARM
M02320-0436T1	SET BRUCH
M02320-04431	SPRING
M02320-04441	RETAINING PLATE
M02320-0446T1	TERMINAL
M02320-04481	PIN
M02320-04581	BRACKET
M02320-04611	COCKING RING
M02320-04621	COCKING LEVER
M02320-04641	SPRING
M02320-04651	SHUTTER SPEED RING
M02320-04661	ARM
M02320-04681	BUTTON
M02320-04691	PIN
M02320-04711	FILTER RING
M02320-04731	LEAF SPRING
M02320-04811	APERTURE RING
M02320-04861	KNOB
M02320-04911	APERTURE CONTROL RING
M02320-04921	ARM
M02320-04941	FIXING RING
M02320-05101	MOUNT RING ASS'Y
M02320-05211	DIAPHRAGM OPENING TAB
M02320-05231	ARM
M02320-05311	MOUNT COVER

  



M02320-05411	F.P.C. BOARD (S)
M02320-05421	F.P.C. BOARD (M)
M02320-05431	CONNECTOR
M02320-05461	PLATE
M02320-05481	HOLDER
M02320-08111	NAME RING
M02320-08121	RUBBER GRIP
M02320-08131	CAP
M02320-09111	GRIP CONNECTOR
M02330-01011	FRONT LENS ASS'Y
M02330-01021	REAR LENS ASS'Y
M02330-02111	DIVIDING DISK
M02330-0213T1	OPENING DISK
M02330-02141	FIXING DISK
M02330-02151	FIXING DISK
M02330-0221T1	DIAPHRAGM BLADE
M02330-0231T1	CONTROL CAM
M02330-02351	SHOULDER SCREW
M02330-02371	SPRING
M02330-02381	SHOULDER SCREW
M02330-0241T1	CAM RING
M02330-02441	RETAINER
M02330-0311T1	HELICOID ASS'Y
M02330-03161	STOPPER
M02330-04111	FUCUSING RING
M02330-04121	FIXING RING
M02330-04131	STOPPER PLATE
M02330-04161	RUBBER GRIP
M02330-04211	APERTURE RING
M02330-04251	MANUAL SETTING ARM
M02330-05111	MOUNT RING
M02330-0512T1	OPERATING LEVER
M02330-0515T1	COUPLING LEVER
M02330-05211	SPRING
M02330-0531T1	HANGING RING
M02330-05351	SHOULDER SCREW
M02330-08111	HELICOID COVER
M02330-08121	HOOD
M02330-08131	VELVETEEN
M02330-08151	FILTER RING
M02330-08161	NAME RING
M02390-02111	DIAPHRAGM BARREL
M02390-02121	SECURING RING
M02390-0212T1	SECURING RING ASS'Y
M02390-0213T1	OPERATING DISK
M02390-02161	FIXING DISK
M02390-02171	RETAINER
M02390-0221T1	DIAPHRAGM BLADE
M02390-0231T1	CONTROL CAM
M02390-02371	SPRING
M02390-0241T1	APERTURE CONTROL CAM
M02390-02441	RETAINING RING
M02390-03141	LEVER
M02390-03161	LENS DISTANCE SCALE
M02390-04111	APERTURE RING
M02390-04151	ARM

 



M02390-05111	MOUNT
M02390-05121	BAYONET MOUNT
M02390-05131	MOUNT COLLAR
M02390-0521T1	OPERATING LEVER ASS'Y
M02390-0531T1	COUPLING LEVER ASS'Y
M02390-05351	SPRING
M02390-0541T1	CHANGING RING
M02390-08111	BARREL
M02390-08131	HOOD B
M02390-08141	VELVETEEN
M02390-08151	RING
M02390-08161	PROTECTOR
M02390-08181	FRONG RING
M02390-08191	PAD
M02390-08211	EXTENSION HOOD
M02390-08221	PROTECTOR
M02392-	LENS UNIT
M02394-	DIAPHRAGM BARREL UNIT
M02395-	HOLICOID UNIT
M02396-	MOUNT UNIT
M02410-01311	WASHER T=0.3
M02410-01321	WASHER t=0.1
M02410-01331	WASHER t=0.05
M02410-02111	FRAME
M02410-02121	SECURING RING
M02410-0213T1	OPERATING DISK
M02410-0221T1	DIAPHRAGM BLADE
M02410-02221	FIXING DISK
M02410-0231T1	ARM
M02410-02331	SHAFT
M02410-02411	CAM RING
M02410-02421	FIXING DISK
M02410-03001	NO. 1 HELICOID ASS'Y
M02410-03201	NO. 2 HELICOID ASS'Y
M02410-03711	LENS DISTANCE SCALE ASS'Y
M02410-03721	STOPPER
M02410-03741	VELVETEEN
M02410-03751	RUBBER GRIP
M02410-03771	PLATE
M02410-03811	WASHER T=0.5
M02410-03821	WASHER T=0.3
M02410-03831	WASHER T=0.1
M02410-03841	WASHER T=0.05
M02410-03911	DISK
M02410-03921	FIXING RING
M02410-04111	APERTURE RING
M02410-05111	MOUNT
M02410-05121	BAYONET
M02410-0531T1	COUPLING RING
M02410-05331	LEVER
M02410-05411	WASHER T=0.8
M02410-05421	WASHER T=0.6
M02410-05431	WASHER T=0.5
M02410-05441	WASHER T=0.3
M02410-05451	WASHER T=0.1
M02410-05461	WASHER T= 0.05

 



M02410-05471	WASHER T= 0.08
M02410-05521	SPRING
M02410-08111	BARREL
M02410-08121	VELVETEEN
M02410-08131	SHAFT
M02410-08141	COLLAR 4.00
M02410-08151	COLLAR 4.01
M02410-08161	COLLAR 3.99
M02410-08171	COLLAR 3.98
M02410-08191	FRONT RING
M02410-08211	FILTER RING
M02412-	LENS UNIT
M02414-	APERTURE UNIT
M02416-	MOUNT UNIT
M02510-17511	LEVER NO. 1
M02530-11111	BASE PLATE
M02530-11201	LOCK LEVER
M02530-11321	KNOB R
M02530-12102	FINDER COVER ASSY
M02530-12151	CV DIAL
M02530-12161	CV BUTTON
M02530-12171	SPRING
M02530-12211	AS DIAL
M02530-12331	KNOB
M02530-13102	MAIN F.P.C BOARD
M02530-11321	KNOB R
M02530-14112	HOLDER
M02530-25371	PLATE
M02530-25381	SPRING
M02530-25391	PIN
M02530-25411	HANDLE
M02530-2541T1	KNOB ASS'Y
M02530-25421	LEVER
M02530-2542T1	GEAR (25030-2543T1)
M02530-2543T1	GEAR
M02550-11101	MAIN BASE FRAME
M02550-11111	BASE FRAME
M02550-11121	PACKING
M02550-11511	PRISM HOLDER
M02550-11801	SIGNAL PINS HOUSING ASS'Y
M02550-11901	SIGNAL PIN HOUSING ASS'Y
M02550-12101	MIRROR HOLDER ASS'Y
M02550-12111	MIRROR HOLDER ASS'Y
M02550-12121	SPRING
M02550-12141	SEALING STRIP
M02550-12151	MIRROR
M02550-12161	SPRING
M02550612771	DIOPER ADJUSTING RING
M02550-13011	RELAY LENS ASS'Y
M02550-13101	RELAY LENS ASS'Y
M02550-13501	EYEPEN LENS ASS'Y
M02550-1381T1	SPD PC BOARD
M02550-14101	PRINTED CIRCUIT BOARD
M02550-1416T1	SIGNAL PINS HOUSING
M02550-1491T1	LED PC BOARD
M02550-15111	TOP COVER

  


M02550-15121	PACKING
M02550-16111	CONDENSER
M02550-16211	INDICATOR
M02550-16221	HOLDER
M02550-16261	SHIELD COVER
M02550-16311	RUBBER EYE-CUP
05110-02341	MOTOR
M02590-11181	KNOB
M02590-11261	W5 GEAR
M02590-1134T1	LOCK PLATE
M02590-1141T1	BASE PLATE
M02590-1145T1	W1 GEAR
M02590-11511	W2 GEAR
M02590-11531	W3 GEAR
M02590-11551	W4 GEAR
M02590-1161T1	MOTOR*****
M02590-1161T1	MOTOR
M02590-11621	BELT
M02590-1163T1	SWITCH
M02590-11711	TOP COVER
M02590-1173T1	RELEASE BOTTOM ASSY
M02590-1191T1	CONTACT
M02590-1211T1	PRINTED CIRCUIT BOARD*****
M02590-1211T1-	PRINTED CIRCUIT BOARD
M02590-12201	PIN HOUSING
M02590-12311	MAIN BASE FRAME
M02590-12331	CONTACT voir ref 02590-11912T1
M02590-12351	HOOK
M02590-12401	BATTERY CHAMBER COVER ASSY
M02590-12461	DECAL
M02590-12511	SIDE PANEL
M02590-12611	LOCK BUTTON
M02590-12621	LEAF SPRING
M02590-12631	BOTTOW COVER
M02610-41301	UPPER BASE PLATE ASS'Y
M02610-41631	BRUSH DISK
M02610-42001	RAIL FRAME ASSY*****
M02610-42001	RAIL FRAME ASSY
M02610-42401	CONTACT PIN ASS'Y*****
M02610-42481	FITTING PLATE
M02610-42511	FILM ROLLER
M02610-42521	COLLAR
M02610-42531	LEAF SPRING
M02610-42621	LEAF SPRING
M02610-42701	SHIELD SPRING ASSY
M02610-42741	PIN
M02610-42751	SEALING STRIP
M02610-42761	SEALING STRIP
M02610-42811	RH FRAME*****
M02610-42811-	RH FRAME
M02610-42821	SCREW*****
M02610-42821-	SCREW
M026010-43001	WINDING BASE PLATE
M02610-43102	RH BASE PLATE
M02610-4321T1C	COUNTER DIVIDING DEVICE ASS'Y
M02610-43441	SPRING

  



M02610-43561	SPRING
M02610-43561C	SPRING
M02610-43602	COUNTER DIVIDING DEVICE ASS'Y*****
M02610-43602	COUNTER DIVIDING DEVICE ASSY
M02610-43701	F SIGNAL LEVER
M02610-43812	COUNTER
M02610-44112	CUSHION*****
M02610-44112	CUSHION
M02610-44122	FRICTION*****
M02610-44122	C1 FRICTION
M02610-44122C	C1 FRICTION WASHER
M02610-44123	C1 FRICTION WASHER *****
M02610-44132	SHAFT*****
M02610-44132	SHAFT
M02610-44141	C2 GEAR
M02610-44152	WASHER*****
M02610-44152	C1 FRICTION WASHER
M02610-44162	WASHER*****
M02610-44162-03	WASHER
M02610-44162-05.	WASHER
M02610-44172	WASHER*****
M02610-44172-	WASHER
M02610-44301	F5 PLATE*****
M02610-44301-	F5 PLATE
M02610-44611	F6 PLATE
M02610-44621	F6 SHAFT
M02610-44741	FRATCHET GEAR*****
M02610-44741	F RATCHET GEAR
M02610-44811	F5 GEAR*****
M02610-44811-	F5 GEAR
M02610-44821	RING*****
M02610-44821-	RING
M02610-45001	BACK COVER ASSY
M02610-45181	SEALING STRIP
M02610-46111	UPPER COVER
M02610-46211	DIAL
M02610-46301	LEFT SIDE PANEL ASSY*****
M02610-46301	LEFT SIDE PANEL ASSY
M02610-46341	SCREW
M02610-46351	RUBBER
M02610-46411	FILM ADVANCE KNOB
M02610-46441	SPRING
M02610-46501	RIGHT SIDE PANEL ASSY
M02610-46631	COVER
M02680-11321	KNOB A
M02680-11431	W5 GEAR
M02680-11511	KNOB
M02680-11521	COLLAR
M02680-11611	SHAFT A
M02680-12111	HOUSING
M02680-12121	BUSH
M02680-12131	SHAFT A
M02680-12141	SHAFT B
M02680-12181E	W1 GEAR ancien mod.
M02680-12182	W1GEAR
M02680-1221T1	W2 GEAR

  


M02680-1224T1	W3 GEAR
M02680-1227T1	W4 GEAR
M02680-12312	W7 GEAR
M02680-12322	DISK
M02680-12341	SHAFT B
M02680-12411	PLATE
M02680-12711	HUB
M02680-12751	WASHER
M02680-12761	WASHER
M02680-12811	PINION SHAFT*****
M02680-12812	PINION SHAFT
M02680-13101	PRINTED CIRCUIT BOARD
M02680-13201	SWITCH CIRCUIT BOARD A*****
M02680-13201	SWITCH CIRCUIT BOARD A
M02680-13301	CONNECTOR CIRCUIT PLATE
M02680-13501	DC JACK BASE PLATE
M02680-14111	MAIN BASE FRAME
M02680-14211	RUBBER GRIP F
M02680-14221	RUBBER GRIP R
M02680-15001	TOP COVER ASSY
M02680-15141	KNOB
M02680-15151	RELEASE BUTTON
M02680-15161	SPRING
M02680-15191	SPACER
M02680-1521T1	DISK
M02680-15281	WASHER
M02680-16001	BATTERY CASE ASSY
M02680-16121	CONTACT A
M02680-16131	CONTACT B
M02680-16141	CONTACT C
M02680-16151	CONTACT D
M02680-16161	CONTACT E
M02680-16171	CONTACT F
M02680-16211	SHAFT
M02680-16221	STOPPER DISK
M02680-19161	COVER
M02680-19201	BASE PLATE
M02680-19341	CONTACT COVER
M02680-19351	CONTACT
M02680-19201	BASE PLATE
M02680-19461	RUBBER A
M02680-19471	RUBBER B
M02680-19521	LOCK BUTTON
M02680-19531	SIDE PANEL
M02680-19581	DC JACK COVER
M02680-1961T1	ARM ASSY
M02826-11101	EYE CUP ASSY
M02940-1111T1	BASE PLATE ASSY*****
M02940-1111T1-	BASE PLATE ASSY
M02940-11311	LEFT PANEL
M02940-11321	SHAFT
M02940-11341	SHAFT
M02940-1142T1	FRICITION WHEEL SHAFT
M02940-11441	SCREW
M02940-11511	RIGHT PANEL
M02940-11801	PLATE ASSY

 


M02940-11861	SPRING
M02940-11871	SPRING
M02940-12231	LEAF SPRING*****
M02940-12231-	LEAF SPRING
M02940-12231B	LEAF SPRING
M02940-12321	SHOULDER SCREW
M02940-18861	SPRING
M02940-18871	SPRING
M04010-1151T1	FOCUSING SREEN ASS'Y
M04010-1391T1	CLUTCH STOPPER ASS'Y
M04010-1531T1	C1 GEAR ASS'Y (5200-15011)
M04010-1534T1	LEVER ASS'Y
M04010-1541T1	COUNTER DIVIDING DEVICE ASSY
M04010-16711	BATTERY CASE
M04010-16731	CONTACT PLATE (+)
M04010-16741	CONTACT PLATE (-)
M04010-26111	BASE FRAME
M04010-27201	UPPER COVER ASS'Y
M04010-27111	UPPER COVER
M05010-12102C	BASE PLATE
M05010-1231T1	G2 GEAR ASS'Y
M05010-1241T1	G4 GEAR ASS'Y
M05010-1251T1	START LEVER ASS' Y*****
M05010-1251T2C	START LEVER ASS' Y
M05010-1261T1B	RELEASE LEVER ASS'Y
M05010-12661	SPRING
M05010-12662B	SPRING
M05010-12761	SPRING
M05010-12761C	SPRING
M05010-12791	SPRING COVER
M05010-1281T1	CAM STOPPER ASS'Y
M05010-12851	SPRING
M05010-12852D	SPRING
M05010-12941	ROLLER
M05010-12951	SPRING
M05010-1311T1	C1 GEAR ASS'Y*****
M05010-1311T1C	C1 GEAR ASS'Y
M05010-13171	C2 GEAR
M05010-13181	C4 GEAR
M05010-13191	C3 GEAR
M05010-1321T1	C5 GEAR ASS'Y
M05010-1321T2B	C5 GEAR ASS'Y
M05010-13241	ROLLER
M05010-13351	MOTOR ASS'Y
M05010-13402C	PLATE
M05010-13402D	PLATE
M05010-14311	MIRROR
M05010-14571	SPRING
M05010-16101	AF MOTOR UNIT
M05010-16441	PHOTO SENSOR
M05010-17311	SPRING
M05010-17451	SRING
M05010-17611	COLLAR
M05010-19112C	GRIP
M05010-21141	MODE BOTTOM
M05010-21241	DC JACK COVER

  


M05010-21421	SPRING
M05010-21431	CV BOTTOM
M05010-21441	CV DIAL
M05010-21471	AV DIAL
M05010-21491	COVER
M05010-2149B	COVER
M05010-21971	KNOB
M05010-22131	BUTTON
M05010-22141	LCD WINDOW
M05010-22151	AEL SWITCH
M05010-22152	AEL SWITCH ?????
M05010-22211	RELEASE MODE RING
M05010-22241	RELEASE BUTTON
M05010-22261	SPRING
M05010-24121	CHANGE LEVER
M05010-24171	WINDOW
M05010-24181	PV BUTTON
M05010-24211	CLICK SPRING
M05010-27111B	BASE PLATE
M05010-2781T1	PRISM N°2
M05010-31281	SPRING
M05010-31291	BUTTON
M05010-31381	MODE DIAL ASS'Y
M05010-31411	RUBBER
M05010-32341	PIN
M05010-38111	C2 START LEVER
M05010-38151	SPRING
M05010-38151C	SPRING
M05010-38181	SPRING
M05010-38211	R HOOK*****
M05010-38211B	R HOOK
M05010-38271	CUSHION
M05010-38281	CUSHION
M05010-38291	CUSHION
M05010-38461	SPRING
M05010-3861T1	M SET LEVER ASS Y
M05010-38691	SPRING
M05010-38711	STRAP EYELET
M05010-38761	SPRING
M05010-38811	RUBBER ISOLATOR
M05010-39191	SPRING
M05010-39211	SCREW
M05010-39221	SPACE
M05010-39241	BACK PLATE
M05010-39261	COVER
M05010-39271	PIN
M05010-39291	SPRING
M05010-39311	SPRING
M05010-3936T2C	LEVER ASS'Y
M05010-39381	SHAFT
M05010-39441	SPRING
M05010-39591	COLLAR
M05010-3961T1	SIGNAL PINS HOUSING
M05010-39731	H SWITCH
M05010-40	POWER SUPPLY PC BOARD
M05010-40101	BASE PLATE

 



M05010-41641	CONNECTOR WITH NUT (05010-41691)
M05010-41841	KNOB
M05010-41861	COVER
M05010-41862B	COVER
M05010-41881	SYNCRO SOCKET COVER
M05010-41941	COVER
M05010-42211	GRIP RUBBER (A)
M05010-42221	GRIP RUBBER (B)
M05010-42311	RIGHT RUBBER
M05010-42351	EYE-CUP
M05010-51003	MAIN F,P,C BOARD UNIT
M05010-93251	F,P,C BOARD
M05012	WINDING MECHANISM UNIT
M06012	WINDING MECHANISM UNIT
M05014	MIRROR HOLDER UNIT
M05015	SHUTTER BASE PLATE UNIT
M05015-2B	SHUTTER BASE PLATE UNIT
M05017	RIGHT BASE PLATE UNIT
M05019	GRIP UNIT
M05022	GRIP COVER UNIT
M05023	RIGHT COVER UNIT
M05027	PRISM UNIT
M05031	LCD F.P.C. BOARD
M05035	TTL SENSOR UNIT
M05036	MAIN F,P,C BOARD UNIT
M05037	BATTERY CASE UNIT
M05061	FINDER COVER UNIT
M05110-0212T1	DIAPHRAGM BLADE
M05110-0221T1	BASE PLATE ASS'Y
M05110-0231T1	FPC BOARD ASS Y
M05110-0232T1	CONTACT PLATE
M05110-02341	MOTOR
M05110-02391	COLLAR
M05110-02411	PLATE
M05110-02431	COVER
M05110-04111	NAME RING
M05110-0421T1	LENS DISTANCE SCALE ASS Y
M05110-04221	FILTER RING
M05110-04221	WASHER
M05110-05111	MOUNT
M05110-05121	COUPLER GEAR
M05110-05151	MOUNT RING
M05110-0517T1	GEAR ASS Y
M05110-0521T1	COVER ASS Y
M05114	APERTURE UNIT
M05115	HELICOID UNIT
M05230-0231T1	FPC BOARD ASS Y
M05230-0521T1	COVER ASS Y
M05235	HELICOID UNIT
M05340--04111	FILTER RING
M05340-04131	NAME RING
M05340-04151	HOOD
M05340-04161	HOOD RING
M05340--04171	PROTECTOR
M05340-04181	FRONT RING
M05340-12191	CUSHION

 



M05340-21601	ONE WAY UNIT
M05340--21801	MOTOR UNIT
M05420-02113T1	DIAPHRAGM BLADE (8)
M05420-0262T1	SWITCH ASS'Y
M05420-04611	LEVER
M05420-04721	No.3GEAR
M05420-0474T1	No.2GEAR ASS'Y
M05420-04781	HOLDER
M05420-05121	COUPLER GEAR
M05420-05251	BUMPER
M05470-0212T1	DIAPHRAGM BLADE
M05470-02141	DISK
M05470-02151	FIXING RING
M05470-0234T1	MOTOR ASS'Y
M05470-3141	KEY A
M05470-3151	KEY B
M05470-3191	COVER
M05470-0331T1	MICRO SWITCH A
M05470-0332T1	MICRO SWITCH B
M05473-1A	HELICOID BARREL ASSY
M05474	APERTURE UNIT
M05608-46511	RACK PLATE R
M05608-4814T1	C GEAR
M05608-4823T1	RACK PLATE
M05613-22211	GUIDE PLATE R
M05613-22221	GUIDE PLATE L
M05614-22121	RACK PLATE L
M05614-1331T3	WINDING GEAR ASS'Y
M05620-11211	LOCK LEVER
M05620-11221	SHOULDER SCREW
M05620-11231	SHOULDER SCREW
M05620-11311	LEVER
M05620-1133T1	SWITCH
M05620-11501	SHIELD SPRING ASS Y
M05620-11551	CUSHION
M05620-11611	LOCK LEVER
M05620-11611B	LOCK LEVER
M05620-11621	SHOULDER SCREW
M05620-11711	LOCK BUTTOM
M05620-11711B	LOCK BUTTOM
M05620-11721	SPRING
M05620-11811	FRAME
M05620-11812D	FRAME
M05620-11721	SPRING
M05620-11911	GUIDE PLATE
M05620-12101	UNDER PLATE ASS Y
M05620-12151	HOLDER
M05620-12161	BATTERY CHAMBER COVER
M05620-12171	CUSHION
M05620-12211	CATCH PLATE
M05620-12221	RUBBER
M05620-12231	SPACER
M05620-12241	SPRING PLATE
M05620-12311	LEAF SPRING (1)
M05620-12311C	LEAF SPRING (1)
M05620-12321	LEAF SPRING (2)

 


M05620-12411	PIN (LH)
M05620-12421	PIN (RH)
M05620-13211	LOCK LEVER (A)
M05620-13221	LOCK LEVER (B)
M05620-13231	LEVER
M05620-13241	LEVER
M05620-13381	SHOULDER SCREW
M05620-13411	SPRING
M05620-13511	LEVER (A)
M05620-13521	LEVER (B)
M05620-14101	SWITCH
M05620-14411	BRUSH
M05620-14431	COVER
M05620-15111	C3 GEAR
M05620-15121	C4 GEAR
M05620-26311	KNOB
M05620-26511	ISO BUTTOM
M05620-26521	BUTTON
M05620-33211	CONTACT PLATE
M05620-33221	PLATE
M05620-33241	CONTACT PIN
M05620-3335T1	LED PLATE
M05620-41111	FEFT HINGE HOLDER
M05620-43111	KNOB
M05620-44111	COVER
M 05622	COUNTER UNIT
M 05623	DATE UNIT
M 05625	BACK COVER UNIT
M 05631	F.P.C. BOARD
M05640-11101	BASE PLATE ASS Y
M05640-21101	FEFT PANEL
M05640-21311	FILM SPOOL GEAR
M05640-21321	FILM TAKE UP SPOOL
M05640-21331	NUT
M05640-21401	SPOOL HOLDER ASS'Y
M05640-21631	M GEAR
M05640-21901	CONTACT HOUSING
M05640-51211	MICRO SWITCH
M05640-52101	PRESSURE PLATE
M05640-52451	SHAFT
M05640-52481	SHAFT
M05640-52501	ROLLER
M05640-52551	SHAFT
M05640-54211	C1 GEAR
M05640-54221	C2 GEAR
M05640-54311	GEAR (A)
M05640-55111	RIGHT PANEL
M05640-5521TI	SPOOL CLIP
M05640-56121	PLATE
M05640-57111	LEAF SPRING
M05640-57121	LEAF SPRING
M05650-21111B	BASE FRAME
M05650-21211	LEVER
M05650-21251	PLATE
M05650-21261	PLATE
M05650-21411B	SPRING

  


M05650-31111	COVER
M05650-31551	ISO SCALE
M05912-11111	REAR BODY CAP voir MA314510
M05928-11111	DARK SLIDE
M06010-31291	BUTTON
M06010-31411	RUBBER
M06010-32341	PIN
M06012	WINDING MECHANISM UNIT
M06015	SHUTTER BASE PLATE UNIT
M1180-81441	LUG PLATE
M21010-11941	SHOULDER SCREW
M21010-11121	SEALING STRIP
M21010-11151	RA PAPER A
M21010-11161	RA PAPER B
M21010-11171	RA PAPER C
M21010-11311	LIGHT BAFFLE FRAME
M21010-11331	LIGHT BAFFLE U
M21010-11341	LIGHT BAFFLE L
M21010-11381	SEALING STRIP
M21010-11391	SEALING STRIP
M21010-11451	SEALING STRIP
M21010-11461	SEALING STRIP
M21010-11471	SEALING STRIP
M21010-11512	LIGHT BAFFLE FRAME M
M21010-11521	SCREW
M21010-11531	RA PAPER
M21010-11541	RA PAPER
M21010-11551	RA PAPER
M21010-11561	RA PAPER R
M21010-11571	RA PAPER D
M21010-11581	RA PAPER E
M21010-11621	RA PAPER
M21010-11632	LIGHT BAFFLE
M21010-13101	COCKING LEVER SHAFT
M21010-1312T1	COCKING LEVER SHAFT
M21010-13331	SPRING
M21010-13342	RING
M21010-13371	STUD
M21010-13392	STUD
M21010-13431	STUD
M21010-1362T1	BEVEL GEAR
M21010-13711	BEVEL GEAR
M21010-13741	PEDESTAL
M21010-13751	BASE PLATE
M21010-13811	SPRING
M21010-13821	SHOULDER SCREW
M21010-14471	SPRING
M21010-14481	SPRING
M21010-14661	LEAF SPRING
M21010-15011	BELLOWS
M21010-15261	PEDESTAL R
M21010-15271	PEDESTAL L
M21010-15311	GUIDE PLATE R
M21010-15321	GUIDE PLATE L
M21010-15411	RACK PLATE R
M21010-15421	RACK PLATE L

  


M21010-15442	RACK STOPPER
M21010-15471	DISTANCE SCALE PLATE
M21010-15491	PAPER WASHER
M21010-16111	BOTTOM COVER
M21010-16171	SERIAL NUMBER PLATE
M21010-16211	SIDE PLATE L
M21010-16221	SIDE PLATE R
M21010-16311	RIGHT SIDE PANEL
M21010-16321	DECORATIVE PLATE U
M21010-16331	DECORATIVE PLATE L
M21010-16391	SHEET B
M21010-16411	LEFT SIDE PANEL
M21010-16421	DECORATIVE PLATE U
M21010-16431	DECORATIVE PLATE L
M21010-19111	LEATHERETTE
M21010-19131	LEATHERETTE
M21010-19141	LEATHERETTE
M21010-19161	LEATHERETTE
M21010-19181	LEATHERETTE
M21010-19191	LEATHERETTE
M21010-19221	LEATHERETTE
M21010-19231	LEATHERETTE
M21010-21112	FRONT PANEL
M21010-21122	STOPPER SCREW
M21010-2115T1	STOPPER PLATE ASS'Y
M21010-21211	BAYONET RING (S145-10221)
M21010-21441	PEDESTAL (5000-21441)
M21010-21511	FRONT COVER
M21010-21531	RED BEAD
M21010-21551	COVER PLATE
M21010-21561	NAME PLATE
M21010-24022	LIGHT BAFFLE FRAME
M21010-2402T1	LIGHT BAFFLE FRAME
M21010-24261	CUSHION
M21010-24291	CUSHION
M21010-24371	RA PAPER
M21010-24372	RA PAPER
M21010-24421	CUSHION
M21010-2451T1	MIRROR RAISING LEVER
M21010-24571	SPRING
M21010-24641	COLLAR
M21010-24651	SPRING
M21010-24661	SPRING
M21010-24711	ANGLE PIN
M21010-24731	ANGLE PIN
M21010-24741	RA PAPER
M21010-24791	SPRING
M21010-24851	STUD
M21010-2511T1	SIGNAL CAM
M21010-26311	FH LOCK PIN
M21010-27272	COLLAR
M21030-14691	COLLAR
M21030-15311	GUIDE PLATE R
M21030-15321	GUIDE PLATE L
M21030-15471	DISTANCE SCALE PLATE
M21030-16111	BOTTOM COVER

 



M21030-16141	PLATE
M21030-16211	SIDE PLATE L
M21030-16221	SIDE PLATE R
M21030-16311	RIGHT SIDE PANEL
M21030-16411	LEFT SIDE PANEL
M21030-16461	COLLAR
M21030-21512	FRONT COVER
M21030-21512	FRONT COVER
M21110-01011	FRONT LENS ASS'Y
M21110-01021	REAR LENS ASS'Y
M21110-01181	FITTING RING
M21110-01191	RING
M21110-01211	SHAFT
M21110-01221	ROLLER (5.00)
M21110-01231	ROLLER (5.01)
M21110-01241	ROLLER (4.99)
M21110-01251	ROLLER (4.98)
M21110-01261	ROLLER (5.00)
M21110-01271	ROLLER (5.01)
M21110-01281	ROLLER (4.99)
M21110-01291	ROLLER (4.98)
M21110-01341	SHUTTER ASS'Y W/791
M21110-04211	FILTER RING
M21110-04231	FRONT RING
M21110-04241	LENS DISTANCE SCALE
M21110-04261	RUBBER GRIP
M21110-04271	SHAFT
M21110-04291	RING
M21110-04311	SHUTTER COVER
M21110-05211	BASE BARREL
M21120-02211	FIXING RING
M21120-02291	STOPPER PIN
M21120-02811	CAM GUIDE
M21120-0283T1	CAM LEVER
M21120-0286T1	APERTURE INTERLINK PLATE
M21120-02881	APERTURE CONTROL RING
M21120-02891	FIXING RING
M21120-02911	PLATE
M21120-02951	SCREW
M21120-03111	APERTURE RING
M21120-03121	INDEX RING
M21120-03141	STOPPER PIN
M21120-03151	STOPPER PIN
M21120-03161	SPRING
M21120-04111	APERTURE RING
M21120-04121	APERTURE INTERLINK ARM
M21120-04131	STOPPER PLATE
M21120-04211	FILTER RING
M21120-04241	LENS DISTANCE SCALE
M21120-04311	SHUTTER COVER
M21120-04391	LEAF SPRING
M21120-05211	BASE BARREL
M21120-08111	RING
M21120-08121	O-RING
M212-100001	PANORAMIC FRAME ASS'Y
M212-110001	BASE FRAME ASS'Y

 



M212-113001	PLATE
M212-114001	SCREW
M212-200001	WINDING SPOOL ASS'Y
M21220-01001	LENS ASS'Y
M21220-01201	CAM BARREL ASS'Y
M21220-01411	RING
M21220-0286T1	APERTURE INTERLINK PLATE
M21220-03111	APERTURE RING
M21220-04211	FILTER RING
M21220-04231	FRONT RING
M21220-04241	LENS DISTANCE SCALE
M21220-04281	RING
M21220-04311	SHUTTER COVER
M21220-05211	BASE BARREL
M212-210001	SPOOL ASS'Y
M212-211001	CORE
M212-220001	WINDING SPOOL ASS'Y
M212-224001	SPRING
M212-225001	SHAFT
M212-231001	SHAFT
M212-232001	SCREW
M212-233001	SPOOL U
M212-234001	SPRING
M212-240001	PLATE U ASS'Y
M212-243001	COLLAR
M212-251001	SHAFT
M212-252001	ROLLER
M212-253001	COLLAR
M212-254001	COVER
M212-256001	LEAF SPRING
M212-257001	COLLAR
M212-258001	SCREW
M212-300001	MAGAZINE HOLDER ASS'Y
M21230-01191	RING
M21230-04211	FILTER RING
M21230-04241	LENS DISTANCE SCALE
M21230-04311	SHUTTER COVER
M21230-05211	BASE BARREL
M21230-0522T1	SET CHARGE RING
M212-310001	BASE PLATE
M212-313001	HOLDER GUIDE
M212-314001	SPRING
M212-315001	GUIDE FRAME
M212-316001	CAP
M212-321001	BOTTOM PLATE
M212-322001	REWIND COUPLER
M212-323001	COUPLER RING
M212-325001	SPRING
M212-326001	SHAFT
M212-400001	REWINDING KNOWB ASS'Y
M212-410001	REWINDING KEY ASS'Y
M212-411001	PLATE
M212-420001	REWIND KNOB ASS'Y
M212-428001	TRIPOD SCREW
M212-429001	WASHER
M212-510001	645 FRAME ASS'Y

 



M212-610001	645 W FRAME ASS'Y
M21270-04211	FILTER RING
M21270-04241	LENS DISTANCE SCALE
M21270-04311	SHUTTER COVER
M21270-05211	BASE BARREL
M21310-01011	FRONT LENS ASS'Y
M21310-01021	REAR LENS ASS'Y
M21310-01231	LIGHT BAFFLE TUBE
M21310-02211	FIXING RING
M21310-0286T1	APERTURE INTERLINK PLATE
M21310-03111	APERTURE RING
M21310-04211	FILTER RING
M21310-04241	LENS DISTANCE SCALE
M21310-04311	SHUTTER COVER
M21310-05411	RING
M21310-05451	COUPLING BARREL
M21320-04211	FILTER RING
M21320-04241	LENS DISTANCE SCALE
M21320-05471	FIXING RING
M21330-03111	APERTURE RING
M21330-04211	FILTER RING
M21330-04241	LENS DISTANCE SCALE
M21330-05211	BASE BARREL
M21330-05411	BARREL
M21330-05451	COUPLING BARREL
M21340-0286T1	APERTURE INTERLINK PLATE
M21340-03111	APERTURE RING
M21340-04211	FILTER RING
M21340-04241	LENS DISTANCE SCALE
M21340-05211	BASE BARREL
M21340-05411	RING
M21340-05451	COUPLING BARREL
M21340-05671	COVER PLATE
M21350-02121	FIXING RING
M21350-04211	FILTER RING
M21350-04311	SHUTTER COVER
M21350-05211	BASE BARREL
M21360-01011	FRONT LENS ASS'Y
M21360-01021	REAR LENS ASS'Y
M21360-04211	FILTER RING
M21360-04231	FRONT RING
M21360-04241	LENS DISTANCE SCALE
M21360-05211	BASE BARREL
M21360-05411	RING
M21360-05451	COUPLING BARREL
M21370-04211	FILTER RING
M21370-04241	LENS DISTANCE SCALE
M21370-05211	BASE BARREL
M21410-0286T1	APERTURE INTERLINK PLATE
M21410-03711	APERTURE RING
M21410-04211	FILTER RING
M21410-04241	LENS DISTANCE SCALE
M21410-04301	SHUTTER COVER ASS'Y
M21410-05101	MOUNT RING ASS'Y
M21410-05571	COVER PLATE
M21410-05661	FIXING NUT

  



M21420-00011	#1, 2 LENS
M21420-00031	#3 LENS
M21420-00041	#4 LENS
M21420-00051	#5, 6 LENS
M21420-01101	BARREL ASS'Y
M21420-01131	FIXING RING
M21420-01161	FIXING RING NO. 2
M21420-01301	HELICOID ASS'Y
M21420-01351	FRAME
M21420-01361	FIXING RING NO. 3
M21420-01371	FIXING RING
M21420-01441	WASHER
M21420-01451	WASHER
M21420-01461	WASHER
M21420-01471	WASHER
M21420-01481	WASHER
M21420-0212T2	RING
M21420-02141	FIXING RING
M21420-02151	INTERLINK PLATE
M21420-02171	NO. 5 GEAR
M21420-02181	FIXING RING
M21420-02211	FIXING RING
M21420-0286T1	APERTURE INTERLINK PLATE
M21420-03111	APERTURE RING
M21420-0312T1	INDEX RING
M21420-03181	STOPPER PIN
M21420-03191	LOCATION PIN
M21420-03211	NO. 2 GEAR
M21420-03241	NO. 3 GEAR
M21420-03251	NO. 4 GEAR
M21420-03261	NUT
M21420-0327T1	SHAFT
M21420-04111	SHUTTER SPEED RING
M21420-04211	BASE BARREL
M21420-04221	FIXING NUT
M21420-04231	RING
M21420-04251	LENS DISTANCE SCALE RING
M21420-04261	KNOB
M21420-04311	SHUTTER COVER
M21420-04511	INTERLINK PLATE
M21420-04531	RING
M21420-04551	NO. 1 GEAR
M21420-04561	FIXING RING
M21420-04571	FILTER RING
M21420-04591	FRONT RING
M21420-05111	MOUNT RING ASS'Y
M21420-05211	BASE BARREL
M21420-05231	COCKING PIN
M21420-05251	GUIDE
M21420-05361	FIXING RING
M21420-05411	WASHER
M21420-05421	WASHER
M21420-05431	WASHER
M21420-05441	WASHER
M21420-05451	WASHER
M21420-05461	WASHER

  


M21420-05471	MASK
M21510-12111	REVOLVING BACK PANEL
M21510-12121	SEALING STRIP
M21510-12441	SHOULDER SCREW
M21510-12442	SHOULDER SCREW
M21510-12471	MARK PLATE U
M21510-12481	MARK PLATE L
M21510-12581	SEALING STRIP (ARS-1258)
M21510-15281	SEALING STRIP (ARS-1258)
M21521-26341	CUSHON
M21530-27841	LEATHERTTE
M21530-27861	CUSHON
M21610-05211	BASE BARREL
M21610-61101	FILM HOLDER FRAME ASS'Y
M21610-61211	LIGHT BAFFLE PLATE A
M21610-61221	LIGHT BAFFLE PLATE B
M21610-61411	ROLLER
M21610-61421	COLLAR
M21610-61431	LEAF SPRING A
M21610-61461	LEAF SPRING B
M21610-62102	BACK COVER ASS'Y
M21610-62121	COVER
M21610-6216T1	LATCH
M21610-62261	E-RING (E-17)
M21610-62271	SHAFT
M21610-62281	LEATHERTTE R
M21610-62291	LEATHERTTE L
M21610-62321	PLATE
M21610-62341	COVER
M21610-62371	CUSHON
M21610-62411	HINGE HOLDER U
M21610-62421	HINGE HOLDER L
M21610-63101	MAIN FRAME
M21610-63151	PRESSURE PLATE (120)
M21610-63152	PRESSURE PLATE (120)
M21610-6324T1	SP-SPRING
M21610-63311	BOTTOM PLATE
M21610-6341T1	ROLLER
M21610-6341T2	ROLLER
M21610-6345T2	COLLAR
M21610-63461	SHAFT
M21610-6347T2	ROLLER
M21610-63481	SHAFT
M21610-64101	WINDING BASE PLATE
M21610-64121	SHAFT
M21610-64201	WINDING BASE PLATE
M21610-64301	WINDING ATOP GEAR
M21610-64381	WINDING GEAR 3
M21610-64421	SPRING WASHER
M21610-64441	NUT
M21610-64501	RELEASE LEVER
M21610-64531	SPRING
M21610-64591	SPRING
M21610-6472T1	SECOND GEAR
M21610-6476T1	THIRD GEAR
M21610-64791	SCREW

  



M21610-64831	BASE DISK
M21610-6484T1	DEVICE (120)
M21610-6485T1	AUXILAIARY DIVIDING DISK (120)
M21610-64911	FILM COUNTER GEAR (120)
M21610-64961	SPRING
M21610-65101	RELEASE PLATE
M21610-65131	SPRING
M21610-65251	SIGNAL LEVER
M21610-65271	SPRING
M21610-6545T1	LEVER
M21610-65461	SHOULDER SCREW
M21610-65661	SIGNAL HOLDER
M21610-65701	CHARGING LEVER
M21610-65781	SPRING
M21610-65811	LEVER
M21610-6621T1	TOP COVER
M21610-66221	PLATE (120)
M21610-66241	COVER PLATE
M21610-66261	LEATHERTTE
M21610-66271	COUNTER WINDOW)
M21610-66281	LEATHERTTE
M21610-66321	BOTTOM COVER
M21610-66341	COVER PLATE
M21610-66351	LEATHERTTE
M21610-66361	LEATHERTTE
M21610-66371	SIRIAL NO. PLATE (S147-50021)
M21610-66501	FILME SPOOL HOLDER
M21610-66551	LEAF SPRING
M21610-69231	SCREW
M21630-63151	PRESSURE PLATE (220)
M21630-63152	PRESSURE PLATE (220)
M21630-64731	SECOND SMALL GEAR (220)
M21630-64911	FILM COUNTER GEAR (220)
M21630-66221	PLATE (220)
M21630-66371	SIRIAL NO. PLATE
M21660-11111	BASE PLATE
M21660-11191	SEALING STRIP
M21660-11261	LEATHERTTE
M21660-11271	DARK SLIDE SPACER
M21660-11291	SEALING STRIP A
M21660-11311	SEALING STRIP B
M21660-11341	SPACER
M21711-1111T1	BAYONET RING
M21711-11411	OUTER BARREL
M21711-11611	RING
M21712-11411	OUTER BARREL
M21770-61101	FILM HOLDER FRAME ASS'Y
M21770-61211	LIGHT BAFFLE PLATE
M21770-61221	PLATE
M21770-61431	LEAF SPRING A
M21770-61461	LEAF SPRING B
M21770-61471	RING
M21770-62381	PLATE
M21780-63101	MAIN FRAME
M21780-63151	PRESSURE PLATE (120)
M21780-63152	PRESSURE PLATE (120)

  


M21780-6321T1	SP-SPRING (RH)
M21780-6324T1	SP-SPRING (LH)
M21780-63311	BOTTOM PLATE
M21780-64201	WINDING BASE PLATE
M21780-64731	SECOND SMALL GEAR (120)
M21780-6477T1	THIRD GEAR (120)
M21780-64831	BASE DISK (120)
M21780-6484T1	DEVICE (120)
M21780-6485T1	DINIDING DISK (120)
M21780-64911	FILM COUNTER GEAR (120)
M21780-64931	COUNTER DISK (120)
M21780-6531T1	PREVENTIVE LEVER ASS'Y
M21780-65701	CHARGING LEVER
M21780-66151	PLATE
M21780-66261	LEATHERTTE
M21780-69261	LEATHERTTE
M21790-63151	PRESSURE PLATE (220)
M21790-63152	PRESSURE PLATE (220)
M21790-64731	SECOND SMALL GEAR (220)
M21790-6476T1	THIRD GEAR (220)
M21790-64831	BASE DISK (220)
M21790-6484T1	DIVIDING DEVICE
M21790-6485T1	DISK (220)
M21790-6491T1	FILM COUNTER GEAR (220)
M21790-64931	DISK (220)
M21790-6557T1	AUXILIARY GEAR (220)
M22010-11191	SEALING STRIP
M22010-11231	RA LEATHERETTE C
M22010-11661	LIGHT BAFFLE
M22010-11702	WINDING BASE PLATE ASS'Y
M22010-1171-SRP	COLLAR
M22010-11741C	SPOOL GUIDE
M22010-1191T1	WINDING GEAR
M22010-11941	SHOULDER SCREW
M22010-11961	ATCHET GEAR
M22010-16841	TAPE
M22010-1811T1	SHUTTER SPEED DIAL
M22010-18151	LEAF SPRING
M22010-18211	SIDE PANEL R
M22010-1825T1	COUPLER A
M22010-18261	COUPLER B
M22010-18861	DAMPER
M22010-19003	TV BASE PLATE ASS'Y
M22010-1911-SRP	COLLAR
M22010-21001	BASE PLATE ASS'Y
M22010-2111T1	BASE PLATE ASS'Y
M22010-2114T1	CHARGE LEVER
M22010-2151T1	MC LEVER
M22010-2154T1	DETACHABLE LEVER
M22010-21571	SPRING
M22010-22015	IDE PANEL R ASS'Y
M22010-22601	MOVING COIL ASS'Y
M22010-31211D	FRONT PANEL
M22010-31451	F.P.C.BOARD A
M22010-31761	SCREW
M22010-3181T2	RACK PLATE R

 



M22010-3182T2	RACK PLATE L
M22010-36101	MAIN F.P.C. BOARD
M22010-36281	F.P.C. BOARD C
M22010-36301	F.P.C. BOARD W
M22010-41511	COCKING LEVER
M22010-4153T1	SHAFT
M22010-4154T1	HUB
M22010-41551	SCREW
M22010-41611	SPRING
M22010-41641	DECORATIVE DISK
M22010-41651	COLLAR
M22010-43131	COLLAR
M22010-43141	SHAFT
M22010-43641	PAWL
M22010-43681	SCREW
M22010-43691	SPRING
M22010-43811	R SWITCH
M22010-43871	COLLAR
M22010-44761	PLATE
M22010-44811	BUZZER
M22010-44841	DISTANCE SCALE
M22010-4487T1	CONTACT PLATE
M22010-4516T1	SECTOR GEAR
M22010-45431	SPRING
M22010-4551T1	SECTOR GEAR
M22010-45541	HUB
M22010-45701	IDLE GEAR
M22010-45811	SWITCH
M22010-45812B	SWITCH
M22010-4583T1	CONTACT PLATE
M22010-4583T2E	CONTACT PLATE
M22010-45871	PLATE
M22010-46821	SHAFT
M22010-46831	SCREW
M22010-47341	GUIDE PLATE R*****
M22010-47341D	GUIDE PLATE R
M22010-4735T1	GUIDE PLATE L*****
M22010-4735T2	GUIDE PLATE L
M22010-4741T1	PINION SHAFT
M22010-47451	COLLAR
M22010-47571	STOPPER
M22010-47631	DISK
M22010-47711	SIDE PANEL L
M22010-47741	SIDE PANEL LU
M22010-47841	SIDE PANEL RL
M22010-47911	ACCESSORY SHOE
M22010-47931	SHOE COVER
M22010-48711	HOLDER
M22010-49111	KNOB L
M22010-49121	SHAFT
M22010-49141	GEAR 2 *****
M22010-4914T2A	GEAR 2
M22010-49151	SHAFT
M22010-49191	WASHER
M22010-4921T1	GEAR NO. 1
M22010-49231	KNOB

  


M22010-49241	RUBBER GRIP
M22010-49251	WASHER
M22010-49261	LEAF SPRING
M22010-49271	LEAF SPRING
M22010-5161T1	DETACHABLE LEVER
M22010-51641	SHAFT
M22010-51661	SPRING
M22010-51751	SPRING
M22010-5365T1	PEDESTAL
M22010-54121	SERIAL NO. PLATE
M22010-55421	MASK R
M22010-6241T1	FRONT COVER
M22010-62451	FOCAL LENGTH SCALE
M22010-65201	ISO PINS HOUSING
M22010-65301	MONITOR LAMP
M22010-62441	RUBBER CAP
M22015	SIDE PANEL
M22026	BOTTOM COVER ASS'Y
M22170-62281	LEATHERTTE R
M22240 04311	SHUTTER COVER
M22244	#1ES SHUTTER ASS'Y
M22250-01411	RING
M22250-04211	FILTER RING
M22250-04241	LENS DISTANCE SCALE
M22250-04311	SHUTTER COVER
M22250-05211	BASE BARREL
M22250-S2101	#1ES SHUTTER ASS'Y
M22260-04211	FILTER RING*****
M22260-04211-	FILTER RING
M22410-02211	FIXING RING
M22410-0231T1	LEVER
M22410-0241T1	CHANGING RING
M22410-02431	SHAFT
M22410-02441	STUD
M22410-03111	APERTURE RING
M22410-03141	STOPPER PIN
M22410-03151	CLICK PLATE
M22410-03211	GEAR NO.2
M22410-03241	GEAR NO. 3
M22410-03251	GEAR NO. 4
M22410-0327T1	SHAFT
M22410-0411T1	COVER
M22410-04131	COVER
M22410-04151	STOPPER PLATE
M22410-04211	BASE BARREL
M22410-04311	SHUTTER COVER
M22410-04421	LEAF SPRING
M22410-04571	FILTER RING
M22410-05211	BASE BARREL
M22510-11111	MAIN FRAME
M22510-11121	RUBBER
M22510-11131	SPACER
M22510-11381	PLATE
M22510-11541	SCALE
M22510-11901	EYEPIECE BLIND ASS'Y
M22510-11911	HOLDER

 


M22510-11931	HOLDER
M22510-1221T1	DIAL BASE PLATE
M22510-12231	HUB
M22510-1224T1	TV BRUSH
M22510-12271	WASHER
M22510-12321	HUB
M22510-1233T1	CV BRUSH
M22510-12401	CONTACT F.P.C. BOARD
M22510-12411	SPRING
M22510-12511	HOLDER R
M22510-12521	SHAFT
M22510-12541	HOLDER L
M22510-12551	SHAFT
M22510-12601	TV F.P.C. BOARD
M22510-12701	INDICATOR F.P.C. BOARD
M22510-12741	SIGNAL PINS HOUSING
M22510-1278T1	CONTACT F.P.C. BOARD
M22510-1282T1	F.P.C. BOARD ASS'Y
M22510-12841	SHIELD PLATE
M22510-12861	LUG PLATE
M22510-12911	MAIN F.P.C. BOARD
M22510-13111	AE FINDER COVER
M22510-13141	SCREW L
M22510-13151	SCREW S'mall' voir 5175-74481
M22510-13211	TV DIAL
M22510-1322T1	CLICK PLATE
M22510-13261	CLICK BASE PLATE
M22510-13281	STOPPER PLATE
M22510-13311	TV RELEASE BUTTON
M22510-13321	SRING
M22510-13331	LEAF SPRING
M22510-13341	TV SCALE DISK
M22510-13411	CV DIAL
M22510-13421	STOPPER PLATE
M22510-13441	CV RELEASE BUTTON
M22510-13451	SPRING
M22510-13511	KNOB
M22510-1352T1	COUPLING PLATE
M22510-13551	CLICK PLATE
M22510-13571	SPRING
M22510-1361T1	HOLDER
M22510-1363T1	CONTACT PC BOARD
M22510-13711	KNOB
M22510-1372T1	CONTACT PLATE
M22530-26111	FH BASE FRAME
M22530-26132	LOCK LEVER L
M22530-26142	LOCK LEVER R
M22530-26152	SHOULDER SCREW
M22530-26162	SPRING
M22530-26192	COLLAR
M22530-26211	FITTING PLATE R
M22530-26221	FITTING PLATE L
M22530-26351	CAP
M22530-26851	HOOD COVER
M22530-26872	KNOB R
M22530-26882	KNOB L

  


M22530-26911	FRAME
M22530-26931	NAME PLATE
M22530-26941	RUBBER
M22530-27171	PLATE R
M22530-27181	PLATE L
M22710-41262	SPRING
M22710-42101	REVOLVING BACK FRAME
M22710-42511	ROLLER
M22710-42521	COLLAR
M22710-42531	HOLDER A
M22710-42541	HOLDER B
M22710-42701	BACK COVER ASS'Y
M22710-4271T1	BACK COVER
M22710-42881	RUBBER PLATE R
M22710-42891	RUBBER PLATE L
M22710-42961	LIGHT BAFFLE
M22710-42981	DOUBLE FACED TAPE
M22710-42991	DOUBLE FACED TAPE
M22710-49511	HINGE HOLDER U
M22710-49521	HINGE HOLDER L
M22720-4311T1	WINDING BASE PLATE
M22720-43151	WINDING GEAR NO. 2
M22720-43181	PLATE
M22720-43211	COUPLER
M22720-43231	RING
M22720-4324T1	PEDESTAL
M22720-43281	RING
M22720-43291	WASHER
M22720-4331T1	WINDING GEAR ASS'Y
M22720-43331	COLLAR
M22720-43351	WINDING STOP GEAR
M22720-43361	PLATE
M22720-43381	SPRING*****
M22720-43382	SPRING
M22720-43402	WINDING BASE GEAR ASSY
M22720-4341T1	SHAFT*****
M22720-4341T2	SHAFT
M22720-43451	FILM SPOOL HOLDER
M22720-43461	NUT
M22720-43511	GEAR NO. 1
M22720-43511B	GEAR NO.3
M22720-4354T1	GEAR NO. 2
M22720-43581	COLLAR
M22720-4361T1	SIGNAL LEVER
M22720-4366T1	PLATE
M22720-4371T1	WINDING STOP LEVER
M22720-43741	SPRING
M22720-43801	BASE PLATE
M22720-43851	SPRING
M22720-4411T1	LARGE GEAR NO. 2
M22720-4413T1	SMALL GEAR NO. 2 (120)
M22720-44321	HUB
M22720-4441T1	COUNTER DIVIDING DEVICE
M22720-44481	COUNTER GEAR
M22720-4451T1	PEDESTAL
M22720-44541	COUNTER (120)

 


M22720-4456T1	COUNTER GEAR
M22720-44631	SPRING
M22720-44701	RELEASE LEVER
M22720-44831	SPRING
M22720-45111	GEAR NO.3
M22720-4513T1	ARM
M22720-45151	SPRING
M22720-4518T1	CASE
M22720-4551T1	BASE FRAME
M22720-45551	BOTTOM PLATE
M22720-45611	PRESSURE PLATE (120)
M22720-4575T2	ROLLER
M22720-45762	ROLLER
M22720-45771	RUBBER RING
M22720-45781	RUBBER RING
M22720-45791	ROLLER
M22720-4579T2	ROLLER C*****
M22720-4579T2D	ROLLER C
M22720-4581T2	ROLLER D
M22720-45822	COVER
M22720-45851	GEAR
M22720-45861	SHAFT A
M22720-45871	SHAFT B
M22720-46111	TOP COVER (120)
M22720-46121	WINDOW U
M22720-46131	WINDOW S
M22720-47111	BOTTOM COVER
M22720-4712T1	FILM SPOOL HOLDER ASS'Y
M22720-47221	LEAF SPRING (120)*****
M22720-47222	LEAF SPRING (120)
M22720-47231	SHOULDER SCREW*****
M22720-47232	SHOULDER SCREW
M22720-47251	WASHER*****
M22720-47252	WASHER
M22720-47261	WASHER
M22720-47271	LEVER
M22720-4731T1	LEVER
M22720-47312	WASHER
M22720-47341	SPRING
M22720-47351	COLLAR
M22720-47361	CUSHION
M22720-48221	FILM ADVANCE KNOB*****
M22720-48222	FILM ADVANCE KNOB
M22730-4413T1	MALL GEAR NO. 2
M22730-4445T1	AUXILIARY DIVIDING DISK
M22730-44541	COUNTER
M22730-45612	PRESUURE PLATE (220)
M22730-46111	TOP COVER (220)
M22730-4712T1	FILM SPOOL HOLDER ASS'Y
M22730-47271	WASHER
M22740-42102	REVOLVING BACK FRAME
M22740-4231T1	LOCK LEVER
M22740-42521	COLLAR
M22750-4311T1	WINDING BASE PLATE
M22750-4411T1	LARGE GEAR NO. 2
M22750-4413T1	SMALL GEAR NO. 2

 


M22750-44321	HUB
M22750-4433T1	GEAR NO. 4
M22750-4441T1	C. DIVIDING DEVICE (120)
M22750-4445T1	A. DIVIDING DEVICE (120)
M22750-44481	COUNTER GEAR
M22750-44541	COUTNER (120)
M22750-4551T1	BASE FRAME
M22750-45551	BOTTOM PLATE
M22750-45612	PRESSURE PLATE (120)
M22750-45621	SHAFT
M22750-45631	SCREW
M22750-4579T2	ROLLER C
M22750-4579T3	ROLLER C
M22750-45851	GEAR NO. 4
M22750-46111	TOP COVER (120)
M22840-01111	LENS HOLDER
M22840-01121	HOLDER BAR
M22840-01311	SPACER
M22840-01411	LABEL
M2410-04251	LENS DISTANCE SCALE RING
M25010-11471	TRIPOD SOCKET
M25010-11531	HINGE
M25010-1161T1	SPOOL HOLDER
M25010-1171T1	SPOOL KNOB ASS'Y L
M25010-1181T1	SPOOL KNOB ASS'Y R
M25010-12111	BASE FRAME
M25010-12121	SEALING STRIP U
M25010-12131	SEALING STRIP L
M25010-12141	SEALING STRIP
M25010-12161	SPONGE
M25010-12271	PLATE
M25010-1231T1	SHUTTER CURTAIN ASS'Y
M25010-1244T1	SHUTTER CURTAIN FRAME
M25010-12711	BATTER CHAMBER
M25010-12721	LEAF SPRING
M25010-12741	CASE
M25010-12811	COVER*****Discont,
M25010-12812	COVER
M25010-1311T1	BASE PLATE
M25010-13232	LOCK LEVER
M25010-13241	SPRING
M25010-13272	COLLAR
M25010-14101	WINDING MECHNISM ASS'Y B
M25010-14361	SPRING
M25010-1441T1	SR LEVER
M25010-14511	FILM SPOOL HOLDER (*****)
M25010-14512	FILM SPOOL HOLDER
M25010-14532	SPOOL SHAFT
M25010-14541	SPRING
M25010-14561	GEAR
M25010-14581	SPOOL RING
M25010-1461T1	GEAR
M25010-14631	SPRING
M25010-14641	PLATE
	C DIVIDING DEVICE ASS'Y
M25010-1491T1	COUNTER GEAR ASS'Y

 



M25010-1519T1	STOP LEVER
M25010-1522T1	SELF SWITCH SHAFT
M25010-15261	SPRING
M25010-15281	SHAFT
M25010-15351	FILM COUNTER GEAR U
M25010-15401	WINDING MECHANISM ASS'Y A
M25010-1555T1	R LEVER A
M25010-1557T1	STOP OEVER
M25010-1561T1	R LEVER B
M25010-15671	WASHER (6W3.2X0.3)
M25010-1571T1	LEVER
M25010-15781	SPRING
M25010-1581T1	RM COUPLING LEVER
M25010-16201	WINDING SHAFT ASS'Y
M25010-1631T1	WIRE
M25010-1641T1	GEAR
M25010-16461	CAM
M25010-16541	PAWL A
M25010-16551	SPRING
M25010-1661T1	PAWL B
M25010-1667T1	E-COUNTER ASS'Y
M25010-17111	MAIN FRAME
M25010-17121	RING
M25010-1713T1	SET RING
M25010-17181	FIXING RING
M25010-17211	STOPPER
M25010-17221	MOUNTING RING
M25010-17231	LEAF SPRING
M25010-17271	GIUDE PLATE
M25010-17291	SPRING
M25010-1731T1	WIRE ROLLER PLATE ASS'Y
M25010-1736T1	LOCK PLATE
M25010-17391	SPRING
M25010-17411	R BUTTON
M25010-17421	SPRING
M25010-1744T1	PLATE
M25010-17481	TAPE
M25010-17521	SHAFT
M25010-17531	LEVER NO. 2
M25010-17541	LEVER COVER
M25010-17561	STUD
M25010-17571	SIGNAL PINS HOUSING
M25010-17581	SIGNAL PINS HOUSING
M25010-17611	F.P.C. BOARD
M25010-17621	PLATE
M25010-17681	HOLDER
M25010-17751	UB
M25010-1781T1	RANGE LEVER ASS'Y
M25010-17921	SPRING
M25010-1796T1	FRAME LEVER
M25010-17981	SHAFT
M25010-18851	REFLECTOR
M25010-19001	BACK COVER ASS'Y
M25010-19101	BACK COVER SUB ASS'Y
M25010-19281	LIGHT BAFFLE
M25010-1946T1	HOLDER

 


M25010-19551	MEMO HOLDER
M25010-19731	FILM HOLDER
M25010-19751	PLATE
M25010-1981T1	PRESSURE PLATE
M25010-21111	TOP COVER
M25010-21131	WINDOW A
M25010-21141	WINDOW B
M25010-21151	WINDOW
M25010-21221	PLATE
M25010-21251	CONTACT PLATE
M25010-21311	SHOE COVER
M25010-21321	R SOCKET
M25010-21331	NUT
M25010-21361	SELF BUTTON
M25010-21371	SPRING
M25010-21381	RING
M25010-2145T1	SR BASE PLATE
M25010-21691	EYE-CUP
M25010-22111	UNDER COVER
M25010-22121	COUPLING LEVER
M25010-22131	KNOB
M25010-24101	TV P.C. PLATE ASS'Y
M25010-24261	TV P.C. BOARD
M25010-24341	CV P.C. BOARD
M25010-2461T1	TV LOCK LEVER
M25010-24701	TV DIAL ASS'Y
M25010-24841	SHUTTER SPEED SCALE
M25010-25141	SRPING
M25010-2515T1	SHAFT
M25010-25191	WASHER (6W3.2X0.3)
M25010-25311	STOPPER LEVER
M25010-25321	HUB
M25010-25341	SPRING
M25010-2541T1	KNOB ASS'Y
M25010-25471	PLATE
M25010-25511	COLLAR
M25010-25561	HOLDER
M25010-25581	HOLDER B
M25010-25611	INNER FRAME
M25010-2571T1	SWITCH BOARD
M25010-25931	COLLAR
M25010-25941	SCREW
M25010-26131	STUD
M25010-26141	HOLDER
M25010-2616T1	SWITCH BOARD
M25010-26261	WASHER A (T=0.02)
M25010-26271	WASHER B (T=0.03)
M25010-26281	WASHER C (T=0.05)
M25010-26291	WASHER D (T=0.1)
M25010-2631T2	CAM LEVER ASS'Y
M25010-26351	SHAFT
M25010-2638T1	LEVER
M25010-26461	SHAFT
M25010-26471	SPRING
M25010-2651T1	SPD HOLDER
M25010-26611	COVER

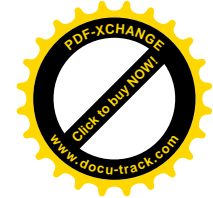 


M25010-26651	PLATE
M25010-26711	FRAME LEVER
M25010-26731	SHOULDER SCREW
M25010-26761	PLATE
M25010-26781	FRAME FOR REFLECTOR
M25010-26791	HOLDER
M25010-2685T1	SELECTOR LEVER
M25010-26891	TAPE
M25010-26911	SCREW
M25010-2711T1	CONTACT PLATE
M25010-27181	PC BOARD B
M25010-2725T1	SELF TIMER LEAD
M25010-27311	FRONT COVER
M25010-2732T1	LUG PLATE
M25010-2735T1	GRIP R
M25010-27371	RUBBER R
M25010-27411	GRIP L
M25010-27421	RUBBER L
M25010-27551	SCREW
M25010-27561	SCREW
M25010-27581	LOCK BUTTON
M25010-27711	DISK
M25010-2772T1	FILM ADVANCE LEVER
M25010-27831	CAP
M25010-30101	MAIN PC BOARD
M25010-3021T1	CIRCUIT
M25010-31111	BODY CAP
M25010-330261	CIRCUIT
M Y25015	BATTERY CASE ASS'Y
M Y25017	WINDING MECHANISM ASSY
M Y25018 (Y25038)	MOUNT ASS'Y
M Y25019	RANGE FINDER ASS'Y
M Y25022	TOP COVER ASS'Y
M Y25023	BOTTOM COVER ASS'Y
M Y25035	BATTERY CASE ASS'Y
M Y25037	WINDING MECHANISM ASSY
M Y25038	MOUNT ASS'Y
M Y25041	BACK COVER ASS'Y
M Y25042	TOP COVER ASS'Y (C)
M Y25043	BOTTOM COVER ASS'Y ©
M Y25045	TV DIAL ASS'Y
M Y25062	TOP COVER ASS'Y (B)
M Y25063	BOTTOM COVER ASS'Y (B)
M25020-1461T1	GEAR
M25020-1641T1	GEAR
M Y25112	LENS ASS'Y
M Y25113	SHUTTER ASS'Y
M Y25115	HELICOID ASS'Y
M Y25118	REAR LENS CAP
M Y25119	LENS HOOD
M Y25212	LENS ASS'Y
M Y25213	SHUTTER ASS'Y
M Y25215	HELICOID ASS'Y
M Y25216	LENS HOOD
M Y25218	REAR LENS CAP
M Y25222	LENS ASS'Y

  



M Y25223	SHUTTER ASS'Y
M Y25225	HELICOID ASS'Y
M Y25229	LENS HOOD
M Y25312	LENS ASS'Y
M Y25313	SHUTTER ASS'Y
M Y25315	HELICOID ASS'Y
M Y25316	LENS MOUNT
M Y25319	LENS HOOD
M Y25732	WATER LEVEL
M Y25781	135 PANORAMIC MASK
M Y25784	REWIND CRANK UNIT
M25-ST03	RANGE FINDER COUPLING
M25-ST06	DUMY BATTERY
M25-ST11	CHART FOR RANGEFINDER
M25112	LENS ASS'Y
M25113	SHUTTER ASS'Y
M25115	HELICOID ASS'Y
M25118	REAR LENS CAP
M25119	LENS HOOD
M25212	LENS ASS'Y
M25213	SHUTTER ASS'Y
M25215	HELICOID ASS'Y
M25216	LENS HOOD
M25218	REAR LENS CAP
M25222	LENS ASS'Y
M25223	SHUTTER ASS'Y
M25225	HELICOID ASS'Y
M25229	LENS HOOD
M25312	LENS ASS'Y
M25313	SHUTTER ASS'Y
M25315	HELICOID ASS'Y
M25316	LENS MOUNT
M25319	LENS HOOD
M25732	WATER LEVEL
M25781	135 PANORAMIC MASK
M25784	REWIND CRANK UNIT
M25030-11511	STRAP EYELET A
M25030-11511	STRAP EYELET A
M25030-11531	STRAP EYELET
M25030-11551	STRAP EYELET
M25030-12811	COVER (*****)
M25030-12812	COVER
M25030-1311T1	BASE PLATE
M25030-14101	WINDING MECHANISM ASS'Y
M25030-14561	GEAR
M25030-1461T1	GEAR
M25030-14691	HUB
M25030-1485T1	LEVER
M25030-14891	SPRING
M25030-15131	SPRING
M25030-15401	WINDING MECHANISM ASSY A
M25030-1555T1	R LEVER B
M25030-15641	SPRING
M25030-15671C	PLATE
M25030-1568T1	LEVER B
M25030-1581T1B	RM COUPLING LEVER

 


M25030-1611T1	WINDING LEVER
M25030-16201	WINDING SHAFT ASSY
M25030-16241	SPRING
M25030-1641T1	GEAR
M25030-16541	PAWL A
M25030-21111	TOP COVER (C)
M25030-21151	WINDOW*****
M25030-21151-	WINDOW
M25030-21161	KNOB (CG)
M25030-21191	SPRING
M25030-21321	PLATE
M25030-21331	COLLAR
M25030-21351	SCREW
M25030-21361	SELF BUTTON
M25030-21391	LOCK PIN
M25030-22111	UNDER COVER (C)
M25030-2411T1	TV BASE PLATE
M25030-2421T1	TV CLICK DISK
M25030-2421T1B	TV CLICK DISK
M25030-2441T1	CONTACT DISK
M25030-2446T1	PLATE
M25030-24511	GEAR
M25030-24521	CONTACT PLATE
M25030-2454T1	LOCK PLATE
M25030-24571	SPRING
M25030-24581	SHAFT
M25030-24641	SPRING
M25030-24641B	SPRING
M25030-2467T1	TV LOCK LEVER
M25030-2471T1	TV DIAL KNOB HOUSING
M25030-24751	GEAR
M25030-24761	RING
M25030-24771	LEAF SPRING
M25030-24811	DISK
M25030-2515T1	SHAFT
M25030-25241	PAWL
M25030-2525T1	GEAR
M25030-25281	SPRING
M25030-25311	STOPPER LEVER
M25030-25371	PLATE
M25030-25381	SPRING
M25030-25391	PIN
M25030-25411	HANDLE
M25030-2541T1	KNOB ASS'Y
M25030-25421	LEVER
M25030-2542T1	GEAR (25030-2543T1)*****
M25030-2543T1	GEAR
M25030-26201	SWITCH
M25030-26221	HUB
M25030-26231	HUB
M25030-26251	SPRING
M25030-27181	PC BOARD B
M25030-27311	FRONT COVER (CG)
M25030-2735T1	GRIP R ASS'Y
M25030-2735T1B	GRIP R ASS'Y
M25030-27371	RUBBER R

 


M25030-27391	TAPE
M25030-27411	GRIP L
M25030-27421	RUBBER L
M25030-27581	KNOB
M25030-27591	LOCK REALEASE BUTTOM
M25030-27591B	LOCK REALEASE BUTTOM erreur Japan (Contact syncro M7)
M25030-27611	SPRING
M25030-2772T1	FILM ADVANCE LEVER (C)
M25030-27831	CAP (C)
M25030-27911	CONTACT PLATE A
M25030-27921	CONTACT PLATE B
M25030-27931	CONTACT PLATE C
M25030-27941	CONTACT PLATE
M25030-28111	R SOCKET
M25030-28121	NUT
M25030-28121B	NUT
M25030-28141	CODE
M25030-28151	CODE
M25030-28161	CODE
M25050-21111	TOP COVER (B)
M25110-02121	F.P.C. BOARD S
M25110-02131	F.P.C. BOARD X
M25110-0214T1	APERTURE-ACT, LEVER ASS'Y
M25110-0215T1	CONTACT PINS HOUSING
M25110-03161	FOCUSING RING
M25110-0322T1	COCKING RING
M25110-04231	RUBBER GRIP
M25110-04611	FILTER RING
M25110-0465T1	APERTURE CONTROL RING
M25110-0471T1	RANGE UNIT
M25110-05112	LENS MOUNT
M25110-05131	PLATE
M25110-05171	MOUNT COVER
M25110-05511	NAME RING
M25210-01211	WASHER (T=0.5)
M25210-01221	WASHER (T=0.2)
M25210-01231	WASHER (T=0.1)
M25210-01241	WASHER (T=0.05)
M25210-01251	WASHER (T=0.03)
M25210-01261	WASHER (T=0.02)
M25210-02121	F.P.C. BOARD S
M25210-02131	F.P.C. BOARD X
M25210-0214T1	APERTURE-ACT, LEVER ASS'Y
M25210-03161	FOCUSING RING
M25210-03181	FILTER RING
M25210-0322T1	COCKING RING
M25210-03311	FIXING RING
M25210-04511	APERTURE RING
M25210-04611	FILTER RING
M25210-0465T1	APERTURE CONTROL RING
M25210-04671	C-RING
M25210-0471T1	RANGE UNIT
M25210-04941	RANGEFINDER COUPLING LEVER
M25210-04961	COUPLING LEVER PIN
M25210-05211	MOUNT COVER
M25210-05511	NAME RING

  



M25220-0213T1	APERTURE-ACT, LEVER ASS'Y
M25220-0322T1	COCKING RING
M25220-04211	OCUSING RING
M25220-04611	FILTER RING
M25220-0465T1	APERTURE CONTROL RING
M25220-0471T1	RANGE RING ASS'Y
M25220-04871	PIN
M25220-05151	HOLDER
M25220-05211	MOUNT COVER
M25220-05511	NAME RING
M25310-02141	F.P.C. BOARD S
M25310-02151	F.P.C. BOARD X
M25310-03361	COUPLING LEVER PIN
M25310-04211	FOCUSING RING
M25310-04611	FILTER RING
M25310-0465T1	APERTURE CONTROL RING
M25310-04721	HOLDER
M25310-05061	COUPLING LEVER
M25310-05121	PLATE
M25310-05211	MOUNT COVER
M25310-05511	NAME RING
M25720-11211	BASE PLATE
M25720-11261	SCREW
M25720-11271	GUIDE (L)
M25720-11281	GUIDE
M25720-11321	TRIPOD SCREW
M25720-11411	HOLDER
M25720-11421	PIPE
M25720-11441	SPACER
M25720-11451	PIPE (LH)
M25720-11461	PIPE (RH)
M25720-11471	NUT
M25720-11481	SLIDE LOCK
M25720-11491	LOVK UNIT
M25720-11521	PIPE STOPPER
M25720-11551	PLATE
M25720-11561	GUIDE SCREW
M25720-11711	BASE FRAME
M25720-11721	ROTOR
M25720-11731	LEAF SPRING
M25720-11761	SHAFT
M25720-11871	STOPPER
M25720-11921	PLATE A
M25720-11931	SHAFT
M25720-11951	FRAME (LH)
M25720-11961	PLATE B
M25720-12121	FRAME (RH)
M25720-1212T1	ANGLE PLATE ASS'Y
M25720-12181	SPRING
M257211-	CLOSE-UP LENS
M25730-11111	PROTECTOR GLASS
M25730-11121	#2 LENS
M25730-11131	#3 LENS
M25730-11141	#4 LENS
M25730-11151	#5 LENS
M25730-11171	#7 LENS

 



M25730-11311	MAIN FRAME
M25730-11321	FRONT FRAME
M25730-11331	SPACER G2
M25730-11341	SPACER G3
M25730-11351	SPACER G4
M25730-11411	INNER BARREL
M25730-1142T1	MIRROR HOLDER
M25730-1144T1	TARGET DISK
M25730-11451	BARREL
M25730-11461	SPACER
M25730-11471	RING
M25730-11511	LOCK RING
M25730-11521	SHOE
M25730-11541	PLATE
M25730-11551	EYE-CUP
M25760-11541	PLATE
M25732	WATER LEVEL
M25780-1111T1	BASE FRAME ASS'Y
M25780-14111	PLATE
M4W2X0.2	WESHER
M50/81-6315T1	P. PLATE (RSW-6315K2)
M5000-11221	BAFFLE FRAME
M5000-11341	LIGHT BAFFLE L (RS-1134)
M5000-11351	POST SCREW (RS-1135)
M5000-11371	SEALING STRIP (RS-1137)*****
M5000-11381	SEALING STRIP (RS-1138)*****
M5000-11391	SEALING STRIP (RS-1139)
M5000-11431	LIGHT BAFFLE U (RS-1143)
M5000-11451	SEALING STRIP (RS-1145)
M5000-11461	SEALING STRIP (RS-1146)
M5000-11471	SEALING STRIP (RS-1147)
M5000-11511	LIGHT BAFFLE M (RS-1151)
M5000-11531	RA PAPER (RS-1153)
M5000-11561	RA PAPER R (RS-1156)
M5000-11621	RA PAPER (RS-1162)
M5000-12121	LIGHT BAFFLE (RS-1212)
M5000-12131	CATCH ANGLE-A (RS-1213)
M5000-12141	CATCH ANGLE-A (RS-1214)
M5000-12151	LEAF SPRING-A (RS-1215)
M5000-12161	LEAF SPRING-B (RS-1216)
M5000-12191	LEAF SPRING (RS-1219)
M5000-12421	SLIDE LOCK L (RS-1242)
M5000-12431	LEAF SPRING (RS-1243)
M5000-12451	KNOB (RS-1245)
M5000-12481	PLATE LOWER (RS-1248)
M5000-12521	LOCK PIN (RS-1252)
M5000-12532	COLLAR (RS-1253)
M5000-12621	LEAF SPRING (RS-1262)
M5000-12711	S. ADAPTER (RS-1271)
M5000-1271T1	PIN ADAPTER (RS-1271K2)
M5000-12722	SLEEVE (RS-1272)
M5000-1273T1	ROD ASS'Y (RS-1273K2)
M5000-12751	SCREW (RS-1275)
M5000-12761	SPRING (RS-1276)
M5000-13112	COCKING LEVER (RS-131)
M5000-13131	HUB (RS-1313)

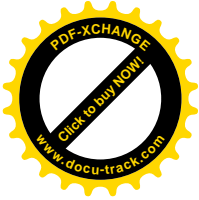 



M5000-13181	PIN (RS-1381)
M5000-13251	NUT (RS-3125) (FC-4027)
M5000-13261	SPRING (RS-1326)
M5000-13271	SCREW (RS-1327)
M5000-13292	DISK (RS-1329)
M5000-1331T1	PEDESTAL (RS-1331K2)
M5000-13321	SNTIFRICTION (RS-1332)
M5000-13331	SPRING (RS-1319-1)
M5000-13341	RING (RS-1319-2)
M5000-13361	SCREW (3PB2X2.8)
M5000-13371	STUD (RS-1337)
M5000-13411	ARM (ARS-1341)
M5000-13421	NUT (RS-1342)
M5000-13431	STUD (RS-1343)
M5000-13511	BUSHING (RS-1351)
M5000-13541	DISK (RS-1354)
M5000-13561	DISK (RS-1256)
M5000-1357T1	COCKING GEAR (RS-1357K2)
M5000-13611	IDLE GEAR (RS-1361)
M5000-1362T1	BEVEL GEAR (RS-1362K2)
M5000-1363T1	HUB (RS-1363K2)
M5000-13681	SCREW (RS-1368)
M5000-13711	BEVEL GEAR (RS-1371)
M5000-13721	WASHER (RS-1372)
M5000-13741	PEDESTAL (RS-1374)
M5000-1374T1	BEVEL GEAR (RS-1374K2)
M5000-13751	BASE PLATE (RS-1375)
M5000-1375T1	BEVEL GEAR (RS-1375K2)
M5000-13771	SCREW (RS-1377)
M5000-13791	SCREW (RS-1379)
M5000-13811	SPRING (RS-1381)
M5000-13821	SCREW (RS-1382)
M5000-14121	SCREW (RS-1412)
M5000-14131	SCREW (RS-1413)
M5000-14141	STUD (RS-1414)
M5000-14151	SPRING (RS-1415)
M5000-1421T1	ATOP LEVER (RS-1421K2)
M5000-14231	SCREW (RS-1423)
M5000-14241	SCREW (RS-1424)
M5000-14251	SPRING (RS-1425)
M5000-1431T1	LEVER (RS-1431K2)
M5000-14331	SCREW (RS-1433)
M5000-14351	SPRING (RS-1435)
M5000-14361	STUD (RS-1436)
M5000-14371	STUD (RS-1437)
M5000-1441T1	LEVER U (RS-1441K2)
M5000-1443T1	LEVER L (RS-1443K2)
M5000-14481	SPRING (RS-1448)
M5000-14511	ATOP LEVER (RS-1451)
M5000-14511N	STOP LEVER
M5000-14521	HUB (RS-1452)
M5000-14531	SCREW (RS-1453)
M5000-14541	SPRING (RS-1454)
M5000-14581	NUT (N2.6)
M5000-14611	BUTTON (RS-1461)
M5000-14621	S RELEASE ROD (RS-1462)

  

M5000-14631	NUT (RS-1463)
M5000-14641	STOP CAM (RS-1464)
M5000-14651	COLLAR (RS-1465)
M5000-14661	LEAF SPRING (RS-1466)
M5000-14671	SPRING WASHER (RS-1467)
M5000-15011	BELLOWS (RS-1551K2)
M5000-15131	DISK (ARS-1513)
M5000-15241	PIPE (RS-1524)
M5000-15451	COLLAR (RS-1545)
M5000-16111	BOTTOM COVER (RS-1611)
M5000-16121	*****
M5000-16121	TRIPOD SCREW
M5000-16141	PLATE (RS-1614)
M5000-16161	TRIPOD SOCKET (ARS-1616)
M5000-16211	SIDE PLATE L (RS-1621)
M5000-16221	SIDE PLATE R (RS-1622)
M5000-16391	SHEET B (RS-1636-2)
M5000-1652T1	SLIDE PLATE (RS-1652K2)
M5000-16551	SLIDE COVER L (RS-1655)
M5000-1661T1	PLATE (RS-1661K2)
M5000-16631	POST SCREW (RS-1663)
M5000-16711	LEVER (RS-1671)
M5000-16721	SHOULDER SCREW (RS-1672)
M5000-16731	COVER PLATE (RS-1673)
M5000-19131	LEATHEREETE (RS-1913)
M5000-19141	LEATHEREETE (RS-1914)
M5000-19191	LEATHEREETE (RS-1921-2)
M5000-19221	LEATHEREETE (RS-1922)
M5000-19231	LEATHEREETE (RS-1923)
M5000-19251	LEATHEREETE (RS-1925)
M5000-19281	LEATHEREETE (RS-1928)
M5000-21011	COCKING GEAR (RS-2141K2)
M5000-21111	FRONT PANEL (RS-2111)
M5000-21121	SEALING STRIP (RS-2112)
M5000-2113T1	PLATE (RS-2113K2)
M5000-21161	SPRING (RS-2116)
M5000-21171	STUD (RS-2117)
M5000-2121T1	BAYONET RING (RS-2121K2)
M5000-2123T1	LOCK LEVER (RS-2123K2)
M5000-21251	SHOULDER SCREW (RS-2125)
M5000-21261	SPRING (RS-2126)
M5000-21271	ANGLE (RS-2127)
M5000-21311	MOUNTING RING (RS-2131)
M5000-21331	COCKING RING (RS-2133)
M5000-21351	SPACER (RS-2135)
M5000-21361	RETANING RING (RS-2136)
M5000-21371	SHOULDER SCREW (RS-2137)
M5000-21381	WASHER (RS-2138)
M5000-21391	FIXING RING (RS-2139)
M5000-21441	PEDESTAL voir 21010-21441
M5000-21511	FRONT COVER (RS-2151)
M5000-21531	RED BEAT (RS-2135)
M5000-21551	COVER PLATE (RS-2155)
M5000-21611	COVER PLATE (RS-2161)
M5000-24111	MIRROR (RS-2411)
M5000-24131	HOLDER (RS-2413)

  

M5000-24141	HOLDER (RS-24141)
M5000-24181	PAPER (RS-2418)
M5000-24211	SHAFT (RS-2421)
M5000-24221	SPRING (RS-2422)
M5000-24231	COLLAR (RS-2423)
M5000-24261	CUSHION (RS-2426)
M5000-24271	COLLAR (RS-2427)
M5000-24291	CUSHION (RS-2429)
M5000-2431T1	LIGHT BAFFLE (RS-3431K2)
M5000-24351	HUB (RS-2435)
M5000-24411	CURTAIN (RS-2441)
M5000-24421	CUSHION (RS-2442)
M5000-2443T1	ATOP LEVER (RS-2443K2)
M5000-24461	SPRING (RS-2446)
M5000-2451T1	LEVER (RS-2451K2)
M5000-24541	NUT (RS-2416-2)
M5000-24571	SPRING (RS-2457)
M5000-24611	GEAR (RS-2461)
M5000-24621	BUSHING (RS-2462)
M5000-24651	SPRING (RS-2465)
M5000-24661	SPRING (RS-2466)
M5000-24671	STUD (RS-2467)
M5000-24681	SHOULDER SCREW (RS-2468)
M5000-24711	ANGLE PIN (RS-2471)
M5000-24721	SCREW (RS-2472)
M5000-24731	ANGLE PIN (RS-2473)
M5000-2475T1	LEVER (RS-2475K2)
M5000-24771	COLLAR (RS-2477)
M5000-24781	SHOULDER SCREW (RS-2478)
M5000-24791	SPRING (RS-2479)
M5000-2481T1	HANG LEVER (RS-2481K2)
M5000-24831	SHOULDER SCREW (RS-2483)
M5000-24841	SPRING (RS-2484)
M5000-24861	COLLAR (RS-2486)
M5000-2511T1	SIGNAL CAM (RS-2511K2)
M5000-25142	SHOULDER SCREW (RS-2514)
M5000-25152	SCREW (RS-2515)
M5000-25161	STUD (RS-2516)
M5000-25171	SPRING (RS-2517)
M5000-25191	SPRING (RS-2519)
M5000-2521T1	SIGNAL LEVER (RS-2521K2)
M5000-25241	COLLAR (RS-2425)
M5000-25271	SHOULDER SCREW (RS-2527)
M5000-25281	SPRING (RS-1528)
M5000-25291	STUD (RS-2529)
M5000-25311	COUPLING ARM (RS-2531)
M5000-25331	COUPLING ARM (RS-2533)
M5000-25341	BRACKET (RS-2534)
M5000-25351	STOPPER PLATE (RS-2535)
M5000-25361	GUIDE (RS-2536)
M5000-25371	FH HANGER (RS-2537)
M5000-25511	GEAR (RS-2551)
M5000-25521	HUB (RS-2552)
M5000-25541	SCREW (RS-2554)
M5000-25602	GOVERNOR (RS-2560)
M5000-25671	SCREW (RS-2567)

  



M5000-2611T1
M5000-26121
M5000-26131
M5000-26141
M5000-26151
M5000-26171
M5000-26211
M5000-26231
M5000-26241
M5000-26311
M5000-2631S
M5000-26341
M5000-27141
M5000-27331
M5000-27361
M5000-27711
M5000-46621-

FRAME (RS-2611K)
SCREEN GLASS (RS-2612)
FRESNEL LENS (RS-2613)
LEAF SPRING (RS-2614)
SCREW (RS-2615)
LEAF SPRING (RS-2617)
CLICK PLATE (RS-2621)
SCREW (RS-2623)
LEAF SPRING (RS-2624)
FH LOCK PIN (RS-2631)
PIN (RS-2631S)
CUSHION (RS-2634)
VELVETEEN (RS-2714)
LATCH PLATE (RS-2733)
MAMYA MARK (RS-2736)
PLATE (RS-2771)



*

M5001-11021
M5001-11151
M5001-11161
M5001-11171
M5001-11311
M5001-11331
M5001-1141T1
M5001-11481
M5001-11571
M5001-11581
M5001-1312T1
M5001-1321T1
M5001-14111
M5001-14161
M5001-14471
M5001-14712
M5001-14732
M5001-14811
M5001-14831
M5001-14861
M5001-14871
M5001-15111
M5001-15131
M5001-15211
M5001-15251
M5001-15261
M5001-15271
M5001-15281
M5001-15311
M5001-15321
M5001-15341
M5001-15411
M5001-15421
M5001-15471
M5001-15472
M5001-15651
M5001-15671
M5001-16311

  
FRAME (ARS-1141)
RA PAPER A (ARS-1115)
RA PAPER B (ARS-1116)
RA PAPER C (ARS-1117)
FRAME (ARS-1131)
LIGHT BAFFLE U (ARS-1133)
FRAME (ARS-1141K2)
POST SCREW (ARS-1148)
RA PAPER D (ARS-1157)
RA PAPER E (ARS-1158)
SHAFT (ARS-1312K2)VOIR 21010-1312T1
PLATE (ARS-1321K2)
RELEASE PLATE (ARS-1411)
PLATE (ARS-1416)
SPRING (ARS-1447)
RL BAR (ARS-1471)
HOLDER (ARS-1473)
LEVER (ARS-1481)
LEAF SPRING (ARS-1483)
RING (ARS-1486)
STOPPER PIN (ARS-1487)
FOCUSING KNOB (ARS-1511)
DISK
PINION SHAFT (ARS-1521)
SCREW (ARS-1525)
PEDESTAL (ARS-1526)
PEDESTAL (ARS-1527)
SCREW (ARS-1528)
GUIDE PLATE R (ARS-1531)
GUIDE PLATE L (ARS-1532)
HOLDER PLATE (ARS-1534)
RACK PLATE R (ARS-1541)
RACK PLATE L (ARS-1542)
PLATE (ARS-1547-1)
PLATE (ARS-1547)
HOLDER PLATE (ARS-1565)
COLLAR (ARS-1567)
PANEL (SRA-1631)

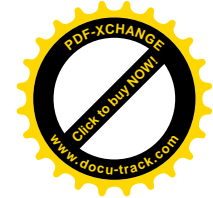



M5001-16321	PLATE U (ARS-1632)
M5001-16331	PLATE (ARS-1633)
M5001-16361	SHEET A (ARS-1636-1)
M5001-16411	PANEL (SRA-1641)
M5001-16421	PLATE U (ARS-1642)
M5001-16431	PLATE L (ARS-1643)
M5001-16461	SCALE (ARS-1646)
M5001-1651T1	PLATE R (ARS-1651K2)
M5001-16541	SLIDE COVER R (ARS-1654)
M5001-19111	LEATHEREETE (ARS-1911)
M5001-19131	LEATHEREETE (ARS-1913)
M5001-19181	LEATHEREETE (ARS-1921-1)
M5001-19221	LEATHEREETE (ARS-1922)
M5001-19231	LEATHEREETE (ARS-1923)
M5001-19241	LEATHEREETE (ARS-1924)
M5001-21561	NAME PLATE (ARS-2156)
M5001-2412T1	HOLDER (ARS-2412K2)
M5001-24371	RA PAPER (ARS-2437)
M5001-25321	COUPLING ARM (ARS-2532)
M5001-26121	SCREEN GLASS (ARS-2612)
M5001-31111	RED BAR (ARS-3111)
M5001-3114T1	ARM (ARS-3114K2)
M5001-3115T1	ARM (ARS-3115K2)
M5001-31181	PLATE (ARS-3118)
M5001-3122T1	LEVER (ARS-3122K2)
M5001-31231	SPRING (ARS-3123)
M5001-31241	SCREW (ARS-3124)
M5001-31271	SPRING (ARS-3127)
M5001-31291	SCREW (ARS-3129)
M5001-3131T1	LEVER F (ARS-3131K2-1)
M5001-3132T1	LEVER R (ARS-3131K2-2)
M5001-31431	STOPPER PIN (ARS-3143)
M5001-31481	SCREW (ARS-3185-1)
M5001-31611	SPRING (ARS-3161)
M5001-31621	STUD (ARS-3162)
M5001-31641	STUD (ARS-3164)
M5001-31681	NO.1 LEVER (ARS-3168)
M5001-31691	SCREW (ARS-3169)
M5001-3171T1	SUB LEVER (ARS-3171K2)
M5001-31721	SPRING (ARS-3172)
M5001-31751	SPRING (ARS-3175)
M5001-31761	PLATE (ARS-3176)
M5001-31771	SCREW (ARS-3177)
M5001-31781	NUT (ARS-3178)
M5001-31791	SPRING (ARS-3179)
M5001-31811	NO.1 LEVER (ARS-3181)
M5001-31821	SCREW (ARS-3182)
M5001-3183T1	NO.1 LEVER (ARS-3183K2)
M5001-31861	SPRING (ARS-2186)
M5001-31871	STUD (ARS-3187)
M5001-31881	LEAF SPRING (ARS-3188)
M5001-31891	HOLDER (ARS-3189-1)
M5001-63011	SP SPRING
M5002-79031	NUMBER PLATE
M5002-79111	PLATE
M5002-79121	COVER

  



M5002-79141	UNDER BASE FRAME
M5002-79251	NAME PLATE
M5002-79291	FILLET PLATE
M5002-79491	SPACER
M5002-79611	TOP COVER
M5002-79621	DECORATION DISK
M5003-7171T1	FOCUSING SCREEN FRAME
M5003-71731	FRESNEL LENS (6X8)
M5003-71732	FRESNEL LENS (6X8)
M5006-71111	BASE FRAME
M5006-71141	RUBBER
M5006-71151	DECORATION PLATE
M5006-71171	PIN
M5006-71271	COVER
M5006-71311	COVER
M5006-71501	LED PLATE
M5006-71561	SCALE
M5006-71611	MIDDLE FRAME
M5006-71801	BASE PLATE
M5006-71831	HUB
M5006-71861	LV BOARD
M5006-71871	PLATE
M5006-71911	HOLDER
M5006-71941	SWITCH
M5006-71991	WASHER (6W3.2X0.3)
M5006-72102	COUPLING DISK
M5006-72112	SHUTTER SPEED DIAL
M5006-72121	HUB
M5006-72161	SPRING WAHER
M5006-72171	KNOB ASS'Y
M5006-72201	LEVER
M5006-72212	LEVER
M5006-72221	HUB
M5006-72241	SPRING
M5006-72251	BUTTON
M5006-72271	CR.BUTTON
M5006-72281	LEAF SPRING
M5006-72311	CLICK DISK
M5006-72332	APERTURE SCALE RING
M5006-72341	CLICK LEVER
M5006-72351	STOPPER PLATE
M5006-72371	SPRING R
M5006-72381	SPRING L
M5006-72411	COVER
M5006-72421	B GUIDE
M5006-72431	BATTERY CHAMBER
M5006-72441	B CHAMBER COVER
M5006-72451	CONTACT PLATE (+)
M5006-72461	CONTACT PLATE (-)
M5006-72471	SHAFT
M5006-72512	MAIN SWITCH
M5006-72551	SHIELD COVER
M5006-72561	ISO SCALE DISK
M5006-72591	SPACER
M5006-72691	RIBBON
M5006-73102	LEVER

 



M5006-73142	SPRING
M5006-73202	LEVER
M5006-73242	SPRING
M5007-74111	UNDER BASE FRAME
M5007-74151	BASE FRAME
M5007-74171	PIN
M5007-74181	PLATE
M5007-74361	SCALE
M5007-74591	CUSHION
M5007-74811	TOP COVER
M5007-74961	CUSHION
M5007-74971	CUSHION
M5007-75302	COUPLING DISK
M5007-75321	HUB
M5007-75371	SPACER
M5007-75372	SPACER
M5007-75451	SHAFT
M5007-75751	SHIELD COVER
M5007-75761	SHIELD COVER U
M5007-75801	MAIN PC BOARD
M5008-11311	LIGHT BAFFLE FRAME (6X8)
M5009-12111	REVOLV BACK PANEL (6X8)
M5010-8111T1	FILM HOLDER FRAME ASS'Y
M5010-81151	SCREW (4B1.7X3.5)
M5010-81222	COLLAR
M5010-81231	SPRING
M5010-81241	SCREW (4B1.4X1.3)
M5010-81251	SCREW
M5010-81261	HINGE HOLDER U
M5010-81271	HINGE HOLDER L
M5010-81281	HINGE PLATE
M5010-81331	GUIDE SCREW
M5010-81351	COVER
M5010-81371	LEATHERETTE
M5010-82103	BACK COVER ASS'Y
M5010-82131	SEALING STRIP
M5010-82191	SEALING STRIP
M5010-82231	LEAF SPRING
M5010-8231T2	LOCK KNOB
M5010-82331	WASHER (6W3.2X0.3)
M5010-82341	SPRING WASHER
M5010-82371	DISK
M5010-82382	COVER
M5010-82431	LEAF SPRING
M5010-82461	SHAFT
M5010-82471	LEATHERETTE R
M5010-82481	LEATHERETTE L
M5010-82501	BATTERY CASE ASS'Y
M5010-82511	BATTERY CASE
M5010-82521	CONTACT A
M5010-82531	CONTACT B
M5010-82541	CONTACT C
M5010-82551	CONTACT D
M5010-82561	CONTACT E
M5010-83101	WINDING BASE PLATE
M5010-83151	MOTOR CLUTCH HUB

  


M5010-83171	MOTOR GEAR
M5010-83181	SCREW
M5010-83211	MIDDLE GEAR
M5010-83231	WASHER
M5010-83271	STOPPER
M5010-83311	WINDING GEAR
M5010-83352	FILM SPOOL HOLDER
M5010-83411	COLLAR
M5010-8343T1	DISK
M5010-8346T1	FRICITION DRIVE ASS'Y
M5010-83531	SPRING
M5010-8354T2	CHARGING LEVER
M5010-83551	COLLAR
M5010-83582	SPRING
M5010-8361T2	RELEASE LEVER
M5010-83642	SPRING
M5010-83672	SPRING
M5010-83761	SECTOR GEAR
M5010-8381T1	SECTOR GEAR BASE
M5010-8414T2	HOOK GEAR
M5010-8421T1	HOOK*****
M5010-8431T1	PREVENTIVE LEVER ASS'Y *****
M5010-8431T2	PREVENTIVE LEVER ASSY
M5010-8441T1	WINDING BASE PLATE
M5010-84451	WINDING STOP GEAR
M5010-84461	WASHER
M5010-84471	STOP RING
M5010-84491	HPLDER
M5010-8451T1	STOP LEVER
M5010-84541	SPRING
M5010-84651	HUB
M5010-84661	SPRING
M5010-84731	SPRING
M5010-8475T2	S LEVER
M5010-84761	SHOULDER SCREW
M5010-84792	SPRING
M5010-84811	SIGNAL LEVER
M5010-8511T1	RELEASE LEVER
M5010-85172	SPRING
M5010-8521T1	NO.2 GEAR
M5010-85231	NO.2 GEAR
M5010-85351	SPRING
M5010-85411	EXPOSURE COUNTER
M5010-85451	HUB
M5010-8551T2	DIVIDING DISK
M5010-8554T2	DIVIDING DISK
M5010-85561	HOOK
M5010-85571	SPRING
M5010-8561T1	FILM COUNTER GEAR
M5010-85641	HUB
M5010-85651	SCREW
M5010-85691	COLLAR
M5010-85711	SHAFT
M5010-85731	SCREW
M5010-8577T1	SELECT LEVER
M5010-85781	APRING

  



M5010-85811	SIGNAL PLATE
M5010-85911	SPOOL HOLDER
M5010-8611T2	MAIN FRAME
M5010-86212	PRESSURE PLATE (6X7)
M5010-8624T1	SHAFT
M5010-86251	SPRING
M5010-86291	SCREW
M5010-8637T1	SP-SPRING
M5010-8642T2	COUNTER ROLLER
M5010-8644T2	ROLLER
M5010-86461	COLLAR
M5010-86472	COLLAR
M5010-86482	SHAFT
M5010-86541	SHAFT
M5010-8661T1	MOTOR ASS'Y
M5010-8662T1	FRICITION DRIVE ASS'Y
M5010-86741	RUBBER
M5010-86751	RUBBER A
M5010-86761	RUBBER B
M5010-86771	RUBBER C
M5010-86781	HOLDER PLATE
M5010-86811	PLATE
M5010-87102	BOTTOM PLATE ASS'Y
M5010-87231	HOLDER
M5010-87311	SPOOL HOLDER
M5010-87322	SPRING WASHER
M5010-87331	HOLDER
M5010-87341	WASHER
M5010-8751T1	P.C. BOARD
M5010-8756T1	SWITCH PLATE
M5010-87611	HOLDER
M5010-87661	SEALING STRIP
M5010-87671	SEALING STRIP
M5010-88101	TOP COVER ASS'Y
M5010-88111	TOP COVER
M5010-88131	SCREW (PB1.7X4.5)
M5010-88211	FILM ADVANCE KNOB
M5010-88231	DISK
M5010-88241	HUB
M5010-88251	SPRING WASHER
M5010-88261	SELECT KNOB
M5010-88271	LEAF SPRING
M5010-88311	MULTI KNOB
M5010-88321	LEAF SPRING
M5010-88331	MULTI LEVER
M5010-88341	HUB
M5010-88361	SPRING
M5010-88411	START BUTTON
M5010-88421	LEAF SPRING
M5010-88501	BOTTOM COVER ASS'Y
M5010-88511	BOTTOM COVER
M5010-88551	BC BUTTON
M5010-88561	BC WINDUW
M5010-88571	LEAF SPRING
M5010-88611	POWER SWICH KNOB
M5010-88621	LEAF SPRING

  



M5011-8111T1	FILM HOLDER FRAME ASS'Y
M5011-81231	SPRING
M5011-81411	FILM GUIDE
M5011-82481	LEATHERETTE L
M5011-82491	SEAL (6X8)
M5011-83101	WINDING BASE PLATE
M5011-85411	EXPOSURE COUNTER
M5011-8551T1	EXPOSURE COUNTER DIVIDING
M5011-8551T2	E-CONTER DIVIDING DISK
M5011-8554T1	AUXILIARY DIVIDING DISK*****
M5011-8554T1-	AUXILIARY DIVIDING DISK
M5011-8554T2	AUXILIARY DIVIDNG DISK
M5011-8611T2	MAIN FRAME
M5011-86212	PRESSURE PLATE
M5011-8651T2	ROLLER
M5011-86541	SHAFT
M5011-87101	BOTTOM PLATE ASS'Y
M5011-87102	BOTTOM PLATE ASS'Y
M5011-88101	TOP COVER ASS'Y
M5011-88111	TOP COVER
M501-2013	MAIN DRIVE SPRING*****
M501-2013	MAIN DRIVE SPRING
M501-3028	SPEED REGULATING GOVERNOR
M5020-02121	WASHER T=0.15 (LG111-212)
M5020-02131	WASHER T=0.5 (LG111-213)
M5020-02141	WASHER T=0.05 (LG111-214)
M5020-02151	WASHER T=0.1 (LG111-215)
M5020-02161	WASHER T=0.2 (LG111-216)
M5020-02171	WASHER T=0.3 (LG111-217)
M5020-02181	WASHER T=0.8 (LG111-218)
M5020-02191	WASHER T=0.08 (LG111-219)
M5020-02231	LEVER (LG111-223)
M5020-02241	FIXTURE (LG111-224)
M5020-02251	SCREW (LG111-225)
M5020-02271	KNOB (LG111-227)
M5020-02311	RING (LG111-231) *****
M5020-02312	INDEX RING (LG111-231P)
M5020-02331	BALL (LG111-233)
M5020-02341	SPRING (LG111-234)
M5020-02351	RING (LG111-235)
M5020-02361	PLATE (LG111-236)
M5020-02371	RING (LG111-237)
M5020-0241T1	LEVER (LG111-241K2)
M5020-02421	SPRING (LG111-242)
M5020-02431	HOLDER (LG111-243)
M5020-02441	HUB (LG111-244)
M5020-02511	BUTTON (LG111-251)
M5020-02521	SPRING (LG111-252)
M5020-02531	CAP (LG111-253)
M5020-02551	GUIDE (LG111-255)
M5020-02561	ROD (LG111-256)
M5020-0261T1	LEVER (LG111-261K2)
M5020-02621	KNOB (LG111-262)
M5020-02631	SPRING (LG111-263)
M5020-02641	COVER (LG111-264)
M5020-02651	SCREW (LG111-265)

 



M5020-02661	SCREW (LG111-266)
M5020-02681	COVER (LG111-268)
M5020-0271T1	M-X SELECTOR (LG111-271K2)
M5020-02761	SPRING (LG111-276)
M5020-03131	PIN (LG111-313)
M5020-03141	SPRING (LG111-314)
M5020-03151	GUIDE (LG111-315)
M5020-03161	BASE (LG111-316)
M5020-03221	SPACER (LG111-322)
M5020-03241	SPRING (LG111-324)
M5020-0332T1	STOPPER (LG111-332K2)
M5020-03351	PIN (LG111-335)
M5020-03361	SPRING (LG111-336)
M5020-03421	STOPPER (LG111-342)
M5020-03431	PIN (LG111-343)
M5020-03441	PLATE (LG111-344)
M5020-03451	PIN (LG111-345)
M5020-03461	SCREW (LG111-346)
M5020-03531	STOPPER (LG111-353)
M5020-03541	KNOB (LG111-354)
M5020-03551	SPRING (LG111-355)
M5020-0513T1	LENS HOOD (524015)
M5021-0911T1	B-RELEASE (LG112-911K2)
M5022-01001	LENS ASS'Y (LG251-00-MC)
M5022-01221	RING (LG251-122)
M5022-03111	BASE BARREL (LG251-311)
M5022-0312T1	LEVER (LG251-312K2)
M5022-0331T1	COVER (LG251-331K2)
M5022-03391	SCREW (LG251-339)
M5022-03411	BAYONET RING (LG251-341)
M5022-03511	RING (LG251-351)
M5022-03512	RING
M5022-03521	RING (LG251-352)
M5025-02121	NUT (LE101-212)
M5027-01001	LENS (LE103-00-MC)
M5027-01221	RING (LE103-122)
M5027-02141	SCREW (LE103-214)
M5027-02351	RING (LE103-235)
M5027-0331T1	COVER (LE103-331K2)
M5027-03411	BAYONET RING (LE103-341)
M5027-03512	RING
M5027-03521	RING (LE103-352)
M5027-03522	RING
M5027-03531	STOPPER
M5027-03541	KNOB (LE103-354)
M5027-03571	PLATE
M5027-03611	BASE (LE103-361)
M5027-03671	PLATE (LE103-367)
M5027-03681	WASHER (LE103-368)
M5031-01001	LENS ASS'Y
M5031-03511	BARREL (LI121-351)
M5031-03521	RING (LI121-352)
M5031-03561	RING (LI121-356)
M5035-01011	LENS (LK30-00-MC)
M5035-01241	COVER (LK31-124)
M5035-01251	PLATE (LK31-125)

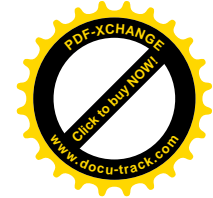  


M5035-01271	WASHER T=0.05 (LK31-127)
M5035-01281	WASHER T=0.1 (LK31-128)
M5035-01291	WASHER T=0.15 (LK31-129)
M5035-01321	PIN (LK31-132)
M5035-01361	WASHER T=0.2 (LK31-136)
M5035-02211	RING (LK31-221)
M5035-02221	RING (LK31-222)
M5035-02371	BARREL (LK31-237)
M5035-03111	BARREL (LK31-311)
M5035-0312T1	LEVER (LK31-312K2)
M5035-03241	SPRING (LK31-324)
M5035-03251	RING (LK31-325)
M5035-0331T1	COVER (LK31-331K2)
M5035-0332T1	STOPPER (LK31-332K2)
M5035-03511	RING (LK31-351)
M5035-03521	RING (LK31-352)
M5035-03531	WASHER (LK31-353)
M5035-03551	SPRING (LK31-355)
M5035-03561	RING (LK31-356)
M5038-01001	LENS ASS'Y (LH110-00-MC)
M5038-01441	PIN (LH111-144)
M5038-02371	BARREL (LH111-237)
M5038-03511	RING (LH111-351)
M5038-03521	RING (LH111-352)
M5038-03561	RING (LH111-356)
M5041-01001	LENS ASS'Y (LE170-00-MC)
M5041-01141	RING (LE171-114)
M5041-01151	PLATE (LE171-115)
M5041-01161	PLATE (LE171-116)
M5041-01171	PLATE (LE171-117)
M5041-01211	RING (LE171-121)
M5041-01221	RING (LE171-122MC)
M5041-02211	RING (LE171-221)
M5041-02222	RING (LE171-222)
M5041-02231	LEVER (LE171-223)
M5041-03111	BARREL (LE171-311)
M5041-0312T1	RING (LE171-312K2)
M5041-03151	GUIDE (LE171-315)
M5041-03161	BASE (LE171-316)
M5041-03311	COVER (LE171-331)
M5041-0331T1	COVER (LE171-331K2)
M5041-0332T1	STOPPER (LE171-332K2)
M5041-03331	PIN (LE171-333)
M5041-0345T1	PIN (LE171-345K2)
M5041-03521	RING (LE171-352)
M5041-0513T1	LENS LOCATION PIN
M5043-02121	NUT (LE121-212)
M5043-03251	RING (LE121-325)
M5043-03511	RING (LE121-351)
M5043-03521	RING (LE121-352)
M5044-01111	BARREL (LE122-111)
M5044-02121	SHUTTER COVER (LE-122-212)
M5044-0212T1	COVER (LE122-212K2)
M5044-02131	PIN (LE122-213)
M5044-02141	NUT (LE122-214)
M5044-02161-A	WASHER (LE122-216-A)

  



M5044-02161-B	WASHER (LE122-216-B)
M5044-02161-C	WASHER (LE122-216-C)
M5044-02161-D	WASHER (LE122-216-D)
M5044-02161-E	WASHER (LE122-216-E)
M5044-02171	NUT (LE122-217)
M5044-02211	RING (LE122-221)
M5044-03111	BASE BARREL (LE122-311)
M5044-03311	MOUNT RING (LE122-331)
M5045-01001	LENS ASS'Y (LE251-00)
M5045-01011	FRONT LENS (LE251-00-1)
M5045-01012	REAR LENS (LE251-00-2)
M5045-01111	RING (LE251-111)
M5045-01171	BAFFLE (LE251-117)
M5045-01181	RING (LE251-118)
M5045-03111	RING (LE251-311)
M5045-0312T1	LEVER (LE251-312K2)
M5045-03311	BARREL (LE251-331)
M5045-03531	COVER (LE251-353)
M5047-01011	FRONT LENS (LH80-001)
M5047-01021	REAR LENS (LH80-002)
M5047-01161	RING (LH81-116)
M5047-01171	RING (LH81-117)
M5047-01261	WASHER (LH81-126)
M5047-02141	NUT (LH81-214)
M5047-02221	RING (LH81-222)
M5047-03521	RING (LH81-352)
M5049-01011	LENS ASS'Y (LF501-00)
M5049-0116T1	BARREL (LF501-116K2)
M5049-03521	RING (LF501-352)
M5049-03561	RING (LF501-356)
M5050-00011	LENS ASS'Y #1
M5050-00021	LENS ASS'Y #2
M5050-01001	REAR LENS ASS'Y
M5050-01002	FRONT LENS ASS'Y
M5050-01003	LENS ASS'Y
M5050-0111T1	BARREL & LENS ASS'Y
M5050-01121	NAME RING
M5050-01131	SPACER
M5050-0121T1	BARREL A
M5050-0122T1	BARREL B
M5050-01231	LIGHT BAFFLE
M5050-01241	LIGHT BAFFLE
M5050-01411	ADJUSTING WASHER
M5050-01421	ADJUSTING WASHER
M5050-01431	ADJUSTING WASHER
M5050-01441	ADJUSTING WASHER
M5050-0212T1	SHUTTER COVER (LE-122-212)
M5050-02131	STOPPER PIN
M5050-0214T1	SHUTTER FIXING UNIT
M5050-03111	BASE BARREL
M5050-03281	COUPLING BARREL
M5050-331	BASE BARREL
M5051-08191	SHAFT
M5055-01011	FRONT LENS (LG261-01-MC)
M5055-01041	MIDDLE LENS (LG260-04-MC)
M5055-01061	REAR LENS (LG260-06-MC)

  



M5055-01261	RING (LG261-126)
M5055-01271	RING (LG261-127)
M5055-0212T1	COVER (LG261-212K2)
M5055-02131	RING (LG261-213)
M5055-02141-A	WASHER (LG261-214-A) 0.05
M5055-02141-B	WASHER (LG261-214-B) 0.1
M5055-02141-C	WASHER (LG261-214-C) 0.3
M5055-02141-D	WASHER (LG261-214-D) 0.5
M5055-02141-E	WASHER (LG261-214-E) 1.0
M5055-02151	RING (LG261-215)
M5055-02161	RING (LG261-216)
M5055-02171	PIN (LG261-217)
M5055-02181	ARM (LG261-218)
M5055-02811	RING (LG261-281)
M5055-02841	RING (LG261-284)
M5055-02851	PIN (LG261-285)
M5055-03111	BARREL (LG261-311)
M5055-03311	MOUNTING RING (LG261-331)
M5055-03411	RING (LG261-341)
M5055-03512	RING (LG261-351-2-C)
M5055-0352T1	FOCUSING (LG261-352K2-C)
M5055-03541	SPRING (LG261-354)
M5055-03551	STOPPER (LG261-355)
M5055-03561	NAME RING (LG261-356)
M5060-02211	FIXING RING
M5060-02212	FIXING RING
M5060-02411	LEVER
M5060-02431	LEAF SPRING
M5060-02811	CAM GUIDE
M5060-0283T1	CAM LRNER
M5060-0285T1	APERTURE INTERLINK PLTE
M5060-02871	HOLDER
M5060-0288T1	APERTURE CONROL RING
M5060-02921	FIXING RING
M5060-04111	APERTURE RING
M5060-04121	APERTURE INTERLINK ARM
M5060-04141	PAWL
M5060-04161	STOPPER PIN
M5060-04221	SHUTTER SPEED RING
M5060-04231	CONTROL LEVER
M5060-04251	STOPPER
M5060-04311	SHUTTER COVER
M5060-04312	SHUTTER COVER
M5060-04421	BUTTON
M5060-04431	SPRING
M5060-04441	FITTING PLATE
M5060-04451	SHAFT
M5060-04501	ZOOM RING ASS'Y
M5060-04781	RUBBER GRIP
M5060-04791	RUBBER GRIP (5160-04791)
M5060-04831	LIGHT BAFFLE
M5060-05211	BASE BARREL
M5060-05221	COUPLING RING
M5060-05251	GUIDE
M5060-05291	FIXING NUT
M5060-05411	BARREL

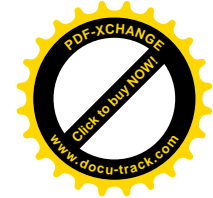 



M5060-05421	LIGHT BAFFLE
M5060-05451	COUPLING BARREL
M5060-05671	COVER PLATE
M5061-01311	SPACER
M5065-01011	FRONT LENS (LE311-001)
M5065-01021	REAR LENS (LE311-002)
M5065-01211	RING (LE311-121)
M5065-01221	RING (LE311-122)
M5065-0131T1	DISK (LE311-131K2)
M5065-0133T1	DISK (LE311-133K2)
M5065-0135T1	DISK (LE311-135K2)
M5065-02141	NUT (LE311-214)
M5065-02151	RING (LE311-215)
M5065-02221	RING (LE311-222)
M5065-02291	RING (LE311-229)
M5065-0281T1	LEVER (LE311-281K2)
M5065-02911	PLATE (LE311-291)
M5065-02921	ANCHOR (LE311-292)
M5065-02941	SPRING (LE311-294)
M5065-02951	SPRING (LE311-295)
M5065-03111	BASE BARREL (LE311-311)
M5065-03121	LEVER (LE311-312)
M5065-0312T1	LEVER (LE311-312K2)
M5065-03531	COVER (LE311-353)
M506-72431	BATTERY CHAMBER COVER
M5067-76	EYECUP (RS7617)
M5067-76211	FINDER BASE FRAME
M5067-76911	PENTA PRISM
M5067-76931	EYE PIECE FRAME
M5067-70011	FINDER BASE FRAME
M5067-70211	TOP COVER
M5067-76211	FINDER FRAME
M5069 55021	RELEASE BUTTON
M5069 5503T1	RELEASE ROD A
M5069 55041	RELEASE ROD B
M5069 55071	SCREW
M5069 55081	SPRING
M5069-55111	CABLE RELEASE
M5069-55211	CABLE RELEASE
	SHUTTER CASING
M5070-6113T1	SEALING PLATE
M5070-61161	ROLLER (RSH-6116)
M5070-61171	BRACKET (RSH-6117)
M5070-61191	FELT (RSH-6119)
M5070-6121T1	LATCH (RSH-612K2)
M5070-61231	GUIDE (RSH-6123)
M5070-61251	POLE (RSH-6125)
M5070-6126T1	LATCH COVER (RSH-6126K2)
M5070-61341	LOCK COVER (RSH-6134)
M5070-61361	COVER (RSH-6136)
M5070-61381	LEATHERTTE (RSH-6138)
M5070-6211T2	BACK LID (RSH-6211K2)
M5070-62121	HINGE (RSH-6212)
M5070-62141	SHAFT (RSH-6214)
M5070-62271	SEALING STRIP (RSH-6227)
M5027-03611	BASE

  



M5070-62281	SEALING STRIP (RSH-6228)
M5070-62291	SEALING STRIP (RSH-6229)
M5070-63011	LEAF SPRING (RSH-6318K)
M5070-6311T1	PLATE HOLDER (RSH-6311K2)
M5070-63131	LEAF SPRING (RSH-6313)
M5070-6315T1	PLATE (RSH-6315K2)
M5070-63171	SCREW (RSH-6317)
M5070-63221	LEAF SPRING (RSH-6322)
M5070-63241	BRACKET (RSH-6324)
M5070-63261	SHOULDER SCREW (RSH-6326)
M5070-6331T1	BASE PLATE U (RSH-6331K2)
M5070-6332T1	BASE PLATE U (RSH-6332K2)
M5070-63331	FILM GUIDE U (RSH-6333)
M5070-63341	FILM GUIDE L (RSH-6334)
M5070-63351	FILM GUIDE U (RSH-6335)
M5070-63361	FILM GUIDE L (RSH-6336)
M5070-63391	SPRING WASHER (RSH-6339)
M5070-6341T1	ROLLER (RSH-6341K2)
M5070-6343T1	SHAFT ASS'Y (RSH-6343K2)
M5070-63441	BUSH (RSH-6344)
M5070-63451	SHOULDER SCREW (RSH-6345)
M5070-6346T1	ROLLER (RSH-6346K2)
M5070-63481	SHAFT (RSH-6348)
M5070-64111	BASE PLATE (RSH-6411)
M5070-64131	WINDING LEVER (RSH-6413)
M5070-64141	SHOULDER SCREW (RSH-6414)
M5070-64151	DISK (RSH-6415)
M5070-64161	SHAFT (RSH-6416)
M5070-64171	HUB (RSH-6417)
M5070-6419T1	DISK (RSH-6419K2)
M5070-64221	SPRING (RSH-6422)
M5070-64231	STUD (RSH-6423)
M5070-64241	WINDING GEAR 1 (RSH-6424)
M5070-64251	SCREW (RSH-6425)
M5070-64261	WINDING GEAR 2 (RSH-6426)
M5070-64271	DISK (RSH-6427)
M5070-64281	DLUTCH GEAR (RSH-6428)
M5070-6435T1	PAWL (RSH-6428)
M5070-64381	WINDING GEAR 3 (RSH-6438)
M5070-64391	HUB (RSH-6439)
M5070-64411	HOLDER (RSH-6441)
M5070-64421	SPRING WASHER (RSH-6442)
M5070-64441	NUT (RSH-6444)
M5070-6451T1	LEVER (RSH-6451K2)
M5070-64531	SPRING (RSH-6453)
M5070-64551	PAWL (RSH-6455)
M5070-6461T2	LEVER (RSH-6461K2)
M5070-64631	SHOULDER SCREW (RSH-6463)
M5070-64641	SPRING (RSH-6464)
M5070-64651	RELEASE LEVER (RSH-6465)
M5070-64661	SHOULDER SCREW (RSH-6466)
M5070-64671	SPRING (RSH-6467)
M5070-64741	SHOULDE SCREW (RSH-6474)
M5070-6475T1	PLATE (RSH-6475K2)
M5070-64791	SHOULDER SCREW (RSH-6479)
M5070-64811	SPRING (RSH-6481)

  



M5070-64831	HUB (RSH-6483)
M5070-64951	SPRING (RSH-6495)
M5070-64982	SCREW (RSH-6498)
M5070-6511T1	PLATE (RSH-6511K2)
M5070-6513T1	SIGNAL PLATE (RSH-6513K2)
M5070-65161	SPRING (RSH-6516)
M5070-65171	HOLDER (RSH-6517)
M5070-65221	SPRING (RSH-6522)
M5070-6523T1	PAWL (RSH-6523K2)
M5070-65241	SHOULDER SCREW (RSH-6524)
M5070-65251	SPRING (RSH-6525)
M5070-65261	CONNECTOR (RSH-6526)
M5070-65271	POLE (RSH-6527)
M5070-65281	GUIDE (RSH-6528)
M5070-65291	SHOULDER SCREW (RSH-6529)
M5070-65311	SEALING (RSH-6338-1)
M5070-65321	SEALING (RSH-6338-2)
M5070-66111	HOULDER (RSH-6611)
M5070-6612T1	HOULDER PLATE (RSH-6612K2)
M5070-66131	SHAFT (RSH-6613)
M5070-66151	LEAF SPRING (RSH-6615)
M5070-66191	COLLAR PAPER (RSH-6619)
M5070-66211	TOP COVER (RSH-6621)
M5070-66241	COVER PLATE (RSH-6624)
M5070-66261	SIGNAL WINDOW (RSH-6626)
M5070-66271	COUNTER WINDOW (RSH-6627)
M5070-66281	SIGNAL MASK (RSH-6628)
M5070-66291	COUNTER MASK (RSH-6629)
M5070-66311	BOTTOM COVER (RSH-6631)
M5070-66341	COVER PLATE (RSH-6634)
M5070-66361	SEALING STRIP (RSH-6636)
M5070-66371	PLATE (RSH-6637)
M5070-67111	SLIDE COVER (RSH-6711)
M5070-6711T1	SLIDE COVER (RSH-6711K2)
M5070-67121	KNOB (RSH-6712)
M5070-67131	FIXTURE (RSH6713)
M5070-67141	RIVET (RSH-5714)
M5070-67161	PLATE (RSH-6716)
M5070-68111	LEATHERTTE (RSH-6811)
M5070-68121	LEATHERTTE (RSH-6812)
M5070-68131	LEATHERTTE (RSH-6813)
M5070-68141	LEATHERTTE (RSH-6814)
M5070-68161	LEATHERTTE (RSH-6816)
M5070-68171	NAME PLATE (RSH-6817)
M5070-69371	D. PLATE (RSH-6937)
M5071-61011	FRAME ASS'Y (ARSH-6111K2)
M5071-61161	FILM ROLLER (ARSH-6116)
M5071-61171	COLLAR (ARSH-6117)
M5071-61181	LEAF SPRING (ARSH-6118)
M5071-61191	SCREW (4PB1.4X1.3)
M5071-6121T1	LATCH (ARSH-6121K2)
M5071-61231	GUIDE (ARSH-6123)
M5071-61321	PLATE (ARSH-6132)
M5071-61341	LOCK COVER (ARSH-6134)
M5071-61391	SEALING STRIP (ARSH-6139)
M5071-61411	COLLAR (ARSH-6141)

  



M5071-61421	PIN (ARSH-6142)
M5071-6211T1	BACK COVER (ARSH-6211K2)
M5071-63011	SP-SPRING (ARSH-6319K2)
M5071-6311T1	HOLDER (ARSH-6311K2)
M5071-6315T1	PLATE (ARSH-6315K2)
M5071-63261	SCREW (ARSH-6326)
M5071-63271	SP-SPRING BACE (ARSH-6327)
M5071-63281	NAME PLATE (ARSH-6328)
M5071-6331T1	BASE PLATE (ARSH-6331K2)
M5071-63321	BOTTOM PLATE
M5071-63331	FILM GUIDE R (ARSH-6333)
M5071-63341	FILM GUIDE R (ARSH-6334)
M5071-63351	FILM GUIDE L (ARSH-6335)
M5071-63361	FILM GUIDE L (ARSH-6336)
M5071-6341T1	ROLLER (ARSH-6341K2)
M5071-63431	ROLLER (ARSH-6343)
M5071-6343T1	ROLLER (ARSH-6343K2)
M5071-63441	RUBBER (ARSH-6344)
M5071-63451	COLLAR (ARSH-6345)
M5071-63461	SHAFT (ARSH-6346)
M5071-6347T1	ROLLER (ARSH-6347K2)
M5071-6411T3	BASE PLATE (ARSH-6411K2)
M5071-64161	SHAFT (ARSH-6416)
M5071-64172	HUB (ARSH-6417)
M5071-64181	RIVET (ARSH-6418)
M5071-6419T1	DISK (ARSH-6419K2)
M5071-64222	SPRING (ARSH-6422)
M5071-64231	RIVET (ARSH-6423)
M5071-6424T1	GEAR 1 (ARSH-6424K2)
M5071-64261	GEAR 2 (ARSH-6426)
M5071-64281	CLUTCH GEAR (ARSH-6428)
M5071-6431T1	STOP GEAR (ARSH-6431K2)
M5071-6435T1	PAWL (ARSH-6435K2)
M5071-64411	ROLLER*****
M5071-64411-	ROLLER
M5071-6451T1	LEVER (ARSH-6451K2)
M5071-64531	SPRING (ARSH-6453)
M5071-6461T2	PLATE (ARSH-6461K2)
M5071-64642	SPRING (ARSH-6464)
M5071-64671	SPRING (ARSH-6467)
M5071-64711	FIRST GEAR (ARSH-6471)
M5071-6472T1	SECOND GEAR (ARSH-6472K2)
M5071-64731	GEAR (ARSH-6273)
M5071-6476T1	THIRD GEAR (ARSH-6476K2)
M5071-64791	SCREW (ARSH-6479)
M5071-64811	SPRING (ARSH-6481)
M5071-64821	SHAFT (ARSH-6482)
M5071-64831	BASE DISK (ARSH-6483)
M5071-6484T1	DENICE (ARSH-6484K2)
M5071-6485T1	DISK (ARSH-6485K2)
M5071-64911	GEAR (ARSH-6491)
M5071-64931	COUNTER GEAR (ARSH-6493)
M5071-64962	SPRING (ARSH-6496)
M5071-65311	STRIP R (ARSH-6338-1)
M5071-65321	STRIP L (ARSH-6338-2)
M5071-65331	GUIDE PLATE R (ARSH-6339-1)

  



M5071-65341	GUIDE PLATE L (ARSH-6339-2)
M5071-65431	SCREW (ARSH-6463-1)
M5071-65441	NUT (ARSH-6463-2)
M5071-661121	COLLAR (ARSH-6612)
M5071-6611T1	HOLDER (ARSH-6611K2)
M5071-66121	COLLAR*****
M5071-66121-	COLLAR
M5071-66151	LEAF SPRING (ARSH-6615)
M5071-6621T1	TOP COVER (ARSH-6621K2)
M5071-66251	RED DISK (ARSH-6625)
M5071-66291	MASK (ARSH-6629)
M5071-66411	HOULDER (ARSH-6641)
M5071-66431	COLLAR (ARSH-6643)
M5071-66441	SCREW (ARSH-6644)
M5071-66451	SCREW (ARSH-6645)
M5071-66461	SPOOL HOLDER (ARSH-6646)
M5071-66471	SPRING WASHER (ARSH-6647)
M5071-66481	SHOULDER SCREW*****
M5071-66481-	SHOULDER *****voir MY5071-66482
M5071-66482	SCREW (ARSH-6648)
M5071-67111	SLIDE COVER (ARSH-6711)
M5071-67121	HANDLE BAR (ARSH-6712)
M5071-67171	LOCK LEVER (ARSH-6717)
M5071-67181	SCREW (ARSH-6718)
M5071-67191	SPRING (ARSH-6719)
M5071-68151	LEATHERETTE (ARSH-6815)
M5071-7112T1	LEVER (ARSH-7112K2)
M5071-71151	SPRING (ARSH-7115)
M5071-71161	HUB (ARSH-7116)
M5071-7119	SPRING (ARSH-7119)
M5071-71191	SPRING
M5071-71211	LEVER (ARSH-7121)
M5071-71221	ANCHOR SCREW (ARSH-7112)
M5071-71222	SCREW (ARSH-71221C)
M5071-71231	SPRING (ARSH-7123)
M5071-71271	SPRING (ARSH-7127)
M5071-71291	CUSHION (ARSH-7129)
M5071-7131T1	HOOK (ARSH-7131K2)
M5071-71341	SPRING (ARSH-7134)
M5071-71371	SIGNAL HOLDER (ARSH-7137)
M5071-7144T1	PAWL (ARSH-7114K2)
M5071-71511	SECTOR GEAR (ARSH-7151)
M5071-7153T1	BASE (ARSH-7153K2)
M5071-71571	SHAFT (ARSH-7157)
M5071-71591	SCREW (ARSH-7159)
M5071-7161T1	LEVER ASS'Y (ARSH-7161K2)
M5071-71681	SPRING (ARSH-7168)
M5071-71711	RED SIGNAL (ARSH-7171)
M5071-71731	SIGNAL LEVER (ARSH-7173)
M5071-71751	SPRING (ARSH-7175)
M5071-71761	STUD (ARSH-7176)
M5071-7177T2	S LEVER (ARSH-7177K2)
M5071-71781	SCREW (ARSH-7178)
M5071-71791	SPRING (ARSH-7179)
M5072-6311T1	HOULDER (BRSH-6311K2)
M5072-63271	BASE (BRSH-6327)

  



M5072-63281	NAME PLATE (BRSH-6328)
M5072-6331T1	BASE PLATE (BRSH-6331K2)
M5072-63321	BASE PLATE (BRSH-6332)
M5072-63331	FILM GUIDE (BRSH-6333)
M5072-63341	FILM GUIDE (BRSH-6334)
M5072-6341T1	ROLLER (BRSH-6341K2)
M5072-6344T1	ROLLER (BRSH-6344K)
M5072-63451	COLLAR (BRSH-6345)
M5072-6472T1	GEAR (BRSH-6472K2)
M5072-6611T1	HOLDER (BRSH-6611K2)
M5072-66151	LEAF SPRING (BRSH-6615)
M5072-6915T1	PLATE (BRSH-6915K2)
M5072-69591	WASHER (PCP-562)
M5072-69731	GEAR (BRSH-6973)
M5072-6976T1	THIRD GEAR (BRSH-6976K2)
M5072-6984T1	DENICE (BRSH-6984K2)
M5072-6985T1	DISK (BRSH-6985K2)
M5072-69911	GEAR (BRH-6991)
M5072-69931	DISK (BRSH-6993)
M5073-6111T1	HOLDER FRAME (RSS-611K2)
M5073-61311	PLATE (RSS-6131)
M5073-6211T1	BACK COVER (RSS-6211K2)
M5073-6431T1	W. STOP GEAR (RSS-6431K2)
M5073-64381	WINDING GEAR 3 (RSS-6438)
M5073-6461T1	R.L. PLATE (RSS-6461K2)
M5073-6472T1	SECOND GEAR (RSS-6472K2)
M5073-6476T1	THIRD GEAR (RSS-6476K2)
M5073-6484T1	C.D. DEVICE (RSS-6484K2)
M5073-6485T1	A.D. DISK (RSS-6485K2)
M5073-64911	F.C. GEAR (RSS-6491)
M5073-64931	E.C. PLATE (RSS-6493)
M5073-65331	POLE (RSS-6533)
M5073-68111	LEATHERETTE (RSS-6811)
M5073-68151	LEATHERETTE (RSS-6815)
M5073-68161	W.LEVER DISK (RSS-6816)
M5073-6821T1	MASK (RSS-6821K2)
M5073-68231	F. FORMAT MASK (RSS-6823)
M5073-68241	FRAME (RSS-6824)
M5073-68251	LEATHERETTE (RSS-6825)
M5075-71132	FRESNEL LENS (RS-71132)
M5076-71232	MICRO PRISM (RS-71232)
M5077-71322	CHEDKER GLASS (RS-71322)
M5078-71432	GLASS (RS-71432)
M5079-71632	FRESNEL LENS (RS-71632)
M5081-6311T1	PLATE HOLDER (RSW-6311K2)
M5081-6331T1	BASE PLATE U (RSW-6331K2)
M5081-6334T1	FILM GUIDE (RSW-6334K2)
M5081-63351	FILM GUIDE (RSW-6335)
M5081-6344T1	COUNTER ROLLER (RSW-6344)
M5081-6411T1	BASE PLATE (RSW-6411K2)
M5081-64671	SPRING (RSW-6467)
M5081-64681	SCREW (RSW-6468)
M5081-6621T1	TOP COVER (RSW-6621K2)
M5081-6624T1	COVER PLATE (RSW-6624K2)
M5081-66341	COVER PLATE (RSW-6634)
M5081-66371	D. PLATE (RSW-6637)

  



M5081-68111	LEATHERETTE (RSW-6811)
M5081-6984T1	C.D. DEVICE (RSW-6984K2)
M5081-69911	F. COUNTER GEAR (RSW-6881)
M5081-71161	COLLAR (RSW-7116)
M5081-7138T1	P. LEVER (RSW-718K2)
M5081-8111T1	BASE PLATE (RSW-8111K2)
M5081-8115T1	PLATE (RSW-8115K2)
M5081-8116T1	PLATE (RSW-8116K2)
M5081-81211	SHAFT (RSW-8121)
M5081-81231	SHAFT (RSW-8123)
M5081-81241	SHAFT (RSW-8124)
M5081-81311	MOTOR (RSW-8131)
M5081-8132T1	DISK (RSW-8132K2)
M5081-81341	COLLAR (RSW-8134)
M5081-81351	SHAFT (RSW-8135)
M5081-81391	SPONGE (RSW-8139)
M5081-81411	BEVEL GEAR (RSW-8141)
M5081-81421	COVER (RSW-8142)
M5081-81451	BEVEL GEAR (RSW-8145)
M5081-8146T1	GEAR (RSW-8146K2)
M5081-81471	SHAFT (RSW-8147)
M5081-81481	SCREW (RSW-8148)
M5081-81511	GEAR (RSW-8151)
M5081-81521	SHAFT (RSW-8152)
M5081-8157T1	DISK (RSW-8157K2)
M5081-81581	SHAFT (RSW-8158)
M5081-8161T1	DISK (RSW-8161K2)
M5081-81621	SPRING (RSW-8162)
M5081-8171T1	CLUTCH GEAR (RSW-8171K2)
M5081-8173T1	GEAR (RSW-8173K2)
M5081-81751	SPRING (RSW-8175)
M5081-82111	SOCKET (RSW-8211)
M5081-8221T1	SWITCH (RSW-8221K2)
M5081-82281	HOLDER (RSW-8228)
M5081-8311T1	SPOOL HOLDER (RSW-8311K2)
M5081-83131	SCREW (RSW-8313)
M5081-83171	SPACER (RSW-8317)
M5081-83211	SIGNAL LEVER (RSW-8321)
M5081-83221	RED SIGNAL (RSW-8322)
M5081-83261	SPOOL HOLDER (RSW-8326)
M5081-83281	SCREW (RSW-8328)
M5081-83411	COLLAR (RSW-8341)
M5081-8343T1	DISK (RSW-8343K2)
M5081-8351T1	SWITCH (RSW-8351K2)
M5081-83581	HOLDER (RSW-8358)
M5081-8361T1	SLIDE PLATE (RSW-8361K2)
M5081-83631	COLLAR (RSW-8363)
M5081-83641	SCREW (RSW-8364)
M5081-83651	SRING (RSW-8365)
M5081-83711	LEAD RED (RSW-8371)
M5081-83721	LEAD BLUE (RSW-8372)
M5081-83731	LEAD BLACK (RSW-8373)
M5081-83741	LEAD BLACK (RSW-8374)
M5081-83751	LEAD BLACK (RSW-8375)
M5081-8411T1	BASE PLATE (RSW-8411K2)
M5081-8413K3	SHAFT (RSW-8413K3)

  


M5081-84141	SCREW (RSW-8414)
M5081-8415T1	GEAR NO.2 (RSW-8415K2)
M5081-8421T1	GEAR (RSW-8421K2)
M5081-84271	GEAR NO.3 (RSW-8427)
M5081-84311	SPOOL (RSW-8431)
M5081-84321	NUT (RSW-8432)
M5081-84351	BOTTOM COVER (RSW-8435)
M5081-8441T1	LEVER (RSW-8441K2)
M5081-84441	SPRING (RSW-8444)
M5081-8446T1	LEVER (RSW-8446K2)
M5081-84481	TUBE (RSW-8448)
M5081-8451T1	PLATE HOLDER (RSW-6451K2)
M5081-84611	INDICATOR (RSW-8461)
M5081-84661	PLATE (RSW-8466)
M5081-84671	PLATE (RSW-8467)
M5081-84691	LOCK PLATE (RSW-8496)
M5081-84711	SHAFT (RSW-8471)
M5081-84731	LEVER (RSW-8473)
M5081-84751	SHAFT (RSW-8475)
M5081-84781	LEAF SPRING (RSW-8478)
M5081-84811	LATCH (RSW-8481)
M5081-84821	SPRING (RSW-8482)
M5081-84831	STOPPER (RSW-8483)
M5081-84851	BASE (RSW-8485)
M5081-84861	SPACER (RSW-8486)
M5081-84871	SCREW (RSW-8487)
M5082-12111	PANEL (ARS-1211)
M5082-8511T1	CHAMBER (RSW-8511K2)
M5082-85131	SCREW (RSW-8513)
M5082-85151	LOCKING KEY (RSW-8515)
M5082-85161	SCREW (RSW-8516)
M5082-85181	SPRING (RSW-8518)
M5082-85191	STUD (RSW-8519)
M5082-85221	SCREW (RSW-8522)
M5082-8525T1	PLATE (RSW-8525K2)
M5082-85271	COVER (RSW-8527)
M5082-85281	COVER (RSW-8528)
M5082-85291	BOTTOM PLATE (RSW-8529)
M5082-85311	CONTACT (RSW-8531)
M5082-8535T1	CONTACT (RSW-8535K2)
M5082-85411	COVER (RSW-8541)
M5082-85421	DISK (RSW-8542)
M5082-85441	LOCKING SCREW (RSW-8544)
M5082-85461	SWITCH COVER (RSW-8546)
M5082-85481	HOLDER (RSW-8548)
M5082-8551T1	PLATE (RSW-8551K2)
M5082-8553T1	LEVER (RSW-8553K2)
M5082-85551	SCREW (RSW-8555)
M5082-8556T1	LEVER (RSW-8556K2)
M5082-85571	SCREW (RSW-8557)
M5082-85581	SCREW (RSW-8558)
M5082-85591	SPRING (RSW-8559)
M5082-8561T1	STOP LEVER (RSW-8561K2)
M5082-85671	SECOND LEVER (RSW-8567)
M5082-85681	SHAFT (RSW-8568)
M5082-85691	SPRING (RSW-8569)

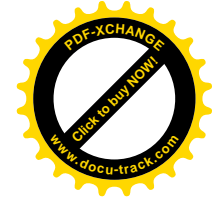  


M5082-8571T1	THIRD LEVER (RSW-8571K2)
M5082-85741	SPRING (RSW-8574)
M5082-85751	TUBE (RSW-8575)
M5082-8576T1	LEVER (RSW-8576K2)
M5082-85831	SPRING (RSW-8583)
M5082-8591T1	LEVER (RSW-8591K2)
M5082-85961	SPRING (RSW-8596)
M5082-85981	STOPPER (RSW-8598)
M5082-86141	ARMATURE (RSW-8614)
M5082-86151	SCREW (RSW-8615)
M5082-86211	COVER (RSW-8621)
M5082-86281	POWER SWITCH (RSW-8628)
M5082-86291	PLUG (RSW-8629)
M5082-86311	SWITCH (RSW-8631)
M5082-8636T1	PRINTED BOARD (RSW-8636K)
M5082-86411	PLATE (RSW-8641)
M5082-86511	LEAD RED (RSW-8651)
M5082-86521	LEAD BLUE (RSW-8652)
M5082-86531	LEAD GREEN (RSW-8653)
M5082-86541	LEAD BLACK (RSW-8654)
M5082-86551	LEAD BROWN (RSW-8655)
M5082-86561	LEAD PURPLE (RSW-8656)
M5082-86571	LEAD PURPLE (RSW-8657)
M5082-86581	LEAD GRAY (RSW-8658)
M5082-86591	LEAD GRAY (RSW-8659)
M5083-56121	BELLOWS (RS5612K)
M5083-56152	HOOD RING PLATE
M5083-56231	PIN
M5083-56341	LOCKING KNOB L
M5085-12111	PANEL (ARS-1211)
M5085-12121	SEALING STRIP (ARS- 1212)
M5085-1221T1	LOCK LEVER A (ARS-1221K2)
M5085-1222T1	LOCK LEVER B (ARS-1222K2)
M5085-12241	SHOULDER SCREW (ARS-1224)
M5085--12241	SHOULDER SCREW
M5085-12251	SPRING A (ARS-1225)
M5085-12261	SPRING A (ARS-1226)
M5085-1227T1	COVER A (ARS-1227K2)
M5085-1228T1	COVER B (ARS-1228K2)
M5085-1231T1	RL LEVER A (ARS-1231K2)
M5085-1232T1	RL LEVER B (ARS-1232K2)
M5085-12351	TOPPER PIN (ARS-1235)
M5085-12361	LEAF SPRING (ARS-1236)
M5085-12381	BRACKET (ARS-1238)
M5085-12411	SLIDE LOCK U (ARS-1241)
M5085-12471	MARK PLATE U (ARS-1247)
M5085-12481	MARK PLATE L (ARS-1248)
M5085-12512	REVOLVING BACK PANEL
M5085-12541	LOCK PIN (ARS-1254)
M5085-12551	CHANGING BAR (ARS-1255)
M5085-12562	GUIDE
M5085-12571	CHANGING PIN (ARS-1257)
M5085-12581	SEALING STRIP (ARSH-1258)
M5085-12592	COLLAR
M5085-12611	RELEASE LOCK BAR (ARS-1261)
M5085-12631	COVER (ARS-1263)

  



M5085-31511	WARNING SIGNAL PIN (ARS-151)
M5085-31521	SLEEVE (ARS-3152)
M5085-31531	SPRING (ARS-3153)
M5085-85171	CLICK PIN (RSW-8517)
M5088-27011	REAR PANEL (ARS-2722K)
M5088-27111	FRAME (ARS-2711)
M5088-27121	SPRING (ARS-2712)
M5088-27131	PTATE (ARS-2713)
M5088-27151	STOPPER PLATE (ARS-2715)
M5088-2717T1	HINGE PLATE (ARS-2717K2)
M5088-27211	SHAFT (ARS-2721)
M5088-27251	PTATE (ARS-2725)
M5088-27261	HINGE (ARS-2726)
M5088-27281	SHAFT (ARS-2728)
M5088-27291	SPRING (ARS-2729)
M5088-27311	PTATE R (ARS-2713)
M5088-2732T1	HINGE PLATE L (ARS-2732K2)
M5088-27331	STOPPER PLATE (ARS-2733)
M5088-27381	SHAFT (ARS-2738)
M5088-27391	SHAFT L (ARS-2739)
M5088-27411	SIDE PANEL R (ARS-2741)
M5088-27421	SIDE PANEL L (ARS-2742)
M5088-27431	SIDE PANEL R (ARS-2743)
M5088-27441	SIDE PANEL L (ARS-2744)
M5088-27451	SHAFT (ARS-2745)
M5088-27461	SPRING (ARS-2746)
M5088-27491	CUSHION (ARS-2749)
M5088-2751T1	FRAME (ARS-2751K2)
M5088-27541	HINGE PLATE (ARS-2754)
M5088-27561	SHAFT (ARS-2756)
M5088-27571	SPRING (ARS-2757)
M5088-27611	HOOD COVER (ARS-2761)
M5088-27641	HINGE PLATE (ARS-2764)
M5088-27651	PTATE (ARS-2765)
M5088-27671	PANEL (ARS-2767)
M5088-27681	WASHER (ARS-2768)
M5088-27711	SHAFT A (ARS-2771)
M5088-27721	SHAFT B (ARS-2772)
M5088-27741	FRAME (ARS-2774)
M5088-27751	NAME PLATE (ARS-2775)
M5088-27771	LEAF SPRING (ARS-2777)
M5088-27781	GUIDE SCREW (ARS-2778)
M5088-27791	LOCK PLATE (ARS-2779)
M5088-27811	PTATE A (ARS-2781)
M5088-27821	PTATE B (ARS-2782)
M5088-27831	LEATHERETTE (ARS-2783)
M5088-27841	LEATHERETTE (ARS-2784)
M5088-27851	LEATHERETTE (ARS-2785)
M5088-27861	CUSHION (ARS-2786)
M5088-27881	COLLAR (ARS-2788)
M5088-27891	CUSHION (ARS-2789)
M5088-27921	KNOB (ARS-2736-2)
M5100-11011	HUB
M5100-11012	HUB
M5100-11121	LIGHT BAFFLE A
M5100-11131	LIGHT BAFFLE B

 



M5100-11141	LIGHT BAFFLE
M5100-11151	FRAME
M5100-11191	SEALING STRIP A
M5100-11211	R.A. LEATHERETTE A
M5100-11221	R.A. LEATHERETTE B
M5100-11222	R.A. LEATHERETTE B
M5100-11231	R.A. LEATHERETTE C
M5100-11241	R.A. LEATHERETTE D
M5100-11242	R.A. LEATHERETTE D
M5100-11251	R.A. LEATHERETTE E
M5100-11261	R.A. LEATHERETTE F
M5100-11271	R.A. LEATHERETTE G
M5100-11272	R.A. LEATHERETTE G
M5100-11281	R.A. LEATHERETTE H
M5100-11291	R.A. LEATHERETTE
M5100-11503	SHAFT*****
M5100-11504	SHAFT *****
M5100-11505	SHAFT (Voir 22010-4153T1)
M5100-11511	COCKING LEVER
M5100-11551	PIN
M5100-11552	SCREW
M5100-11553	SCREW (M2)
M5100-11611	SPRING
M5100-11631	ANCHOR
M5100-11641	DISK
M5100-11651	COLLAR
M5100-11661	LUG PLATE U
M5100-11681	LUG PLATE L
M5100-11703	WINDING BASE PLATE ASS'Y
M5100-11731	SEALING STRIP
M5100-11742	WIND SHAFT *****
M5100-11743	WIND SHAFT
M5100-11752	LEVER *****
M5100-11752-RS	LEVER *****
M5100-11754	LEVER
M5100-11762	SCREW
M5100-11811	GEAR
M5100-1182T2	F GEAR
M5100-1191T1	WINDING GEAR
M5100-11941	SHOULDER SCREW
M5100-11951	PSPRING
M5100-1196T1	RATCHET GEAR
M5100-12112	BOTTOM GEAR NO.2
M5100-12141	PILLOW
M5100-12142	SMALL GEAR NO.2
M5100-12152	SMALL GEAR B
M5100-12161	PILLOW
M5100-12181	SNAP WASHAER
M5100-12212	BEVEL GEAR U
M5100-12232	BEVEL GEAR B
M5100-12241	SHAFT
M5100-12251	ANTIFRICTION
M5100-1227T1	PEDESTAL
M5100-12281	SCREW
M5100-12311	COUPLER L
M5100-12321	RING

 



M5100-12331	SHAFT U
M5100-12332	SHAFT U
M5100-1236T1	PEDESTAL
M5100-12382	SHAFT
M5100-12391	RING
M5100-12411	SHAFT L
M5100-12412	SHAFT L
M5100-1243T1	PEDESTAL
M5100-1245T1	LEVER
M5100-1253T1	LEVER
M5100-12571	SPRING
M5100-12581	SHOULDER SCREW
M5100-1261T1	LOCK LEVER
M5100-12651	SPRING
M5100-12671	COUPLER U
M5100-12681	SPRING
M5100-1271T1	LEVER L
M5100-12751	COLLAR
M5100-12771	SPRING
M5100-1281T1	LEVER M
M5100-1291T1	LEVER
M5100-12961	SPRING
M5100-1300	20 CORD W/ LOCKING
M5100-13141	SPRING
M5100-1321T1	CHANGE LEVER
M5100-13281	R-M LEVER
M5100-13291	SCREW
M5100-1331T1	PLATE A
M5100-1341T1	STOPPER
M5100-13451	SPRING
M5100-13511	LOCK LEVER
M5100-13521	SHOULDER SCREW
M5100-13531	SPRING
M5100-13541	SHAFT
M5100-1355T1	BAR
M5100-13611	NO.2 R LEVER
M5100-13631	SHOULDER SCREW
M5100-13651	PAWL
M5100-13661-RS	COLLAR
M5100-13671	SPRING
M5100-13681	SCREW
M5100-13681-RS	SCREW
M5100-1371T1	WINDING STOP LEVER
M5100-13771	SPRING
M5100-13801	WIDING STOP SWITCH
M5100-13841	BASE PLATE
M5100-13871	COLLAR
M5100-14011	BAR (5100-14521)
M5100-1411T1	LEVER
M5100-14161	SPRING
M5100-14251	SHOULDER SCREW
M5100-1426T1	SHAFT U
M5100-1431T1	SHAFT L
M5100-1433T1	HOLDER
M5100-14381	SPRING
M5100-14381E	SPRING

  



M5100-14401	R LEVER
M5100-1456T1	CHANGE-OVER LEVER
M5100-14581	SHAFT
M5100-14591	SCREW
M5100-14611	SPRING
M5100-1462T1	CHANGE-OVER LEVER
M5100-14641	SPRING
M5100-14671	SPRING
M5100-1481T1	BUZZER
M5100-14841	DISTANCE SCALE
M5100-14871	LEAF SPRING
M5100-15011	R COVER
M5100-15022	SECTOR GEAR
M5100-15202	BASE PLATE
M5100-15291	SEALING STRIP
M5100-15391	SEALING STRIP
M5100-15401	DISK
M5100-15431	SPRING
M5100-15461	ANCHOR
M5100-15471	RING
M5100-1551T2	SECTOR GEAR
M5100-15521	SCREW
M5100-15541	HUB
M5100-15542	HUB
M5100-1556T1	MIRROR RAISING LEVER
M5100-15581	STOPPER
M5100-15582	STOPPER PLATE
M5100-15591	SHOULDER SCREW
M5100-15601	PAWL
M5100-15651	SHOULDER SCREW
M5100-15661	SPRING
M5100-15681	ANCHOR
M5100-15691	SPRING
M5100-15692	SPRING
M5100-15701	IDLE GEAR
M5100-15751	SCREW
M5100-15801	SET SWITCH
M5100-1611T1	RETURN SWITCH
M5100-16301	LINK LEVER
M5100-16331	SPRING
M5100-1633D	SPRING
M5100-16361	SHOULDER SCREW
M5100-16371	HUB
M5100-1642T1	HOLDER
M5100-16481	ANCHOR
M5100-16501	MIRROR HOLDER ASS'Y
M5100-16511	MIRROR
M5100-16621	COLLAR A
M5100-16661	COLLAR B
M5100-16711	PAPER
M5100-16721	SEALING STRIP
M5100-16731	MIRROR HOLDER (R)
M5100-16741	MIRROR HOLDER (L)
M5100-16781	SHAFT
M5100-16791	HUB
M5100-16811	SPRING

  



M5100-16821	SHAFT
M5100-16831	SCREW
M5100-16841	SEALING STRIP D
M5100-16861	COLLAR
M5100-16881	SEALING STRIP B
M5100-17101	LIGHT BAFFLE PLATE
M5100-17161	COLLAR
M5100-17162	COLLAR
M5100-17171	SCREW
M5100-17181	LIGHT BAFFLE
M5100-17191	LIGHT BAFFLE
M5100-17211	SPRING
M5100-17221	LIGHT BAFFLE B
M5100-17231	LIGHT BAFFLE C
M5100-17291	LIGHT BAFFLE
M5100-1731T1	RACK PLATE (R)
M5100-1732T1	RACK PLATE (L)
M5100-17341	GUIDE PLATE (R)
M5100-1735T2	GUIDE PLATE (L)
M5100-17381	STOPPER PIN
M5100-17391	SEALING STRIP
M5100-17412	PINION SHAFT
M5100-17421	PIPE R (5000-15241)
M5100-17431	PIPE L
M5100-17441	SCREW (5001-15281)
M5100-17451	HOLD PLATE
M5100-17461	HOLDER
M5100-17491	SEALING STRIP
M5100-17511	FIXING LEVER
M5100-17571	STOPPER PIN
M5100-17581	RUBBER GRIP
M5100-17591	DECORATION DISK
M5100-17611	KNOB*****
M5100-17612	KNOB
M5100-17622	NUT
M5100-17631	DISK
M5100-17641	SCREW (4PB1.4X3.5 GR2)
M5100-17651	STRAP LUG (S145-40151)
M5100-17681	HOLD PLATE
M5100-17711	SIDE PANEL L
M5100-17721	SCREW (PB1.7X4.0)
M5100-17731	SCREW (PB1.7X3.5 GR2)
M5100-17742	SIDE PANEL L + B49
M5100-17791	CAP
M5100-17802	SIDE PANEL R ASS'Y
M5100-1781T1	SIDE PANEL
M5100-17843	SIDE PANEL RL
M5100-17911	SHOE (S145-30011)
M5100-17931	SHOE COVER (S145-30021)
M5100-17951	PIN
M5100-1811T2	SHUTTER SPEED DIAL
M5100-18141	SPRING
M5100-18151	DISK
M5100-18172	DECORATION DISK
M5100-18211	SPRING
M5100-18231	CLICK PLATE

  


M5100-1825T1	COUPLER A
M5100-18261	COUPLER B
M5100-18361	SEALING STRIP
M5100-18371	SEALING STRIP
M5100-18381	SEALING STRIP
M5100-18391	SEALING STRIP
M5100-18551	T BRUSH
M5100-18561	T BRUSH STAND
M5100-18651	SEALING STRIP
M5100-18661	LIGHT BAFFLE
M5100-18711	HOLDER
M5100-18721	CUSHION
M5100-18731	SHOULDER SCREW
M5100-18761	COVER
M5100-18811	CONTACT A
M5100-18821	CONTACT B
M5100-18831	PIN
M5100-18841	COLLAR
M5100-18861	CUSHION
M5100-18871	CUSHION
M5100-18891	SEALING STRIP
M5100-21102	BASE PLATE
M5100-21221	SPRING
M5100-2125T1	COUPLING LEVER
M5100-2131T1	LEVER NO.1
M5100-2135T1	LEVER NO.2
M5100-2141T1	LEVER
M5100-21441	SPRING
M5100-21571	SPRING
M5100-21591	CUSHION
M5100-2161T1	C LEVER
M5100-21651	SPRING
M5100-21701	R. LEVER NO.1
M5100-21731	SHOULDER SCREW
M5100-21752	SPRING
M5100-21811	SHUTTER RELEASE BUTTON
M5100-2182T1	SHUTTER BUTTON COLLAR
M5100-2183T1	SHUTTER BUTTON COLLAR
M5100-21841	BUTTON HOLDER
M5100-21851	SHAFT
M5100-21852	SHAFT
M5100-21861	CAM
M5100-2186T2	CAM
M5100-21871	CE-RING
M5100-2211T2	LEVER BASE ASS'Y
M5100-22161	COLLAR
M5100-22181	SPRING
M5100-22191	SPRING
M5100-2222T1	R BUTTON LOCK LEVER
M5100-22261	SPRING
M5100-22271	STOPPER
M5100-2231T1	RELEASE SWITCH
M5100-2241T2	POWAER SWITCH
M5100-22421	POWAER SWITCH CONTACT (L)
M5100-22451	FIXING PLATE
M5100-2261T1	MOVING COIL ASS'Y

  


M5100-22721	HOLDER
M5100-22811	RC STAND
M5100-22841	RC GUIDE
M5100-22851	RC COVER
M5100-2289T1	RC PIN HOUSING
M5100-23201	S4 SWITCH
M5100-23271	SHAFT
M5100-2331T1	BATTERY CASE
M5100-23321	CONTACT PLATE
M5100-23361	SEAL
M5100-23442	RIBBON
M5100-23512	BATTERY CHAMBER COVER
M5100-23521	SPRING
M5100-23602	W GEAR NO.2
M5100-23631	SHAFT
M5100-2365T1	PEDESTAL
M5100-23671	WINDER COUPLER COVER
M5100-23681	LEAF SPRING
M5100-23801	BEVEL GEAR S ASS'Y
M5100-23811	BEVEL GEAR
M5100-23821	SHAFT
M5100-23831	SCREW
M5100-2386T1	PEDESTAL
M5100-23901	BEVEL GEAR F ASS'Y
M5100-23911	SPRING
M5100-23921	ANCHOR
M5100-23931	ANCHOR
M5100-2395T1	PEDESTAL
M5100-24112	BOTTOM COVER
M5100-24113	BOTTOM COVER
M5100-24121	NUMBER PLATE
M5100-24131	SCREW
M5100-24141	SCREW (S145-20051)
M5100-24142	TRIPOD SCREW (S145-20091)
M5100-24151	COVER
M5100-24171	SCREW (PD2.6X5 GR2)
M5100-24181	SCREW (PD2X5 GR2)
M5100-24191	SCREW (PD1.7X5 GR2)
M5100-24211	SEALING STRIP
M5100-24221	SEALING ATRIP
M5100-24231	SEALING ATRIP
M5100-24251	TAPE
M5100-24261	TAPE
M5100-25111	FH HANGER L
M5100-25131	FH HANGER R
M5100-25141	FH PIN
M5100-25141-RS	FH PIN
M5100-2521T1	LIGHT BAFFLE R
M5100-2522T1	LIGHT BAFFLE L
M5100-25242	SEALING STRIP
M5100-25251	SEALING STRIP
M5100-25261	SEALING STRIP
M5100-25271	SEALING STRIP
M5100-25281	SEALING STRIP
M5100-25291	SEALING STRIP
M5100-25311	MASK (V)

  



M5100-25321	SHAFT
M5100-25331	FRAME A
M5100-25341	FRAME B
M5100-25411	MASK (F)
M5100-25421	MASK (R)
M5100-25451	SCREW
M5100-25511	ADJUSTING SCREW
M5100-25611	FINDER SCREEN CATCHER R
M5100-25631	FINDER SCREEN CATCHER L
M5100-25671	CONTACT COVER
M5100-25681	SCREW (PB1.7X7 RG2)
M5100-26112	FH BASE FRAME
M5100-26113	FH BASE FRAME
M5100-26122	VELVETEEN
M5100-26132	LOCK LEVER (L)
M5100-26142	LOCK LEVER (R)
M5100-26152	SHOULDER SCREW
M5100-26161	SPRING
M5100-26171	LIGHT BAFFLE
M5100-26181	TAPE
M5100-26211	FITTING PLATE (R)
M5100-26221	FITTING PLATE (L)
M5100-26231	HOLDER R
M5100-26251	HOLDER L
M5100-26261	P HOLDER
M5100-26271	SHOULDER SCREW
M5100-26282	SPRING
M5100-26292	SPRING
M5100-2631T2	FRONT FRAME
M5100-26321	SHAFT
M5100-26331	SPRING
M5100-26341	SPRING
M5100-26432	LEAF SPRING
M5100-2651T1	MAGNIFYING FRAME
M5100-26541	SHAFT
M5100-26551	SPRING
M5100-26591	CUSHION
M5100-26611	SIDE PANEL (R)
M5100-26621	SIDE PANEL (L)
M5100-26631	SHAFT
M5100-26641	SIDE PANEL (R)
M5100-26651	SIDE PANEL (L)
M5100-26661	SHAFT
M5100-26671	SHAFT
M5100-26681	SPRING
M5100-26691	SPRING
M5100-26711	REAR PANEL
M5100-26721	FLAP PLATE
M5100-26731	HINGE PLATE
M5100-26741	SCREW
M5100-26751	HOLDER
M5100-26761	SHAFT
M5100-26771	SHAFT
M5100-26781	LEAF SPRING
M5100-26811	PEDESTAL R
M5100-26821	PEDESTAL L

 



M5100-26831	SCREW
M5100-26851	HOOD COVER
M5100-26871	KNOB
M5100-26872	KNOB R
M5100-26882	KNOB L
M5100-26912	FRAME
M5100-26931	NAME PLATE
M5100-26941	RUBBER
M5100-26951	SCREW
M5100-27112	SHOULDER SCREW
M5100-27122	COLLAR
M5100-27132	COVER
M5100-3111T1	BELLOWS
M5100-31171	COVER
M5100-31181	SEALING STRIP
M5100-31211	FRONT PANEL
M5100-3123T1	BAYONET RING
M5100-31261	STOPPER
M5100-31311	LOCK LEVER
M5100-31321	SHOULDER SCREW
M5100-31331	SPRING
M5100-31341	COCKING RING
M5100-31371	FITTING RING
M5100-31412	SIGNAL PIN
M5100-31421	LEAF SPRING
M5100-31432	SIGNAL PINS HOUSING
M5100-31442	SCREW (4PB1.7X3.5 GR2)
M5100-31451	BAYONET FPC BOARD A
M5100-31461	BAYONET FPC BOARD B
M5100-31481	BACK PLATE
M5100-31511	FITTING PLATE
M5100-3154T3	COCKING GEAR ASS'Y
M5100-31552	SPRING
M5100-31711	COVER
M5100-31731	FITTING PLATE
M5100-32102	GOVERNOR
M5100-32351	SCREW
M5100-3241T1	FRONT COVER
M5100-32431	SCREW (PB1.7X3 GR2)
M5100-32451	FOCAL LENGTH SCALE
M5100-35101	ISO PINS HOUSING ASS'Y
M5100-35111	STOPPER
M5100-35141	LIGHT BAFFLE PLATE
M5100-35151	ASA SIGNAL PIN
M5100-35161	SPRING
M5100-35171	SIGNAL PINS HOUSING
M5100-35191	STOPPER
M5100-35211	COVER
M5100-35301	MONITOR LAMP
M5100-35351	LED PRISM
M5100-35391	COVER
M5100-35471	FITTING PLATE
M5100-35491	LEAF SPRING
M5100-35501	VM LEVER
M5100-35531	SHOULDER SCREW
M5100-35541	SPRING

 



M5100-35551	ANCHOR
M5100-35571	SWITCH PIN
M5100-35581	COLLAR A
M5100-35591	COLLAR B
M5100-35601	REVOLVING RING
M5100-35611	BASE PLATE
M5100-35612	BASE PLATE
M5100-35621	SCREW (PB1.7X6 GR2)
M5100-35631	SEALING STRIP
M5100-35641	SEALING STRIP
M5100-35711	LICK PLATE
M5100-35721	PIN
M5100-35731	LEAF SPRING
M5100-35751	FITTING RING
M5100-35752	FITTING RING
M5100-35761	SCREW (PD1.7X6 GR2)
M5100-35781	LIGHT BAFFLE
M5100-35811	LEAF SPRING
M5100-35821	PLATE
M5100-35831	SPACER
M5100-36312	RESISTOR (R60)
M5100-36322	TRANSISTOR (IC1)
M5100-36332	IN SULATION TAPE
M5100-36342	VOLUME (VR1)
M5100-36352	LEAD WIRES (YELLOW)
M5100-36362	LEAD WIRES (BLACK)
M510-26621	SIDE PANEL (L)
M5120-01001	LENS ASS'Y
M5120-01011	FRONT LENS UNIT
M5120-01021	REAR LENS UNIT
M5120-04151	STOPPER PLATE
M5120-04211	FILTER RING
M5120-04231	FRONT RING
M5120-05441	RESISTOR
M5121-04111	APERTURE RING
M5121-04151	CLICK PLATE
M5121-04211	FILTER RING
M5122-01001	LENS ASS'Y
M5122-01011	FRONT LENS UNIT
M5122-01021	REAR LENS UNIT
M5122-02121	FIXING RING
M5122-02211	FITTING RING
M5122-02212	FITTING RING
M5122-02231	PREVIEW LEVER
M5122-02271	ANCHOR
M5122-0231T1	M.U. LEVER
M5122-02331	SHAFT
M5122-02341	GUIDE
M5122-0241T1 *****	CHANGING LEVER
M5122-0241T2	CHANGING LEVER
M5122-02421	SPRING
M5122-02431	SHAFT
M5122-02441	ANCHOR
M5122-02461	TIME EXPOSURE LEVER *****
M5122-02462	TIME EXPOSURE LEVER
M5122-02481	LEAF SPRING

  



M5122-0251T2	TIME LOCK BUTTON
M5122-02531	SHAFT
M5122-02541	LEAF SPRING
M5122-02552	HOLDER
M5122-02572	SPRING
M5122-02611	LEAF SPRING
M5122-04111	APERTURE RING
M5122-04121	COUPLER ARM
M5122-04131	SCREW
M5122-04141	STOPPER PIN
M5122-04151	STOPPER PLATE
M5122-04171	LEAF SPRING
M5122-04211	FITER RING ***** VOIR REF 5122-S4211
M5122-04221	FIXING NUT
M5122-04231	FRONT RING
M5122-04241	LENS DISTANCE SCALE
M5122-04251	FIXING RING
M5122-04271	SPRING
M5122-04311	SHUTTER COVER
M5122-04312	SHUTTER COVER
M5122-04331	M.U. BUTTON
M5122-04341	SPRING
M5122-04351	FITTING PLATE
M5122-04361	SHAFT
M5122-04371	M.U. STAND
M5122-04371C	MIRROR UP SOKET*****
M5122-04371C	MIRROR UP SOKET
M5122-05101	MOUNTING RING UNIT
M5122-05102	MOUNTING RING UNIT
M5122-05112	MOUNTING RING
M5122-0511T1	MOUNTING RING*****
M5122-0511T2	MOUNTING RING
M5122-0513T1	C STOPPER
M5122-05191	SCREW
M5122-05211	BASE BARREL
M5122-05212	BASE BARREL
M5122-0522T2	SET CHARGE RING
M5122-05251	GUIDE
M5122-05282	RING
M5122-05351	RING
M5122-05362	FIXING RING
M5122-05382	RING
M5122-0541T1	HOUSING (5122-S5411)
M5122-05441	RESISTOR
M5122-05471	C MASK
M5122-05521	HOLDER
M5122-05541	SPRING
M5122-05552	STOPPER PIN
M5122-0557T1	COVER PLATE (5122-S5571)
M5122-05591	RUBBER GRIP
M5122-S2241	PREVIEW KNOB
M5122-S4211	FILTER RING
M5122-S4411	F TERMINAL (S145-05021)
M5122-S5571	COVER PLATE (5122-0557T1)
M5123-02211	FIXING RING
M5123-02811	CAM GUIDE

  



M5123-0283T1	CAM LEVER UNIT
M5123-02891	APERTURE CONTROL ARM
M5123-04111	APERTURE RING
M5123-04121	APERTURE INTERLINK ARM
M5123-04151	CLICK PLATE
M5123-04191	SPRING
M5123-04211	BASE RING
M5123-04311	SHUTTER COVER
M5123-04491	CLICK PLATE
M5125-01011	FRONT LENS UNIT
M5125-01021	REAR LENS UNIT
M5125-04111	APERTURE RING
M5125-04151	STOPPER PLATE
M5125-04211	FILTER RING
M5125-04231	FRONT RING
M5125-04311	SHUTTER COVER
M5125-04312	SHUTTER COVER
M5125-05101	MOUNTING RING UNIT
M5125-05102	MOUNTING RING UNIT
M5125-05212	BASE BARREL
M5125-05441	RESISTOR
M5126-04111	APERTURE RING
M5126-04151	CLICK PLATE
M5126-04211	FILTER RING
M5126-04311	SHUTTER COVER
M5127-01011	FRONT LENS UNIT
M5127-01021	REAR LENS UNIT
M5127-01241	LIGHT BAFFLE
M5127-04211	FILTER RING
M5127-04241	LENS DISTANCE SCALE
M5127-04311	SHUTTER COVER
M5127-05211	BASE BARREL
M5129-01011	FRONT LENS ASS'Y
M5129-01021	REAR LENS ASS'Y
M5129-04211	FILTER RING
M5129-04231	FRONT RING
M5129-04311	SHUTTER COVER
M5129-05211	BASE BARREL
M5131-01011	FRONT LENS UNIT
M5131-01021	REAR LENS UNIT
M5131-04211	NAME RING
M5131-05101	MOUNTING RING UNIT
M5131-05212	BASE BARREL
M5131-0522T2	SET CHARGE RING
M5132-04211	FILTER RING
M5132-04311	SHUTTER COVER*****
M5132-04312	SHUTTER COVER
M5133-01011	FRONT LENS UNIT
M5133-01021	REAR LENS UNIT
M5133-04111	APERTURE RING
M5133-04151	STOPPER PLATE
M5133-04211	FILTER RING
M5133-04231	FRONT RING
M5133-04311	SHUTTER COVER
M5133-04312	SHUTTER COVER
M5133-05101	MOUNTING RING UNIT

  



M5133-05102	MOUNTING RING UNIT
M5133-0511T1	MOUNTING RING*****
M5133-0511T2	MOUNTING RING
M5133-05212	BASE BARREL
M5133-0522T1	SET CHARGE RING
M5133-05251	GUIDE
M5133-05362	FIXING NUT
M5133-05441	RESISTOR
M5133-05591	RUBBER GRIP
M5134-04111	APERETURE RING
M5134-04151	CLICK PLATE
M5134-04211	FILTER RING
M5134-04311	SHUTTER COVER
M5135-01011	FRONT LENS UNIT
M5135-01021	REAR LENS UNIT
M5135-04111	APERETURE RING
M5135-04151	STOPPER PLATE
M5135-04211	FILTER RING
M5135-04231	FRONT RING
M5135-04241	LENS DISTANCE SCALE
M5135-05211	BASE BARREL
M5135-05441	RESISTOR
M5136-04111	APERETURE RING
M5136-04151	CLICK PLATE
M5136-04211	FILTER RING
M5138-01011	FRONT LENS ASS'Y
M5138-01021	REAR LENS ASS'Y
M5138-01101	CAM BERREL ASS'Y
M5138-04211	FILTER RING
M5138-04241	LENS DITANCE SCALE
M5138-04261	RUBBER GRIP
M5138-04291	RING
M5138-04311	SHUTTER COVER
M5138-05211	BASE BARREL
M5138-S2101	#1ES SHUTTER ASS'Y
M5140-01011	FRONT LENS ASS'Y
M5140-01021	REAR LENS ASS'Y
M5140-02191	INNER TUBE
M5140-04211	FILTER RING
M5140-04311	SHUTTER COVER*****
M5140-04312	SHUTTER COVER
M5140-05211	BASE BARREL
M5140-05221	COUPLING RING
M5140-05411	BARREL
M5140-05711	F.P.C. BOARD
M5141-01001	LENS UNIT
M5141-01141	FIXING NUT
M5141-01151	MASK
M5141-01161	TUBE
M5141-01171	MASK
M5141-01181	FIXING NUT
M5141-04111	APERTURE RING
M5141-04151	STOPPER PLATE
M5141-04231	FRONT RING
M5141-04241	LENS DISTANCE SCALE
M5141-04311	SHUTTER COVER

  



M5141-04312	SHUTTER COVER
M5141-05101	MOUNTING RING UNIT
M5141-05102	MOUNTING RING UNIT
M5141-05212	BASE BARREL
M5141-0522T2	SET CHARGE RING UNIT
M5141-05441	RESISTOR
M5141-S4211	FILITER RING
M5142-04111	APERTURE RING
M5142-04151	CLICK PLATE
M5142-04211	FILITER RING
M5142-04311	SHUTTER COVER
M5143-01011	FRONT LENS UNIT
M5143-01021	REAR LENS UNIT
M5143-01141	FIXING RING
M5143-02211	FITTING RING
M5143-02212	FITTING RING
M5143-04211	FILTER RING
M5143-04231	FRONT RING
M5143-04241	LENS DISTANCE SCALE
M5143-04311	SHUTTER COVER
M5143-05102	MOUNTING RING UNIT
M5143-0511T1	MOUNTING RING*****
M5143-0511T2	MOUNTING RING
M5143-05211	BASE BARREL
M5143-05221	COUPLING RING
M5143-05291	FIXING NUT
M5143-0536T1	SET CHARGE RING
M5143-05452	COUPLING BARREL
M5143-05561	C MASK
M5143-05612	BAYONET RING
M5144-01001	LENS ASS'Y
M5144-02211	FIXING RING
M5144-02212	FIXING RING
M5144-04211	FILTER RING
M5144-04311	SHUTTER COVER
M5144-04312	SHUTTER COVER
M5145-01011	FRONT LENS UNIT
M5145-01021	REAR LENS UNIT
M5145-04111	APERTURE RING
M5145-04151	STOP PLATE
M5145-04211	FILTER RING
M5145-04231	FRONT RING
M5145-04241	LENS DISTANCE SCALE
M5145-05011	FLASH TERMINAL*****VOIR S145-05011
M5145-05011-	FLASH TERMINAL*****VOIR S145-05011
M5145-05101	MOUNTING RING UNIT
M5145-05211	BASE BARREL
M5145-05411	BARREL
M5145-05452	COUPLING BARREL
M5145-05531	RESISTOR
M5146-04111	APERTURE RING
M5146-04151	CLICK PLATE
M5146-04211	FILTER RING
M5147-01011	FRONT LENS UNIT
M5147-01021	REAR LENS UNIT
M5147-01211	BARREL

  



M5147-01221	MIDDLE BARREL
M5147-04111	APERTURE RING
M5147-04151	STOPPER PLATE
M5147-04211	FILTER RING
M5147-04241	LENS DISTANCE SCALE
M5147-05101	MOUNTING RING UNIT
M5147-05102	MOUNTING RING UNIT
M5147-05211	BASE BARREL
M5147-05411	BARREL
M5147-05451	COUPLING BARREL
M5147-05452	COUPLING BARREL
M5147-05531	RESISTOR
M514710-11111	ANGELE PLATE
M514710-11131	TRIPOD SOCKET
M514710-11181	ROLLER
M514710-11191	WASHER
M514710-11201	LEVER A
M514710-11231	SHOULDER SCREW
M514710-11241	ANCHOR
M514710-11251	SPRING
M514710-11301	LEVER B
M514710-11321	SPACER
M514710-11331	TRIPOD SCREW
M514710-11391	DISK
M514710-11401	HOLDER PLATE
M514710-11411	SPRING
M514710-11421	HUB
M514710-11451	BOTTOM COVER
M514710-11491	NUT
M514710-11511	E-RING
M514710-11521	PLATE
M514710-11531	RUBBER PAD
M514710-11541	HAND GRIP L
M514710-11581	TRIGGER
M514710-11611	HAND GRIP R
M514710-11711	GRIP BELT
M514710-11741	SCREW
M514710-11751	SCREW
M514710-11761	WASHER
M514710-11771	PLATE
M5148-04111	APERTURE RING
M5148-04151	CLICK PLATE
M5148-04211	FILTER RING
M5150-01011	FRONT LENS ASS'Y
M5150-01021	REAR LENS ASS'Y
M5150-01161	FIXING RING
M5150-01211	LIGHT BAFFLE TUBE
M5150-04211	FIXING RING
M5150-04311	SHUTTER COVER
M5150-04312	SHUTTER COVER
M5150-05211	BASE BARREL
M5150-08111	SEAL
M5151-01011	FRONT LENS ASS'Y
M5151-01021	REAR LENS ASS'Y
M5151-02121	FIXING RING
M5151-02151	LIGHT BAFFLE

  



M5151-04211	FILTER RING
M5151-04241	LENS DISTANCE SCALE
M5152-01011	FRONT LENS ASS'Y
M5152-01021	REAR LENS ASS'Y
M5152-01211	BARREL
M5152-01221	LIGHT BAFFLE NO. 1
M5152-01231	LIGHT BAFFLE NO. 2
M5152-01241	LIGHT BAFFLE NO. 3
M5152-01411	LIGHT BAFFLE TUBE
M5152-02121	FIXING NUT
M5152-02151	LIGHT BFFLE NO. 4
M5152-02161	LIGHT BAFFLE NO. 5
M5152-04111	APERTURE RING
M5152-04211	FILTER RING
M5152-05211	BASE BARREL
M5152-05411	BARREL
M5152-05451	COUPLING BARREL
M5153-01011	FRONT LENS ASS'Y
M5153-01021	REAR LENS ASS'Y
M5153-01211	BARREL
M5153-01221	LIGHT BAFFLE NO. 1
M5153-04211	FILTER RING
M5153-05211	BASE BARREL
M5153-05411	BARREL
M5153-05451	COUPLING BARREL
M5155-01011	FRONT LENS UNIT
M5155-01021	MIDDLE LENS UNIT
M5155-01031	REAR LENS UNIT
M5155-02132	WASHER
M5155-02142	WASHER
M5155-02152	WASHER
M5155-02162	WASHER
M5155-02172	WASHER
M5155-02182	WASHER
M5155-02192	WASHER
M5155-02711	FITTING RING
M5155-02731	PIN
M5155-02741	COUPLING RING
M5155-02751	PIN
M5155-02761	COUPLING ARM
M5155-04211	FILTER RING
M5155-04231	FRONT RING
M5155-04241	FOCUSING RING
M5155-04281	KNOB
M5155-04311	SHUTTER COVER
M5155-04511	FOCUSING RING
M5155-04542	COUPLING RING
M5155-05102	MOUNTING RING UNIT
M5155-05212	BASE BARREL
M5156-04211	FILTER RING
M5156-04311	SHUTTER COVER
M5158-00001	LENS ASS'Y
M5158-02111	MIDDLE BARREL
M5158-0221T1	BAYONET RING
M5158-0311T1	SET CHARGE RING ASS'Y
M5158-03121	CHARGE RING

  



M5158-03131	COUPLING RING
M5158-04111	OUTER BARREL
M5158-04131	FIXING RING
M5158-04211	CHARGE OVER PLATE
M5158-04221	SHOULDER SCREW
M5158-04241	SPRING
M5158-04251	KNOB
M5158-04311	CHANGE OVER SWITCH
M5158-04321	SWITCH HOLDER
M5158-04351	RESISTOR (A)
M5158-04361	RESISTOR (B)
M5158-04371	LEAD WIRE
M5158-04381	TUBE A
M5158-04391	TUBE B
M5160-00081	#8 LENS
M5160-01011	FRONT LENS ASS'Y
M5160-01021	VARIATION LENS ASS'Y
M5160-01031	MATER LENS ASS'Y
M5160-01191	FIXING RING
M5160-01271	WASHER (T=0.2)
M5160-01281	WASHER (T=0.1)
M5160-01291	WASHER (T=0.05)
M5160-02211	FIXING RING
M5160-02212	FIXING RING
M5160-04111	APERTURE RING
M5160-04141	STOPPER PIN
M5160-04501	ZOOM RING ASS'Y
M5160-04771	FRONT RING
M5160-04781	RUBBER GRIP
M5160-04791	RUBBER GRIP
M5160-04831	LIGHT BAFFLE
M5160-05211	BASE BARREL
M5160-05411	BARREL
M5160-05451	COUPLING BARREL
M5160-05531	RESISTOR (220)
M5167-01011	LENS UNIT
M5167-02711	RIGHT FPC BOARD
M5167-02721	LEFT FPC BOARD
M5167-03111	SHIFT RING
M5167-0312T1	ROCAATION RING
M5167-03151	PIN
M5167-03161	GUIDE
M5167-03171	SEALING STRIP
M5167-0321T1	SCREW SHAFT
M5167-03241	GUIDE
M5167-03271	COVER
M5167-03311	HOLDER
M5167-03331	KNOB
M5167-03351	COLLAR
M5167-03411	FIXING RING
M5167-0343T1	PLATE
M5167-03461	HOLDER
M5167-03471	ANCHOR
M5167-03491	SPRING
M5167-0351T1	ARM
M5167-0361T1	LOCK LEVER

  



M5167-03641	SHAFT
M5167-03651	SCREW SHAFT
M5167-03661	SPRING
M5167-03671	SPRING
M5167-03691	SCREW SHAFT
M5167-04211	FILTER RING
M5167-04231	DECORATION RING
M5167-04281	FIXING RING
M5167-0431T2	SHUTTER COVER ASS'Y
M5167-0451T1	COCKING RING
M5167-04551	FIXING RING
M5167-04571	COLLAR
M5167-04581	SCREW SHAFT
M5167-04591	COLLAR
M5167-0461T1	STOPPER PLATE
M5167-04661	SPRING
M5167-04671	SCREW
M5167-04681	SPRING
M5167-04711	SCREW
M5167-04721	SPRING
M5167-04731	SPRING
M5167-04761	HOLDER
M5167-04771	SPRING
M5167-04781	NYLON BALL
M5167-0511T1	MOUNTING RING
M5167-05211	CLICK RING
M5167-0523T1	SET CHARGE RING
M5167-05351	RING
M5167-05361	SHOULDER SCREW
M5167-05371	COLLAR
M5167-05381	SHOULDER SCREW
M5167-05391	COLLAR
M5167-05471	MASK
M5167-05481	COVER
M5167-05621	INDEX RING
M5167-05631	CLICK RING
M5167-05661	FIXING RING
M5167-S4801	GOVERNOR
M5171-41121	COVER U
M5171-41131	SCREW (TD1.7X3 GR2)
M5171-41141	COVER L
M5171-4117T1	COUPLER COVER
M5171-41191	RING
M5171-41201	LOCK RELEASE LEVER
M5171-41251	SHOULDER SCREW
M5171-41261	SPRING
M5171-41281	LIGHT BAFFLE
M5171-41291	HOLDER COVER
M5171-41311	LEVER
M5171-41331	SCREW (TD1.7X4 GR2)
M5171-4134T1	COVER
M5171-41361	SCREW (TB1.7X3 GR2)
M5171-41411	RING (U)
M5171-41412	RING (U)
M5171-41421	RING (L)
M5171-41422	RING (L)

  



M5171-41432	LOCK PIN
M5171-41442	LODK SPRING
M5171-41451	SPACER
M5171-41461	L PLATE
M5171-41471	SCREW (PD1.7X2.5)
M5171-41481	KNOB
M5171-41512	ISO PC PLATE
M5171-41531	ISO CONTACT
M5171-4154T1	CONTACT BRUSH
M5171-41551	FILM SPEED DIAL
M5171-41561	DISK
M5171-41571	SPRING WASHER
M5171-41611	LEAF PRING
M5171-41701	ISO PC PLATE
M5171-41741	SCREW (TB1.7X3 GR2)
M5171-41751	COVER
M5171-41761	SCREW (TB1.7X4 GR2)
M5171-41791	PLATE
M5171-42102	R. BACK FRAME ASS'Y
M5171-42121	SCREW (PB1.7X5 GR2)
M5171-42131	SCREW (PB1.7X5 B)
M5171-42141	LIGHT BAFFLE
M5171-42151	LIGHT BAFFLE
M5171-42181	LIGHT BAFFLE
M5171-4221T1	LEVER
M5171-4221T2	LEVER
M5171-4231T1	LOCK LEVER
M5171-4232	BEVEL GEAR
M5171-42412	LATCH
M5171-42422	LATCH
M5171-42431	SCREW
M5171-42442	LEAF PRING
M5171-42451	COVER
M5171-42471	RUBBER PLATE
M5171-42512	ROLLER
M5171-42521	COLLAR
M5171-42531	HOLDER
M5171-42541	SCREW
M5171-42601	PORTE MAGASIN*****
M5171-42601-	PORTE MAGASIN
M5171-42602	BACK COVER
M5171-42691	SEALING STRIP
M5171-42731	SEALING STRIP
M5171-42741	SHAFT A
M5171-42751	SHAFT B
M5171-42761	HINGE HOLDER U
M5171-42771	HINGE HOLDER L
M5171-42781	SCREW
M5171-42791	SCREW
M5171-42811	LEAF PRING
M5171-42851	ROLLER PIN
M5171-42881	SEALING STRIP
M5171-4292T1	COVER
M5171-42931	SCREW
M5171-42951	MEMO POCKET
M5171-42961	WASHER (2.6W1.4X0.1)

  



M5171-43203	WINDING BASE PLATE
M5171-43231	BEVEL GEAR*****
M5171-43232	BEVEL GEAR
M5171-4324T2	W2 GEAR
M5171-43241	WINDING SMALL GEAR NO.1
M5171-43281	PLATE
M5171-43312	COUPLER
M5171-43332	RING
M5171-4334T2	PEDEATAL
M5171-43362	SHAFT
M5171-43381	NUT
M5171-43392	W3 GEAR
M5171-43411	SPRING
M5171-4343T1	WINDING CLUTCH GEAR
M5171-43471	PIN
M5171-43481	SPRING
M5171-43491	SPRING
M5171-43531	ANTIFRICTION
M5171-43541	FILM SPOOL HOLDER
M5171-43551	NUT
M5171-43561	WINDING GEAR NO.1
M5171-4357T2	WINDING GEAR NO.2
M5171-43591	COLLAR
M5171-43611	PAWL
M5171-4371T1	SIGNAL LEVER (5174-4371T1)
M5171-4373T1	WINDING STOP LEVER
M5171-4373T2	WINDING STOP LEVER
M5171-43762	SPRING
M5171-43781	ADJUSTING SCREW
M5171-43791	WASHER (2.6W1.4X0.1)
M5171-4381T1	BASE PLATE
M5171-43842	HUB
M5171-4411T1	NO.2 LARGE GEAR*****
M5171-44132	NO.2 SMALL GEAR
M5171-44201	NO.3 GEAR
M5171-44321	HUB
M5171-4433T1	FILM COUNTER GEAR
M5171-44351	SPRING
M5171-4441T2	COUNTER DIVIDING DEVICE
M5171-44431	SPRING
M5171-4445T2	AUXILIARY DIVIDING DISK
M5171-44491	WASHER
M5171-4451T1	PEDEATAL
M5171-44541	COUNTER (120)
M5171-44561	COUNTER GEAR
M5171-44571	SCREW
M5171-44581	WASHER
M5171-4461T1	RED SIGNAL
M5171-44641	SHOULDER SCREW
M5171-4465T2	SIGNAL ARM
M5171-44681	ADJUST SCREW
M5171-44702	RELEASE LEVER
M5171-44762	SPRING
M5171-44781	SPRING
M5171-44812	SPRING
M5171-44831	ADJUSTING PLATE

  



M5171-45111	BOTTOM PLATE
M5171-4512T1	FILM SPOOL HOLDER
M5171-4512T2-RS	FILM SPOOL HOLDER
M5171-45171	COLLAR
M5171-45251	WASHER
M5171-4531T1	BASE FRAME
M5171-45351	SEALING STRIP R
M5171-45361	SEALING STRIP L
M5171-45411	PRESSURE PLATE (120)
M5171-45421	SHAFT
M5171-45431	SCREW
M5171-4551T1	T-SPRING
M5171-45541	SHOULDER SCREW
M5171-45551	ROLLER
M5171-45581	ROLLER C
M5171-4561T1	ROLLER E
M5171-45651	GEAR
M5171-45662	SHAFT A
M5171-45672	SHAFT B
M5171-45711	TOP COVER
M5171-45721	SCREW
M5171-45741	WINDOW
M5171-45751	MASK
M5171-45761	SEALING STRIP S*****
M5171-45771	SEALING STRIP L
M5171-45811	BOTTOM COVER
M5171-45831	SEALING STRIP
M5171-45852	WASHER
M5171-45861	FILM ADVANCE KNOB
M5171-45871	NUT
M5171-45881	WASHER
M5171-45891	DISK
M5171-45912	PAWL
M5171-45922	PIN SCREW
M5172-43202	WINDING BASE PLATE
M5172-44131	NO.2 SMALL GEAR
M5172-44201	NO.3 GEAR
M5172-4433T1	FILM COUNTER GEAR
M5172-4441T1	COUNTER DIVIDING DEVICE
M5172-4445T1	AUXILIARY DIVIDING DISK
M5172-44541	COUNTER (220)
M5172-4512T2-RS	FILM SPOOL HOLDER
M5172-45212	FILM SPOOL HOLDER
M5172-45351	STOPPER (5172-45911)
M5172-45361	SHAFT (5172-45921)
M5172-45371	SPRING (5172-45931)
M5172-45411	PRESSURE PLATE (220)
M5172-45562	ROLLER
M5172-4559T2	ROLLER
M5172-45711	TOP COVER (220)
M5172-45911	PAWL
M5172-45912	PAWL
M5172-45931	SPRING
M5173-61101	BASE PLATE ASS'Y
M5173-61121	BASE PLATE
M5173-61122	BASE PLATE

  


M5173-61131	SCREW
M5173-61161	LEAF PRING
M5173-6116T1	LEAF PRING
M5173-61171	SCREW
M5173-61231	L PLATE
M5173-61251	LOCK RING KNOB
M5173-6125T1	LOCK RING KNOB
M5173-61311	ASA HOLDER
M5173-61321	SCREW
M5173-61411	CLICK SPRING
M5173-61431	CONNECTOR PIN
M5173-61441	ASA PC PLATE
M5173-61451	COVER (6273-61331)
M5173-6161T1	LEAF PRING
M5173-6166T1	COUPLER COVER
M5173-61671	SCREW
M5174-42101	REVOLVING BACK FRAME
M5174-42512	FILM ROLLER
M5174-43201	WINDING BASE FRAME
M5174-4371T1	SIGNAL LEVER
M5174-44131	NO.2 SMALL GEAR
M5174-44201	NO.3 GEAR
M5174-44321	HUB
M5174-4433T1	FILM COUNTER GEAR
M5174-4441T1	COUNTER DIVIDING DEVICE
M5174-44431	SPRING
M5174-4445T1	AUXILIARY DIVIDING DISK
M5174-4451T1	PEDEATAL
M5174-44541	COUNTER DIVIDING DEVICE
M5174-44561	COUNTER GEAR
M5174-44762	SPRING
M5174-4511T1	BOTTOM PLATE
M5174-4531T1	BASE FRAME
M5174-45441	LEAF PRING
M5174-45561	ROLLER
M5174-45571	RUBBER RING
M5174-4559T2	ROLLER
M5174-4561T1	ROLLER E
M5174-45651	GEAR
M5174-45661	SHAFT
M5174-45711	TOP COVER
M5174-45931	SPRING
M5174-46311	MASK
M5174-4633T1	PLATE
M5174-46431	ROLLER S
M5174-46441	HUB
M5174-4646T2	T-SPRING
M5174-4653T1	CHANGE LEVER
M5174-46541	SCREW
M5174-46551	SPRING
M5174-46561	SHAFT
M5174-4658T1	INDICATOR PLATE
M5174-46631	DISK
M5174-46651	SPRING
M5174-46661	HUB
M5174-46671T1	SUB GEAR

  


M5174-4671T1	HOLDER
M5174-46751	PRESSURE PLATE
M5174-4676T1	SHAFT
M5174-46771	SPRING
M5174-46841	WINDOW
M5175-73111	BASE FRAME
M5175-73351	SIGNAL PINS PC BOARD
M5175-73381	COVER
M5175-73391	TV PRISM
M5175-73401	TV LED PC BOARD
M5175-73411	TV BASE FRAME
M5175-73451	HOLD PLATE
M5175-73471	TV SCALE
M5175-73481	HOLDER
M5175-7371T1	EYEPIECE FRAME
M5175-73731	SHIELD MASK
M5175-73761	CUSHION
M5175-7384T1	FPC BOARD
M5175-73911	TV DIAL
M5175-73931	SHUTTER SPEED SCALE
M5175-73941	AUTO LOCK RELEASE BUTTON
M5175-73951	SPRING
M5175-73971	SPRING
M5175-7398T1	DIAL HOLDER
M5175-73991	LEAF PRING
M5175-74131	DIAL
M5175-74141	LEAF PRING
M5175-74151	KNOB
M5175-7417T1	OFF SWITCH
M5175-74201	BASE PLATE
M5175-7424T1	BRUSH HOLDER
M5175-74271	TV PC BOARD
M5175-74321	HOLDER
M5175-74341	LEAF PRING
M5175-74361	CV PC BOARD
M5175-74381	INSULATION PLATE
M5175-7441T1	TOP COVER
M5175-74431	A-S SELECT SWITCH
M5175-74451	SWITCH COVER
M5175-74471	SHIELD COVER
M5175-74481	SCREW
M5175-74591	LIGHT BAFFLE
M5175-74602	MAIN PC BOARD
M5175-74631	SHIELD COVER
M5175-74641	COLLAR
M5175-74681	WIRE
M5175-74691	WIRE
M5175-74701	SUB PC BOARD
M5175-75201	EYEPIECE BLIND UNIT (22510-11901)
M5175-75381	SUB PC BOARD
M5175-75401	SHAFT
M5175-75411	BLIND LEVER
M5175-75431	COVER
M5175-75471	CONTACT BOARD
M5176-71021	EYEPIECE LENS
M5176-71111	BASE FRAME

  



M5176-71121	CUSHION
M5176-71161	SPRING
M5176-71171	PLATE
M5176-71172	PLATE
M5176-71181	LIGHT BAFFLE
M5176-71211	ATOPPER PLATE
M5176-71311	SIGNAL PINS HOUSING
M5176-71331	SIGNAL PINS HOUSING
M5176-71341	SPRING
M5176-71351	FLEXIBLE BOARD
M5176-71361	PLATE
M5176-71401	LED HOUSING
M5176-71411	LED PRISM
M5176-71421	LED PRISM FRAME
M5176-71441	LED
M5176-71481	SCALE
M5176-71491	SCALE HOLDER
M5176-71501	PRISM L
M5176-71511	HOLDER
M5176-71531	PRISM S
M5176-71541	MASK PLATE
M5176-71611	PRISM HOLDER L
M5176-71621	DUMPER
M5176-71641	PRISM HOLDER R
M5176-71651	DUMPER
M5176-71671	PENTA HOLDER
M5176-71691	CUSHION
M5176-7171T1	EYEPiece FRAME
M5176-7171T2	EYEPiece FRAME
M5176-71751	SPD HOLDER
M5176-71752	SPD HOLDER
M5176-7178T1	P.C. BOARD
M5176-71811	SWITCH
M5176-71841	FRAME
M5176-71881	SPACER
M5176-71911	BUTTON
M5176-71921	SPRING
M5176-71931	HOLDER
M5176-71941	DISK
M5176-72111	TOP COVER
M5176-72141	A.S. SWITCH
M5176-72161	SWITCH COVER
M5176-72171	LIGHT BAFFLE
M5176-72211	HOLDER PLATE L
M5176-72231	HOLDER PLATE R
M5176-72251	CUSHION
M5176-72261	INSULATION COVER
M5176-72271	LED CORD SUPPORTER
M5176-72311	P.C. BOARD A
M5176-72321	P.C. BOARDS B
M5176-72711	EYE-CUP
M5176-72721	BOTTOM COVER
M5179-511T1	BAYONET RING*****
M5179-511T2	BAYONET RING
M5179-51141	STOPPER
M5179-51181	SPRING

 



M5179-51251	F.P.C. BOARD
M5179-51311	PLATE
M5179-51321	C BARREL
M5179-51322	BERREL
M5179-5133T1	BERREL
M5179-5133T2	SET CHARGE RING UNIT
M5179-51412	SET CHARGE RING UNIT
M5179-51481	LIGHT BAFFLE A
M5179-51491	LIGHT BAFFLE
M5179-51512	LIGHT BAFFLE
M5179-5152T2	NO.1 TUBE
M5179-51671	MOUNTING RING UNIT
M5179-51701	SPRING
M5179-51751	SIGNAL PINS HOUSING
M5179-51781	C MASK
M5180-53322	RING
M5180-53412	BARREL
M5180-53481	LIGHT BAFFLE
M5180-53491	LIGHT BAFFLE
M5180-53512	LIGHT BAFFLE
M5181-8111T2	NO.2 TUBE
M5181-8112T1	MAIN FRAME
M5181-8112T2	NO.2 GEAR
M5181-8116T1	GEAR
M5181-81252	NO.4 GEAR
M5181-81311	NO.8 GEAR
M5181-81331	M BASE PLATE
M5181-81331	MOTOR
M5181-8133K2	MOTOR (5181-81331)
M5181-81351	NO.1 GEAR
M5181-81421	PLATE
M5181-81452	LOCK KNOB
M5181-81472	LEAF SPRING
M5181-81482	STUD
M5181-81511	POWER SWITCH
M5181-81571	COVER
M5181-8161T1	SM SWITCH
M5181-81631	S SWITCH
M5181-81651	PEDESTAL
M5181-81671	START BUTTON
M5181-81702	COUPLING ASS'Y
M5181-81751	PAWL
M5181-81771	SPRING
M5181-8192T1	CONTACT PLATE
M5181-8192T2	CONTACT PLATE
M5181-81961	PEDESTAL
M5181-81981	SIDE PANEL
M5181-82111	SIGNAL PIN
M5181-82121	LEAF SPRING
M5181-82131	SIGNAL PINS HOUSING
M5181-82151	P.C. BOARD
M5181-82171	SHAFT
M5181-82221	STOPPER
M5181-82222	STOPPER
M5181-82231	LEAF SPRING
M5181-82251	TUBE

 



M5181-82261	PLATE
M5181-82312	TRIPOD SCREW
M5181-82332	SPRING
M5181-82342	NUT
M5181-82343	SPRING WASHER
M5181-82452	P.C. BOARD
M5181-82481	PLATE
M5181-8251T1	BATTERY CASE ASSY*****
M5181-8251T1-	BATTERY CASE ASSY
M5181-82591	RUBBER
M5181-82611	SPRING
M5181-82641	SUB P.C. BOARD
M5181-82651	RED LEADWIRE
M5181-82661	BLACK LEADWIRE
M5181-82671	ORANGE BW LEADWIRE
M5181-82711	UPPER COVER
M5181-8273T1	BOTTOM COVER
M5181-8276T1	UPPER PLATE
M5181-82771	SCREW
M5181-82781	SCREW
M5181-82811	BOTTOM PLATE
M5181-82821	SCREW
M5181-82851	RUBBER LH
M5181-82861	RUBBER RH
M5181-82871	SCREW
M5181-82881	SCREW
M5181-83181	RUBBER TAPE (LH)
M5181-83191	RUBBER TAPE (RH)
M5181-83311	PLATE
M5182-65111	ANGELE PLATE
M5182-65121	PIN
M5182-65131	BOTTOM COVER
M5182-65151	COVER PLATE
M5182-65161	RUBBER PLATE
M5182-65171	PLATE
M5182-65181	TRIPOD SOCKET
M5182-65211	TRIPOD SCREW
M5182-65221	DISK
M5182-65271	CLICK HOLDER
M5182-6531T1	GRIP HOUSING R
M5182-65331	RC HOLDER
M5182-65351	GRIP HOUSING L
M5182-65371	GUIDE
M5182-65381	SHAFT
M5182-65391	SPRING
M5182-65411	SHUTTER RELEASE BUTTON
M5182-65421	HOLDER
M5182-65431	GUIDE SCREW
M5182-65441	HOLDER
M5182-65451	CLICK BERREL
M5182-65461	SPRING
M5182-65481	SPRING
M5182-65491	RETAINING RING
M5182-65511	BASE FRAME
M5182-65521	SHUTTER RELEASE SWITCH
M5182-65531	SWITCH P.C. BOARD

  



M5182-65551	SHUTTER RELEASE PLUG
M5182-65581	CLIP
M5182-65621	SPACER
M5182-65671	LEATHERETTE
M5182-65681	LEATHERETTE
M5182-65711	GRIP BELT
M5182-65721	GRIP SCREW
M5182-65751	SCREW
M5182-65761	PLATE
M5184-11111	BASE BARREL
M5184-11112	BASE BARREL
M5184-11121	RETAINING RING
M5184-11131	LENS BARREL
M5184-11132	LENS BARREL
M5184-11141	RETAINING RING
M5184-11142	RETAINING RING
M5184-11151	PIN
M5184-11161	DIOPTER RING
M5184-11162	DIOPTER RING
M5184-11172	SCREW
M5184-11181	BELT
M5184-11182	E-RING
M5184-11221	FRAME
M5184-11241	PLATE
M5184-11261	SHAFT
M5184-1127T1	EYERIECE MOUNT
M5185-62111	FRAME
M5185-62121	SLIDE LOCK U
M5185-62131	SLIDE LOCK L
M5185-62141	LEAF SPRING
M5185-62161	SCREW
M5185-62231	KNOB
M5185-62241	L PLATE
M5185-62291	SCREW
M5185-62431	LIGHT BAFFLE
M5188-16411	BOTTOM PLATE
M5196-91281	CORD
M5196-91401	BATTERY CHANBER COVER
M5200-P824	SHUTTER SEIKO # 0 70/2.8 M645
M5200-11121	FRAME (SLS-11121)
M5200-11141	SHADING FRAME (SLS-11141)
M5200-11161	STOPPER PIN (SLS-11161)
M5200-11212	FRAME (SLS-11212)
M5200-11241	FILM ROLLER (SLS-11241)
M5200-11261	LEAF SPRING (SLS-11261)
M5200-1131T1	FILM BODY (SLS-1131K)
M5200-11321	GUIDE SCREW L (SLS-11321)
M5200-11331	GUIDE SCREW R (SLS-11331)
M5200-11341	LOCK GUIDE (SLS-11341)
M5200-11342	LOCK GUIDE (SLS-11342)
M5200-11381	GUIDE PLATE L (SLS-11381)
M5200-11391	GUIDE PLATE R (SLS-11391)
M5200-11411	STRAP LUG (SLS-11411)
M5200-1141T2	STRAP LUG L (SLS-1141T2)
M5200-1142T2	STRAP LUG R (SLS-1142T2)
M5200-11482	BALL (SLS-11482)

  


M5200-11492	LEAF SPRING (SLS-11492)
M5200-1152T1	LEAF SPRING (SLS-1152T1)
M5200-1153T1	SPRING R (SLS-1153T1)
M5200-11551	POST SCREW (SLS-11551)
M5200-11581	POST SCREW (SLS-11581)
M5200-11584T4	STOP LEVER (SLS-1584T4)
M5200-115861	COLLAR (SLS-15861)
M5200-11611	GUIDE SCREW (SLS-11611)
M5200-11621	LATCH L (SLS-11621)
M5200-11631	LATCH R (SLS-11631)
M5200-11681	STOPPER PIECE (SLS-11681)
M5200-11711	PLATE (SLS-11711)
M5200-11751	PLATE (SLS-11751)
M5200-11771	CURTAIN (SLS-11771)
M5200-1181T1	HINGE PLATE (SLS-1181T1)
M5200-11841	CUSHION (SLS-11841)
M5200-11861	CATCH PLATE (SLS-11861)
M5200-11911	TRIPOD SOCKET (SLS-11911)
M5200-1211T1	BACK COVER (SLS-1211T1)
M5200-12121	KNOB (SLS-12121)
M5200-12131	PLATE (SLS-12131)
M5200-12151	SCREW (SLS-12151)
M5200-12341	SPRING (SLS-12341)
M5200-12361	COVER (SLS-12361)
M5200-12381	SEAL (SLS-12381)
M5200-13102	PLATE ASS'Y (SLS-13102)
M5200-1311T2	BASE PLATE L (SLS-1311S2)
M5200-13171	SPRING (SLS-13171)
M5200-13281	SPRING (SLS-13281)
M5200-13332	HUB (SLS-13332)
M5200-13361	SPRING (SLS-13361)
M5200-1341T1	BAR (SLS-1341T1)
M5200-13431	ANCHOR (SLS-13431)
M5200-13441	COLLAR (SLS-13441)
M5200-13471	SCREW (SLS-13471)
M5200-13511	F2 GEAR (SLS-13511)
M5200-13541	LEAD BLACK (SLS-13541)
M5200-1355T1	MAIN SWITCH (SLS-1355T1)
M5200-13591	LEAD GREEN (SLS-13591)
M5200-1361T2	BASE PLATE M (SLS-1361T2)
M5200-13771	SPRING (SLS-13771)
M5200-13811	HOOK (SLS-13811)
M5200-13831	SCREW (SLS-13831)
M5200-13841	SPRING (SLS-13841)
M5200-13881	LEAD BLACK (SLS-13881)
M5200-1391T2	STOPPER (SLS-1391S2)*****
M5200-13941	SPRING (SLS-13941)
M5200-13961	SCREW (SLS-13961)
M5200-14121	F1 GEAR (SLS-14121)
M5200-14131	DISK (SLS-14131)
M5200-14171	SPRING (SLS-14171)
M5200-14201	DISK ASS'Y (SLS-14201)
M5200-1421T1	DISK (SLS-1421T1)
M5200-14251	SPRING (SLS-14251)
M5200-14271	MS GEAR (SLS-14271)
M5200-14311	SWITCH (SLS-14311)

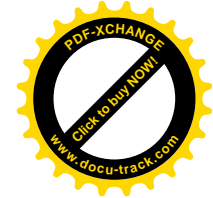  


M5200-14321	WASHER (SLS-14321)
M5200-14331	PLATE (SLS-14331)
M5200-14351	LEAD YELLOW (SLS-14351)
M5200-14411	FP CONTACT U (SLS-14411)
M5200-14421	FP CONTACT L (SLS-14421)
M5200-14431	PLATE (SLS-14431)
M5200-14441	WASHER (SLS-14441)
M5200-14461	LEAD PINK (SLS-14461)
M5200-14471	LEAD BROWN (SLS-14471)
M5200-14502	DISK ASS'Y (SLS-14502)
M5200-14611	WINDING CAM (SLS-14611)
M5200-14651	SCREW (SLS-14651)
M5200-14711	F4 GEAR (SLS-14711)
M5200-14721	SHAFT (SLS-14721)
M5200-14731	SCREW (SLS-14731)
M5200-1474T1	CLUTCH (SLS-1474T1)
M5200-14812	WHEEL (SLS-14812)
M5200-14822	SPRING (SLS-14822)
M5200-14832	SPRING (SLS-14832)
M5200-14841	GEAR (SLS-14841)
M5200-14851	F3 GEAR (SLS-14851)
M5200-14871	WASHER (SLS-14871)
M5200-14881	SCREW (SLS-14881)
M5200-14923	SHAFT (SLS-14923)
M5200-14924	SHAFT (SLS-14924)
M5200-14931	SPRING (SLS-14931)
M5200-15011	GEAR NO. 1 (SLS-1531S1) voir 04010 1531T1
M5200-15103	LEVER ASS'Y (SLS-15103)
M5200-1511T3	LEVER (SLS-1511T3)
M5200-15163	SPRING (SLS-15163)
M5200-15192	SPRING (SLS-15192)
M5200-15212	SUB LEVER (SLS-15212)
M5200-15222	SCREW (SLS-15222)
M5200-15231	SPRING (SLS-15231)
M5200-15242	CAM (SLS-15242)
M5200-15261	SCREW (SLS-15261)
M5200-15281	COLLAR (SLS-15281)
M5200-1534T1	LEVER (SLS-1534T1)
M5200-15351	SHAFT (SLS-15351)
M5200-15361	C2 GEAR (SLS-15361)
M5200-15371	SCREW (SLS-15371)
M5200-15381	SPRING (SLS-15381)
M5200-15391	ANCHOR (SLS-15391)
M5200-1541T1	DEVICE (SLS-1541T1)
M5200-15421	SCREW (SLS-15421)
M5200-15432	CLICK LEVER (SLS-15432)
M5200-15442	ANCHOR (SLS-15442)
M5200-15452	SPRING (SLS-15452)
M5200-15511	COUNTER (SLS-15511)
M5200-15521	COUNTER BASE (SLS-15521)
M5200-1554T1	GEAR (SLS-1554T)
M5200-15561	SHAFT (SLS-15561)
M5200-15581	SCREW (SLS-15581)
M5200-15611	STOPPER (SLS-15611)
M5200-15631	SPRING (SLS-15631)
M5200-15641	ANCHOR (SLS-15641)

  



M5200-15651	INDICATOR (SLS-15651)
M5200-15661	STUD (SLS-15661)
M5200-15671	GUIDE SCREW (SLS-15671)
M5200-1571T3	LEVER (SLS-1571T3)
M5200-15742	SCREW (SLS-15742)
M5200-15743	SCREW (SLS-15743)
M5200-15751	SPRING (SLS-15751)
M5200-15812	LEVER (SLS-15812)
M5200-15822	SCREW (SLS-15822)
M5200-15831	SPRING (SLS-15831)
M5200-1584T4	STOP LEVER (SLS-1584T4)
M5200-16102	SIDE PANEL (SLS-16102)
M5200-1611T1	PANEL (SLS-1611T1)
M5200-1612T1	COVER (SLS-1612T1)
M5200-16141	WINDOW (SLS-16141)
M5200-16151	FRAME (SLS-16151)
M5200-16191	NAME PLATE (SLS-16191)
M5200-16201	SIDE PANEL R (SLS-16201)
M5200-16212	PANEL (SLS-16212)
M5200-1622T2	COVER (SLS-1622T2)
M5200-1625T1	INDICATOR (SLS-1625T1)
M5200-16371	BASE (SLS-16371)
M5200-16381	NUT (SLS-16381)
M5200-16402	B COVER ASS'Y (SLS-16402)
M5200-16412	BOTTOM COVER (SLS-16412)
M5200-16471	PROTECTOR (BMX-3126)
M5200-16481	DISK
M5200-1651T1	COVER (SLS-1651T1)
M5200-16521	SHAFT (SLS-16521)
M5200-16561	HOLDER (SLS-16561)
M5200-16611	LOCK DISK (SLS-16611)
M5200-16631	COLLAR (SLS-16631)
M5200-16641	SPRING (SLS-16641)
M5200-16651	DISK (SLS-16651)
M5200-1671T1	CHAMBER ASS'Y (SLS-1671T1)
M5200-16791	CUSHION (SLS-16791)
M5200-16831	LEAD RED
M5200-16841	LEAD BLUE
M5200-16861	LEAD BLUE (SLS-16861)
M5200-17131	M GEAR NO. 1 (SLS-17131)
M5200-1721T2	MS 2 GEAR (SLS-1721T2)
M5200-17241	M GEAR NO. 2 (SLS-17241)
M5200-17261	SCREW (SLS-1725)
M5200-1731T1	S1 GEAR (SLS-1731T1)
M5200-1734T1	STOPPER (SLS-1734T1)
M5200-1735T1	S2 GEAR (SLS-1735T1)
M5200-17371	STOPPER (SLS-17371)
M5200-1741T2	HOOK (SLS-1741T2)
M5200-17451	SPRING (SLS-17451)
M5200-17461	ANCHOR (SLS-17461)
M5200-1751T2	HOOK (SLS-1751T2)
M5200-17532	HUB (SLS-17532)
M5200-17543	STUD (SLS-17543)
M5200-17551	SPRING (SLS-17551)
M5200-17631	COLLAR (SLS-17631)
M5200-17651	SPRING (SLS-17651)

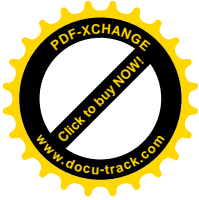 



M5200-17661	LEVER (SLS-17661)
M5200-17731	SPRING (SLS-17731)
M5200-17741	ANCHOR (SLS-17741)
M5200-17751	BASE U (SLS-17751)
M5200-17781	SCREW (SLS-17781)
M5200-17801	M COIL ASS'Y (SLS-17801)
M5200-17951	LEAD WHITE (SLS-17951)
M5200-1811T1	FIRST CURTAIN ASS'Y
M5200-18151	SHAFT (SLS-18151)
M5200-18162	RIBBON PIPE (SLS-18162)
M5200-18172	SET SCREW (SLS-18172)
M5200-1821T1	SECOND CURTAIN ASS'Y
M5200-18291	PLATE (SLS-18291)
M5200-1831T1	PLATE (SLS-1831T1)
M5200-18351	PULLEY (SLS-18351)
M5200-18371	GEAR (SLS-18371)
M5200-18381	SCREW (SLS-18381)
M5200-1841T1	PLATE (SLS-1841T1)
M5200-1845T1	GEAR (SLS-1845T1)
M5200-1851T1	LEVER (SLS-1851T1)
M5200-18621	HUB (SLS-18621)
M5200-18652	SPRING (SLS-18652)
M5200-18681	COLLAR (SLS-18681)
M5200-18691	SCREW (SLS-18691)
M5200-19021	SHAFT (SLS-1921S1)
M5200-1911T1	CURTAIN TUBE ASS'Y
M5200-19151	HUB (SLS-19151)
M5200-19171	PULLEY (SLS-19171)
M5200-19231	TUBE (SLS-19231)
M5200-19241	WHEEL (SLS-19241)
M5200-1931T1	BASE PLATE (SLS-1931T1)
M5200-19331	BRACKET
M5200-19352	ROLLER (SLS-19352)
M5200-19381	BRACKET (SLS-19381)
M5200-1941T2	GEAR (SLS-1941T2)
M5200-1944T2	LEVER (SLS-1944T2)
M5200-19471	SCREW (SLS-19471)
M5200-19482	SPRING (SLS-19482)
M5200-19492	LEVER (SLS-19492)
M5200-19511	BASE PLATE (SLS-19511)
M5200-19541	SPRING (SLS-19541)
M5200-19561	GEAR (SLS-19561)
M5200-19611	COVER I (SLS-19611)
M5200-19633	COVER U (SLS-19633)
M5200-1963T3	COVER (SLS-1963T3)
M5200-19641	COVER (SLS-19641)
M5200-19662	HOLDER 8SLS-19662)
M5200-19663	HOLDER (SLS-19663)
M5200-19671	SPONGE (SLS-19671)
M5200-19673	SPONGE (SLS-19673)
M5200-20113	SHAFT
M5200-20132	S. DIAL HUB (SLS-20132)
M5200-20142	SCREW (SLS-20142)
M5200-2016T1	BRUSH DISK (SLS-2016T1)
M5200-20191	SHAFT (SLS-20191)
M5200-2021T1	DIAL CLICK (SLS-2021T1)

 



M5200-20231	SPRING (SLS-20231)
M5200-20281	FASTENER (SLS-20281)
M5200-20291	TUBE (SLS-20291)
M5200-20311	TIME BOARD (SLS-20311)
M5200-20321	SHAFT (SLS-20321)
M5200-20341	LEAD YELLOW (SLS20341)
M5200-20351	LEAD RED (SLS-20351)
M5200-20361	LEAD PURPLE (SLS-20361)
M5200-20371	LEAD BLUE (SLS-20371)
M5200-20402	PLATE (SLS-2041S1)
M5200-20431	LEAD RED (SLS-20431)
M5200-20441	LEAD ORANGE (SLS-20441)
M5200-2045T1	SWITCH LEVER (SLS-2045T1)
M5200-20462	HUB
M5200-20481	SPRING (SLS-20481)
M5200-20492	SHOULDER SCREW
M5200-20511	BC BUTTON (SLS-20511)
M5200-20521	LEAF SPRING (SLS-20521)
M5200-20531	PLATE (SLS-20531)
M5200-20541	HOLDER (SLS-20541)
M5200-20561	CONTACT PLATE (SLS-20561)
M5200-20661	MC CONDENSER (SLS-20661)
M5200-20671	CLASP (SLS-20671)
M5200-2071T1	CONTACT (SLS-2071T1)
M5200-20771	LEAD BROWN (SLS-20771)
M5200-20781	LEAD BLACK (SLS-20781)
M5200-20811	PLATE (SLS-20811)
M5200-2082T1	CONTACT (SLS-2082T1)
M5200-20831	PLATE (SLS-20831)
M5200-20841	CONTACT COVER (SLS-20841)
M5200-20851	SCREW (SLS-20851)
M5200-2086T1	PLATE (SLS-2086T1)
M5200-2087T1	CONTACT (SLS-2087T1)
M5200-20881	LEAD YELLOW (SLS-20881)
M5200-20891	LEAD ORANGE (SLS-20891)
M5200-20921	COLLAR (SLS-20921)
M5200-20931	LEAD BLUE (SLS-20931)
M5200-21111	BAYONET RING (SLS-21111)
M5200-21121	SEALING STRIP
M5200-21131	LEAF SPRING (SLS-21131)
M5200-21151	WASHER (T=0.1)
M5200-2115-2	WASHER (T=0.05)
M5200-21212	LEVER (SLS-21212)
M5200-21221	BUTTON (SLS-21221)
M5200-21241	GUIDE SCREW (SLS-21241)
M5200-21251	SPRING
M5200-21252	SPRING (SLS-21252)
M5200-21261	ANCHOR (SLS-21261)
M5200-21271	CAM (SLS-21271)
M5200-2131T1	FRONT COVER (SLS-2131T1)
M5200-2141T1	SHUTTER RELEASE BUTTON
M5200-21421	BUTTON GUIDE (SLS-21421)
M5200-21441	SPRING (SLS-21441)
M5200-21451	ROD (SLS-21451)
M5200-2146T2	LOCK RING (SLS-2146T2)
M5200-21511	LOCK RING (SLS-21511)

  



M5200-21531	RELEASE LEVER (SLS-21531)
M5200-21542	SCREW (SLS-21542)
M5200-21543	SHOULDER SCREW
M5200-21551	LOCK DISK (SLS-21551)
M5200-21561	HUB (SLS-21561)
M5200-21581	HUB (SLS-21581)
M5200-21591	COLLAR (SLS-21591)
M5200-21611	BUTTON (SLS-21611)
M5200-21711	LEVER (SLS-21711)
M5200-21721	SCREW (SLS-21721)
M5200-21731	MU CAM (SLS-21731)
M5200-21741	SHAFT (SLS-21741)
M5200-21761	LEATHERETTE
M5200-21762	LEATHERETTE (SLS-21762)
M5200-21771	SPRING (SLS-21771)
M5200-21782	PLATE (SLS-21782)
M5200-21811	LEVER (SLS-21811)
M5200-21821	PLATE (SLS-21821)
M5200-2185T1	FRONT BODY CAP
M5200-21912	SHUTTER DIAL (SLS-21912)
M5200-21941	DISK (SLS-21941)
M5200-24011	PLATE (SLS-2412S1)
M5200-24012	PLATE (SLS-2412S2)
M5200-24111	MIRROR (SLS-24111)
M5200-24151	SPRING L (SLS-24151)
M5200-24161	LEAF SPRING R (SLS-24161)
M5200-24171	PLATE (SLS-24171)
M5200-2421T1	BRACKET (SLS-2421T1)
M5200-24252	LEVER (SLS-24252)
M5200-24261	HUB (SLS-24261)
M5200-24281	PLATE (SLS-24281)
M5200-24291	SPRING WASHER (SLS-24291)
M5200-24311	MIRROR ARM L (SLS-24311)
M5200-24321	MIRROR ARM R (SLS-24321)
M5200-24331	SCREW (SLS-24331)
M5200-24341	SCREW (SLS-24341)
M5200-24351	SCREW (SLS-24351)
M5200-24361	SCREW (SLS-24361)
M5200-24381	COLLAR (SLS-24381)
M5200-24391	SCREW (SLS-24391)
M5200-2441T1	STOPPER (SLS-2441T1)
M5200-24441	PLATE (SLS-24441)
M5200-24451	SCREW (SLS-24451)
M5200-24471	SPRING (SLS-24471)
M5200-2451T2	ARM (SLS-2451T2)
M5200-24541	SCREW (SLS-24541)
M5200-2455T1	LEVER (SLS-2455T1)
M5200-24571	HUB (SLS-24571)
M5200-24572	HUB (SLS-24572)
M5200-24591	SCREW (SLS-24591)
M5200-2461T1	S. LEVER (SLS-2461T1)
M5200-2461T2	STOP LEVER (SLS-2461T2)
M5200-24642	SPRING (SLS-24642)
M5200-24662	SPRING (SLS-24662)
M5200-24671	CUSHION (SLS-24671)
M5200-2471T2	ARM (SLS-2471T2)

  



M5200-24741	SHAFT (SLS-24741)
M5200-2475T1	LINK LEVER (SLS-2475T1)
M5200-24771	SHAFT (SLS-24771)
M5200-2511T2	CRANK (SLS-2511T2)
M5200-25242	SPRING (SLS-25242)
M5200-25251	GUIDE SCREW (SLS-25251)
M5200-25311	SPRING (SLS-25311)
M5200-25321	COLLAR (SLS-25321)
M5200-25341	SHAFT (SLS-25341)
M5200-25411	M3 GEAR (SLS-25411)
M5200-25421	DISK (SLS-25421)
M5200-25431	COLLAR (SLS-25431)
M5200-25451	NUT (SLS-25451)
M5200-25462	SHAFT (SLS-25462)
M5200-2551T1	LEVER (SLS-2551T1)
M5200-25532	COLLAR (SLS-25532)
M5200-25541	ANCHOR (SLS-25541)
M5200-25551	SPRING (SLS-25551)
M5200-26111	FRAME (SLS-26111)
M5200-26121	LUG (SLS-260121)
M5200-26131	FRESNEL LENS (SLS-26131)
M5200-26151	SPRING (SLS-26151)
M5200-26161	FRAME (SLS-26161)
M5200-29112	RA LEATHERETTE
M5200-29122	RA LEATHERETTE
M5200-29132	LEATHERETTE (SLS-29132)
M5200-29141	LEATHERETTE (SLS-29141)
M5200-29142	RA LEATHERETTE
M5200-29153	RA LEATHERETTE
M5200-29162	LEATHERETTE (SLS-29162)
M5200-29172	LEATHERETTE (SLS-29172)
M5200-29191	PAPER (SLS-29191)
M5200-29212	LEATHERETTE (SLS-29212)
M5200-29221	LEATHERETTE (SLS-29221)
M5200-29231	LEATHERETTE (SLS-29231)
M5200-29241	LEATHERETTE (SLS-29241)
M5200-29251	LEATHERETTE (SLS-29251)
M5200-29261	LEATHERETTE D (SLS-29261)
M5200-29271	LEATHERETTE E (SLS-29271)
M5200-29282	LEATHERETTE F (SLS-29282)
M5200-29311	LEATHERETTE (SLS-29311)
M5200-29321	LEATHERETTE (SLS-29321)
M5200-29331	LEATHERETTE (SLS-29331)
M5200-29341	LEATHERETTE (SLS-29341)
M5200-29351	LEATHERETTE (SLS-29351)
M5200-29361	LEATHERETTE (SLS-29361)
M5200-29371	LEATHERETTE (SLS-29371)
M5200-29411	SEALING STRIP (SLS-29411)
M5200-29421	SEALING STRIP (SLS-29421)
M5200-29431	SEALING STRIP (SLS-29431)
M5200-29442	LIGHT BAFFLE (SLS-29442)
M5200-29451	LEATHERETTE (SLS-29451)
M5200-29461	SEALING STRIP (SLS-29461)
M5200-29471	SEALING STRIP (SLS-29471)
M5200-29481	SEALING STRIP (SLS-29481)
M5200-29491	SEALING STRIP (SLS-29491)

  


M5200-29511	SEALING STRIP (SLS-29511)
M5200-29521	SEALING STRIP (SLS-29521)
M5200-29531	SEALING STRIP (SLS-29531)
M5200-29541	LIGHT BAFFLE (SLS-29541)
M5200-29551	LEATHERETTE (SLS-29551)
M5200-29561	CURTAIN (SLS-29561)
M5200-29581	CURTAIN (SLS-29581)
M5200-29611	SEALING STRIP (SLS-29611)
M5200-29621	SEALING STRIP (SLS-29621)
M5200-42181	WASHER
M5201-11141	SHADING FRAME (SLT-11141)
M5201-11711	PLATE (SLT-11711)
M5201-11911	TRIPOD SOCKET (SLT-11911)
M5201-13421	SPRING (SLT-13421)
M5201-13811	HOOK (SLT-13811)
M5201-16191	NAME PLATE (SLT-16191)
M5201-16201	SIDE PANEL R (SLT-16201)
M5201-16211	R. SIDE PANEL (SLT-16211)
M5201-16402	B. COVER ASS'Y (SLT-16402)
M5201-16412	B. COVER (SLT-16412)
M5201-16511	B.C. COVER (SLT-16511)
M5201-16521	SHAFT (SLT-16521)
M5201-16531	HINGE (SLT-16531)
M5201-16551	SPRING (SLT-16551)
M5201-16611	LOCK PLATE (SLT-16611)
M5201-16621	LEAF SPRING
M5201-1671T2	B. CHAMBER (SLT-1671T2)
M5201-16751	RIBBON (SLT-16751)
M5201-16752	RIBBON (SLT-16752)
M5201-16761	R. PLATE (SLT-16761)
M5201-17102	MIRROR (SLT-17102)*****
M5201-1711T2	C. BASE L (SLT-1711T2)
M5201-17931	SHAFT (SLT-17931)*****
M5201-17941	LEAD BROWN (SLT-17941)
M5201-17951	LEAD WHITE (SLT-17951)
M5201-18001	S. CURTAIN (SLT-18001)
M5201-1811T1	F. CURTAIN (SLT-1811T1)
M5201-18251	SHAFT (SLT-18251)
M5201-18261	TUBE (SLT-18261)
M5201-18291	R. PLATE (SLT-18291)
M5201-18351	PULLEY (SLT-18351)
M5201-18352	PULLEY A (SLT-18352)
M5201-19171	PULLEY (SLT-19171)
M5201-19172	PULLEY B (SLT-19172)
M5201-20112	SHAFT (SLT-20112)
M5201-20131	S. DIAL HUB (SLT-20131)
M5201-2021T1	DIAL CLICK (SLT-2021T1)
M5201-20291	COLLAR (SLT-20291)
M5201-20311	TIME PC BOARD (SLT-20311)
M5201-20331	POLE (SLT-20331)
M5201-20481	SPRING (SLT-20481)
M5201-20602	S. PC PLATE (SLT-2064S2)
M5201-20691	VINYL TUBE (SLT-20691)
M5201-20951	HOLDER (SLT-20951)
M5201-20961	SPRING (SLT-20961)
M5201-20981	S. DIAL RING (SLT-20981)

  


M5201-21011	LEVER (SLT-2163S1)
M5201-21111	BAYONET RING (SLT-21111)
M5201-2131T1	FRONT PANEL (SLT-2131T1)
M5201-21532	LEVER (SLT-21532)
M5201-21651	SCREW (SLT-21651)
M5201-21661	SPRING (SLT-21661)
M5201-21671	COVER (SLT-21671)
M5201-21911	S. SPEED DIAL (SLT-21911)
M5201-21941	DISK (SLT-21941)
M5201-2195T1	CLICK DISK (SLT-2195T1)
M5201-21971	SCREW (SLT-21971)
M5201-21981	S. PLATE (SLT-21981)
M5201-2311T1	LEVER (SLT-2311T1)
M5201-23151	LEVER (SLT-23151)
M5201-23161	SCREW (SLT-23161)
M5201-23201	SELF TIMER (SLT-23201)
M5201-2331T1	LEVER (SLT-2331T1)
M5201-23331	DISK (SLT-23331)
M5201-23351	LEATHERETTE (SLT-23351)
M5201-23361	SPRING (SLT-23361)
M5201-2341T1	LEVER (SLT-2341T1)
M5201-24252	COUPLING (SLT-24252)
M5201-24261	HUB (SLT-24261)
M5201-24271	SCREW (SLT-24271)
M5201-24371	SPRING (SLT-24371)
M5201-27742	SHOE COVER (SLT-27742)
M5201-27871	NAME PLATE (SLT-27871)
M5201-29111	RA LEATHERETTE (SLT-29111)
M5201-29112	LEATHERETTE (SLT-29112)
M5201-29211	LEATHERETTE (SLT-29211)
M5201-29212	LEATHERETTE L (SLT-29212)
M5201-29222	LEATHERETTE S (SLT-29222)
M5201-29251	LEATHERETTE A (SLT-29251)
M5201-29311	LEATHERETTE B (SLT-29311)
M5201-29341	LEATHERETTE (SLT-29341)
M5201-29361	LEATHERETTE (SLT-29361)
M5201-29381	LEATHERETTE (SLT-29381)
M5201-29391	LEATHERETTE (SLT-29391)
M5202-11291	SPONGE
M5202-11411	STRAP LUG
M5202-11421	STRAP LUG
M5202-11911	TRIPOD SOCKET
M5202-13101	WINDING BASE PLATE UNIT
M5202-1311T1	WINDING BASE PLATE ASS'Y
M5202-16101	LEFT SIDE PANEL ASS'Y
M5202-1611T1	LEFT SIDE PANEL
M5202-16191	NAME PLATE
M5202-16201	RIGHT SIDE PANEL ASS'Y
M5202-1621T1	RIGHT SIDE PANEL
M5202-16371	SYNCHRO TERMINAL BASE
M5202-16471	PROTECTOR
M5202-16491	PLATE
M5202-20111	SHAFT
M5202-2021T1	DIAL CLICK
M5202-20251	STEEL BALL
M5202-20311	TIME PRINTED BOARD

  



M5202-2071T1	SYNCHRO CONTACT
M5202-20721	LEAD BLACK
M5202-21221	LENS RELEASE LEVER
M5202-21911	SHUTTER SPEED DIAL
M5202-29251	LEATHERETTE
M5202-29311	LEATHERETTE
M5220-0211T1	RING (LG311-211S1)
M5220-0221T1	BLADE (LG311-221S1)
M5220-0231T1	CAM (LG311-231S1)
M5220-02331	SPRING (LG311-2331)
M5220-02351	SCREW (LG311-2351)
M5220-0236T1	CAM (LG311-236S1)
M5220-0241T1	CAM (LG311-241S1)
M5220-03001	HELICOID (LG311-3001)
M5220-03141	STOPPER (LG311-3141)
M5220-03161	KNOB (LG311-3161)
M5220-04111	RING (LG311-4111)
M5220-04121	RING (LG311-4121)
M5220-04131	RING (LG311-4131)
M5220-04141	GRIP (LG311-4141)
M5220-04171	RING (LG311-4171)
M5220-04221	SPRING (LG311-4221)
M5220-05001	RING (LG311-5001)
M5220-05111	RING (LG311-5111)
M5220-05151	SPRING (LG311-5151)
M5220-05171	COVER (LG311-5171)
M5220-05211	SPRING (LG311-5211)
M5220-0531T1	LEVER (LG311-531S1)
M5220-05321	LEVER (LG311-5321)
M5220-05381	SHAFT (LG311-5381)
M5220-05411	COVER (LG311-5411)
M5221-00100	FRONT LENS (LG341-001)
M5221-00200	REAR LENS (LG341-002)
M5221-01001	LENS (LG341-00)
M5222-0211T1	OPERATING RING
M5222-02141	SECURING RING
M5222-02151	FIXING RING
M5222-0221T1	OPERATING RING
M5222-0231T1	ACTUARING RING
M5222-0232T1	APERTURE CAM
M5222-02341	SCREW
M5222-02351	RETAINING RING
M5222-02411	APERTURE CONTROL CAM
M5222-02421	RETAINER
M5222-02431	SPRING
M5222-02451	CAM RING
M5222-04171	APERTURE RING
M5222-0431T1	MOUNT BASE RING
M5222-05111	MOUNTING RING
M5222-05141	COUPLER
M5222-0515T1	DIAPHRAGM OPENING TAB
M5222-05211	SPRING
M5222-05221	SCREW
M5222-05241	ANCHOR
M5222-0531T1	CHANGING LEVER
M5222-05371	SCREW

 


M5222-05381	SCREW
M5222-05411	MOUNTING COVER
M5222-S3111	HELICOID
M5223-0211T1	DISK (LF432-211S1)
M5223-02131	RING (LF432-2131)
M5223-02141	DISK (LF432-2141)
M5223-0221T1	BLADE (LF432-221S1)
M5223-0231T1	CAM (LF432-231S1)
M5223-02331	SCREW (LF432-2331)
M5223-02341	STUD (LF432-2341)
M5223-02361	CAM (LF432-2361)
M5223-02371	RETAINER (LF432-2371)
M5223-0238T1	CAM RING (LF432-238S1)
M5223-03001	HELICOID (LF432-3001)
M5223-03141	STOPER (LF432-3141)
M5223-03151	KNOB (LF432-3151)
M5223-04111	NAME RING (LF432-4111)
M5223-04121	FILTER RING (LF432-4121)
M5223-04131	RING (LF432-4131)
M5223-04141	RUBBER GRIP (LF432-4141)
M5223-04151	RING (LF432-4151)
M5223-04171	RING (LF432-4171)
M5223-04181	COUPLER (LF432-4181)
M5223-04221	SPRING (LF432-4221)
M5223-04311	RING (LF432-4311)
M5223-04331	RED DOT (LF432-4331)
M5223-05111	RING (LF432-5111)
M5223-0512T1	LEVER (LF432-512S1)
M5223-0515T1	LEVER (LF432-515S1)
M5223-05221	SPRING (LF432-5221)
M5223-05241	SCREW (LF432-5241)
M5223-0531T1	LEVER (LF432-531S1)
M5223-05321	LEVER (LF432-5321)
M5223-05391	SEALING (LF432-5391)
M5223-05411	MOUNT COVER (LF432-5411)
M5223-S3111	HELICOID (LF432-311S1)
M5224-01011	FRONT LENS (LF433-001)
M5224-01021	REAR LENS (LF433-002)
M5224-03001	HELICOID (LF433-3001)
M5224-04171	RING (LF433-4171)
M5224-05001	MOUNT RING (LF433-5001)
M5224-S3111	HELICOID (LF433-311S1)
M5226-01001	LENS (LF571-00)
M5226-011711	WASHER (LF571-1171A)
M5226-011712	WASHER (LF571-1171B)
M5226-02121	RING (LF571-2121)
M5226-02131	SPRING (LF571-2131)
M5226-02141	ANCHOR (LF571-2141)
M5226-0221T1	LEVER (LF571-221S1)
M5226-02241	SCREW (LF571-2241)
M5226-02251	SCREW (LF571-2251)
M5226-02261	SPRING (LF571-2261)
M5226-0227T1	LEVER (LF571-227S1)
M5226-0229T1	LEVER (LF571-229S1)
M5226-02341	SCREW (LF571-2341)
M5226-02351	SPRING (LF571-2351)

 



M5226-0236T1	HOOK (LF571-236S1)
M5226-02381	HOOK (LF571-2381)
M5226-02391	SCREW (LF571-2391)
M5226-02411	SPRING (LF571-2411)
M5226-02421	SPRING (LF571-2421)
M5226-02431	SCREW (LF571-2431)
M5226-02441	STOPPER (LF571-2441)
M5226-0311T1	HELICOID (LF571-311S1)
M5226-04002	RING (LF571-4002)
M5226-04111	RING (LF571-4111)
M5226-04121	RING (LF571-4121)
M5226-04131	DIAL (LF571-4131)
M5226-04141	PLATE (LF571-4141)
M5226-04151	LEVER (LF571-4151)
M5226-04191	RING (LF571-4191)
M5226-04211	LEVER (LF571-4211)
M5226-04231	PLATE (LF571-4231)
M5226-04251	RING (LF571-4251)
M5226-04261	LEVER (LF571-4261)
M5226-04312	BARREL (LF571-4312)
M5226-04321	SCREW (LF571-4321)
M5226-04381	SPRING (LF571-4381)
M5226-04411	RING (LF571-4411)
M5226-04421	STOPPER (LF571-4421)
M5226-04441	GRIP (LF571-4441)
M5226-04461	RING (LF571-4461)
M5226-04471	COUPLER (LF571-4471)
M5226-04491	PLATE (LF571-4491)
M5226-04541	BASE (LF571-4541)
M5226-04551	HOOK (LF571-4551)
M5226-04561	SCREW (LF571-4561)
M5226-04571	SPRING (LF571-4571)
M5226-04611	PIN (LF571-4611)
M5226-04621	SCREW (LF571-4621)
M5226-04632	SCREW (LF571-4632)
M5226-04642	HUB (LF571-4642)
M5226-05111	RING (LF571-5111)
M5226-05141	SCREW (LF571-5141)
M5226-05151	COVER (LF571-5151)
M5226-05221	ARM (LF571-5221)
M5226-0524T1	PLATE (LF571-524S1)
M5226-05251	SCREW (LF571-5251)
M5226-05261	PIN (LF571-5261)
M5226-05272	RING (LF571-5272)
M5226-0528T2	ARM (LF571-528T2)
M5226-05291	ARM (LF571-5291)
M5226-05311	ARM (LF571-5311)
M5226-05321	SCREW (LF571-5321)
M5226-05332	SPRING (LF571-5332)
M5226-05371	LEVER (LF571-5371)
M5227-01001	LENS (LF572-00)
M5227-01191	BAFFLE (LF572-1191)
M5227-0238T1	RING (LF572-238S1)
M5227-04111	RING (LF572-4111)
M5227-04131	RING (LF572-4131)
M5227-04171	RING (LF572-4171)

  



M5227-05411	COVER (LF572-5411)
M5230-01001	LENS ASS'Y (LF51-00)
M5230-02151	SPRING (LF51-2151)
M5230-02161	ANCHOR (LJ51-2161)
M5230-02171	RING (LF51-2171)
M5230-0221T1	BLADE (LJ51-221T1)
M5230-0231T1	BELL CRANK (LJ51-231T1)
M5230-02331	SCREW (LF51-2331)
M5230-02341	CAM RING (LJ51-2341)
M5230-02351	RING (LF51-23511)
M5230-0242T1	FILTER FRAME (LJ51-242T1)
M5230-02461	SCREW (LF51-2461)
M5230-0311T1	HELICOID (LJ51-311T1)
M5230-04121	HOOD (LJ51-4121)
M5230-0413T1	FILTER RING (LJ51-413T1)
M5230-04151	SCREW (LF51-4151)
M5230-04351	APERTURE RING (LJ51-4351)
M5230-0445T1	CAM (LJ51-445T1)
M5230-04471	BAYONET RING (LJ51-4471)
M5230-05001	MOUNT RING (LJ51-5001)
M5230-0512T1	LEVER (LJ51-512T)
M5230-0512T2	LEVER (LJ51-512T2)
M5230-05141	COUPLING ARM (LJ51-5141)
M5230-05171	SPRING (LF51-5171)
M5230-05181	SCREW (LF51-5181)
M5230-05251	SCREW (LF51-5251)
M5230-05321	COVER (LJ51-5321)
M5231-01001	LENS (LI150-00)
M5231-01151	BARREL (LI151-1151)
M5231-011811	WASHER T=0.05 (LI151-118)
M5231-011812	WASHER T=0.1 (LI151-118B)
M5231-011813	WASHER T=0.2 (LI151-118C)
M5231-011814	WASHER T=0.03 (LI151-118D)
M5231-0212T1	RING (LI151-212S1)
M5231-02141	RING (LI151-2141)
M5231-02151	DEVICE (LI151-2151)
M5231-02171	RING (LI151-2171)
M5231-0221T1	BLADE (LI151-221S1)
M5231-0231T1	CAM (LI151-231S1)
M5231-02361	CAM (LI151-2361)
M5231-02371	RETAINER (LI151-2371)
M5231-0238T1	RING (LI151-238S1)
M5231-03001	HELICOID (LI151-3001)
M5231-0311T1	HELICOID (LI151-311S1)
M5231-04111	RING (LI151-4111)
M5231-04121	RING (LI151-4121)
M5231-04131	RING (LI151-4131)
M5231-04141	RUBBER GRIP (LI151-4141)
M5231-04171	RING (LI151-4171)
M5231-0515T1	LEVER (LI151-515S1)
M5231-05411	COVER (LI151-5411)
M5232-03001	HELICOID (LI152-3001)
M5232-04171	APERTURE (LI152-4171)
M5232-05001	MOUNT (LI152-5001)
M5232-S3111	HELICOID (LI152-311S1)
M5234-01161	BARREL (LI141-1161)

 


M5234-04121	RING (LI141-4121)
M5234-04141	GRIP (141-4141)
M5234-05411	COVER (141-5411)
M5235-04171	RING (LI142-4171)
M5236-000011	FRONT LENS UNIT
M5236-000012	MIDDLE LENS UNIT
M5236-000013	REAR LENS UNIT
M5236-01211	INNER BARREL
M5236-0212T1	OPERATING RING
M5236-02141	SECURING RING
M5236-02151	DIVIDING DEVICE
M5236-0231T1	CONTROL CAM
M5236-0235T1	RETAINER
M5236-0311T1	HELICOID ASS'Y
M5236-04111	NAME RING
M5236-04121	FILTER RING
M5236-04141	FOCUSING RING
M5236-05141	COUPLING ARM
M5237-01011	LENS ASS'Y (LI130-00)
M5237-0211T1	RING (LI131-211S1)
M5237-0221T1	BLADE (LI131-221S1)
M5237-0231T1	CAM (LI131-231S1)
M5237-0238T1	RING (LI131-238S1)
M5237-0311T1	HELICOID (LI131-311S1)
M5237-03161	KEY (LI131-3161)
M5237-04111	RING (LI131-4111)
M5237-04121	RING (LI131-4121)
M5237-04131	FOCUSING RING (LI131-4131)
M5237-04141	GRIP (LI131-4141)
M5237-04151	RING (LI131-4151)
M5237-0515T1	LEVER (LI131-515S1)
M5238-0311T1	HELICOID (LI132-311S1)
M5239-01001	LENS ASS'Y (5239-00001)
M5239-01181	ADJUSTING WASHER
M5239-01191	ADJUSTING WASHER
M5239-02171	ADJUSTING WASHER
M5239-02181	ADJUSTING WASHER
M5239-02191	ADJUSTING WASHER
M5239-0311T1	HELICOID ASS'Y
M5239-04111	NAME RING
M5239-04121	FILTER RING
M5239-04131	FOCUSING RING
M5241-01001	LENS (LE220-00)
M5241-0238T1	RING (LE221-238S1)
M5241-04111	RING (LE221-4111)
M5241-04131	RING (LE221-4131)
M5241-04171	RING (LE221-4171)
M5242-01011	FRONT LENS (LE222-001)
M5242-03001	HELICOID (LE222-3001)
M5242-04131	FOCUS RING (LE222-4131)
M5242-04171	RING (LE222-4171)
M5242-S3111	HELICOID ASS Y
M5244-01171	BAFFLE (LE191-1171)
M5244-0211T1	RING (LE191-211S1)
M5244-02131	RING (LE191-2131)
M5244-02141	DEVICE (LE191-2141)

  



M5244-0221T1	BLADE (LE191-221S1)
M5244-0221T2	BLADE (LE191-221S2)
M5244-0231T1	CAM (LE191-231S1)
M5244-02371	SPRING (LE191-2371)
M5244-0241T1	CAM (LE191-241T1)
M5244-02441	RETAINER (LE191-2441)
M5244-03001	HELICOID (LE191-3001)
M5244-03141	HEY (LE191-3141)
M5244-03161	STOPPER (LE191-3161)
M5244-04111	NAME RING (LE191-4111)
M5244-04122	RING (LE191-4122)
M5244-04141	HOOD RING (LE191-4142)
M5244-04171	GRIP (LE191-4171)
M5244-04181	RING (LE191-4181)
M5244-04262	VELVETEEN (LE191-4262)
M5244-05111	RING (LE191-5111)
M5244-0512T1	LEVER (LE191-512S1)
M5244-05171	HUB (LE191-5171)
M5244-05211	SPRING (LE191-5211)
M5245-03001	HELICOID (LE192-3001)
M5245-05001	MOUNT RING (LE192-5001)
M5246-0213T1	RING (LE341-213T1)
M5246-02141	FIXING RING (LE341-2141)
M5246-0221T1	BLADE (LE341-221T1)
M5246-0241T1	CAM (LE341-241T1)
M5246-0245T1	CAM RING (LE341-245T1)
M5246-0311T1	HELICOID ASS'Y (LE341-311T1)
M5246-03161	STOPPER (LE341-3161)
M5246-04111	NAME RING (LE341-4111)
M5246-04121	RING (LE341-4121)
M5246-04131	RING (LE341-4131)
M5246-04141	HOOD RING (LE341-4141)
M5246-04161	RING (LE341-4161)
M5246-04171	RUBBER GRIP (LE341-4171)
M5246-04211	RING (LE341-4211)
M5246-04261	VELVETEEN (LE341-4261)
M5246-04271	VELVETEEN (LE341-4271)
M5246-04281	RETAINER (LE341-4281)
M5246-05001	MOUNT ASS'Y (LE341-5001)
M5246-05111	MOUNT RING
M5246-0512T1	LEVER (LE341-512T1)
M5246-05211	SPRING (LE341-5211)
M5247-01002	LENS (LE240-02)
M5247-01172	VELVETEEN (LE241-1172)
M5247-02111	BARREL (LE241-2111)
M5247-02112	BARREL (LE241-2112)
M5247-0212T1	RING (LE241-212S1)
M5247-0214T1	RING (LE241-214T1)
M5247-02151	DEVICE (LE241-2151)
M5247-0221T1	BLADE (LE241-221S1)
M5247-0231T1	CAM (LE241-231S1)
M5247-02372	SPRING (LE241-2372)
M5247-0241T1	RING (LE241-241S1)
M5247-0311T1	HELICOID (LE241-311S1)
M5247-04111	RING (LE241-4111)
M5247-04121	GRIP (LE241-4121)

  



M5247-04142	HOOD RING (LE241-4142)
M5247-04162	VELVETEEN (LE241-4162)
M5247-04171	RING (LE241-4171)
M5247-04311	RING (LE241-4311)
M5247-05001	MOUNT (LE241-5001)
M5247-05111	RING (LE241-5111)
M5247-0515T1	LEVER (LE241-515T1)
M5247-0521T1	LEVER (LE241-521S1)
M5247-05311	BARREL (LE241-5311)
M5247-0532T1	RING (LE241-532T1)
M5248-0311T1	HELICOID ASS'Y (LE242-311S1)
M5248-04111	FOCUS RING (LE242-4111)
M5248-04171	RING (LE242-4171)
M5248-04181	COUPLER (LE242-4181)
M5248-04221	PRING (LE242-4221)
M5251-01001	LENS (LF580-00)
M5251-01181	VELVETEEN (LF581-1181)
M5251-0311T1	HELICOID (LF581-311S1)
M5251-04111	RING (LF581-4111)
M5251-04141	HOOD (LF581-4141)
M5251-04161	VELVETEEN (LF581-4161)
M5251-04171	RING (LF581-4171)
M5251-04231	PIN (LF581-4231)
M5252-0311T1	HELICOID (LF582-311S1)
M5252-04111	RING (LF582-4111)
M5252-04171	RING (LF582-4171)
M5252-04181	COUPLER (LF582-4181)
M5254-0100T1	BARREL ASS'Y (LF531-100S1)
M5254-01011	FRONT LENS (LF53100-1)
M5254-01021	REAR LENS (LF53100-2)
M5254-0118T1	RING (LF531-118S1)
M5254-0119T1	RING (LF531-119S1)
M5254-01231	WASHER (LF531-1231)
M5254-02111	RING (LF531-2111)
M5254-02121	DEVICE (LF531-2121)
M5254-0213T1	RING (LF531-213S1)
M5254-0221T1	BLADE (LF531-221S1)
M5254-0231T1	CAM (LF531-231S1)
M5254-02361	SPRING (LF531-2361)
M5254-02371	ARM (LF531-2371)
M5254-02441	RETAINER (LF531-2441)
M5254-02451	RING (LF531-2451)
M5254-02461	CONNECTOR (LF531-2461)
M5254-02481	SCREW (LF531-2481)
M5254-02491	RING (LF531-2491)
M5254-02521	RETAINER (LF531-2521)
M5254-02531	RING (LF531-2531)
M5254-02551	SPRING (LF531-2551)
M5254-0311T1	HELICOID (LF531-311S1)
M5254-03141	LEY (LF531-3141)
M5254-03161	STOPPER (LF531-3161)
M5254-03181	SCREW (LF531-3181)
M5254-04111	RING (LF531-4111)
M5254-04141	BARREL (LF531-4141)
M5254-0415T1	HOOD (LF531-415S1)
M5254-04171	GRIP (LF531-4171)

 


M5254-04181	SCREW (LF531-4181)
M5254-04211	RING (LF531-4211)
M5254-04221	SCREW (LF531-4221)
M5254-04231	SCREW (LF531-4231)
M5254-04241	SCREW (LF531-4241)
M5254-04251	SCREW (LF531-4251)
M5254-04261	SCREW (LF531-4261)
M5254-04271	PLATE (LF531-4271)
M5254-04291	PLATE (LF531-4291)
M5254-04321	PLATE (LF531-4321)
M5254-04331	BUSHING (LF531-4331)
M5254-04411	RING (LF531-4411)
M5254-04451	SPACER (LF531-4451)
M5254-05111	RING (LF531-5111)
M5254-0512T1	LEVER (LF531-512S1)
M5254-05181	SCREW (LF531-5181)
M5254-05211	SPRING (LF531-5211)
M5254-05231	SCREW (LF531-5231)
M5254-0524T1	PLATE (LF531-524S1)
M5254-05271	RING (LF531-5271)
M5254-05311	PLATE (LF531-5311)
M5254-05321	RING (LF531-5321)
M5254-05351	SPRING (LF531-5351)
M5255-01011	LENS (LF611-011)
M5255-01021	LENS (LF611-021)
M5255-01032	LENS (LF611-032)
M5255-01041	LENS (LF611-041)
M5255-02001	BARREL (LF611-2001)
M5255-02111	BARREL (LF611-2111)
M5255-0212T1	RING (LF611-212T1)
M5255-02151	RING (LF611-2151)
M5255-0221T1	BLADE (LF611-221T1)
M5255-0231T1	RETAINER (LF611-231T1)
M5255-0234T1	LEVER (LF611-234T1)
M5255-02361	SHAFT (LF611-2361)
M5255-0237T1	CAM (LF611-237T1)
M5255-02421	SCREW (LF611-2421)
M5255-02431	SPRING (LF611-2431)
M5255-02441	SPRING (LF611-2441)
M5255-02461	PIN (LF611-2461)
M5255-02512	CAM (LF611-2512)
M5255-02522	PAWL (LF611-2522)
M5255-02541	RETAINER (LF611-2541)
M5255-02611	BARREL (LF611-2611)
M5255-0262T1	RING (LF611-262S1)
M5255-02651	WASHER (LF611-2651)
M5255-03001	HELICOID (LF611-3001)
M5255-03141	PIN (LF611-3141)
M5255-03221	CAM (LF611-3221)
M5255-03231	RETAINER (LF611-3231)
M5255-03241	RING (LF611-3241)
M5255-0325T1	ARM (LF611-325T1)
M5255-03281	SPACER (LF611-3281)
M5255-03311	RING (LF611-3311)
M5255-03321	ANCHOR (LF611-3321)
M5255-03331	SPRING (LF611-3331)

  


M5255-03341	LEVER (LF611-3341)
M5255-03351	SCREW (LF611-3351)
M5255-03361	RETAINER (LF611-3361)
M5255-03371	RING (LF611-3371)
M5255-04002	RING (LF611-4002)
M5255-04111	RING (LF611-4111)
M5255-04121	RING (LF611-4121)
M5255-0414T1	SPRING (LF611-414T1)
M5255-04151	COVER (LF611-4151)
M5255-04181	CAM (LF611-4181)
M5255-04191	SCREW (LF611-4191)
M5255-0421T2	RING ASS'Y (LF611-421S2)
M5255-0423T1	SPRING (LF611-423T1)
M5255-04331	RING (LF611-4331)
M5255-04341	PIN (LF611-4341)
M5255-0441T1	BARREL (LF611-441T1)
M5255-04431	RING (LF611-4431)
M5255-04511	RING (LF611-4511)
M5255-04521	STOPPER (LF611-4521)
M5255-04551	GRIP (LF611-4551)
M5255-04611	RING (LF611-4611)
M5255-0466T1	RING (LF611-466T1)
M5255-04711	RING (LF611-4711)
M5255-05111	RING (LF611-5111)
M5255-0512T1	RING (LF611-512T1)
M5255-05141	RING (LF611-5141)
M5255-0515T1	LEVER (LF611-515T1)
M5255-05221	COVER (LF611-5221)
M5259-00031	#3 LENS
M5259-01041	VARIATION LENS UNIT
M5259-01071	COMPENSATION LENS UNIT
M5259-01081	MASTER LENS UNIT
M5259-01111	FRONT BARREL
M5259-01121	NAME RING
M5259-01131	RETAINING RING
M5259-01261	WASHER T=0.2
M5259-01271	WASHER T=0.1
M5259-01281	WASHER T=0.05
M5259-02111	SECURING RING
M5259-0212T1	OPERATING RING
M5259-02151	FIXING RING
M5259-0221T1	DIAPHRAGM BLADE
M5259-02251	WASHER T=0.05
M5259-02261	WASHER T=0.05
M5259-02271	WASHER
M5259-0231T1	APERTURE CAM
M5259-02321	SCREW
M5259-02341	SPRING
M5259-02351	ANCHOR (LF611-3321)
M5259-0236T1	APERTURE CONTROL CAM
M5259-0241T1	OPERATING RING
M5259-0245T1	LINK LEVER
M5259-03101	ZOOMING BARREL ASS'Y
M5259-03131	LIGHT BAFFLE
M5259-04131	STOPPER
M5259-04161	ZOOMING RING

  



M5259-04171	APERTURE RING
M5259-04311	RUBBER GRIP
M5259-04321	RUBBER GRIP
M5259-0441T1	BARREL
M5259-04421	LINK LEVER
M5259-04431	OPERATING RING
M5259-04441	STOPPER
M5259-04471	D. OF FIELD SCALE RING
M5259-04511	MOUNT BASE RING
M5259-0511T1	MOUNTING RING
M5259-05151	LINK LEVER
M5259-05211	SPRING
M5259-05221	ANCHOR
M5259-05311	AM SETTING RING
M5259-05341	SPRING
M5259-05381	BACK COVER
M5259-05411	WASHER T=0.05
M5259-05421	WASHER
M5259-05431	WASHER T=0.08
M5259-05441	WASHER T=0.1
M5259-05451	WASHER T=0.2
M5259-05461	WASHER T=0.5
M5259-S0011	#1, #2 LENS
M5259-S3011	HELICOID ASS'Y
M5259-S4111	FOCUSING RING
M5262-01011	FRONT LENS UNIT
M5262-01021	VARIATION LENS UNIT
M5262-01031	COMPENSATION LENS UNIT
M5262-01041	MASTER LENS UNIT
M5262-01261	WASHER T=0.2
M5262-01271	WASHER T=0.08
M5262-01281	WASHER T=0.07
M5262-01291	WASHER T=0.05
M5262-02111	SECURING RING
M5262-0212T1	OPERATING RING
M5262-02161	FIXING RING
M5262-02211	DIAPHRAGM FRAME
M5262-0222T1	DIAPHRAGM CRANK
M5262-02231	SHAFT
M5262-0231T1	DIAPHRAGM BLADE
M5262-0235T1	APERTURE CONTROL CAM
M5262-02361	FIXING RING
M5262-03131	CYLINDRICAL CAM
M5262-03171	STOPPER
M5262-04111	SEKOR RING
M5262-04121	HOOD RING
M5262-04131	VELVETEEN
M5262-04141	VELVETEEN
M5262-0415T1	FOCUSING RING
M5262-04191	RUBBER GRIP
M5262-04211	INDICATION TUBE
M5262-04221	SCREW
M5262-04241	ZOOM RING
M5262-04251	RUBBER GRIP
M5262-04271	DIAPHRAGM BARREL
M5262-04281	FIXING NUT

 


M5262-04361	CAM ACTUATING RING
M5262-04371	SCREW
M5262-04411	REAR BARREL
M5262-0442T1	OPERATING LEVER
M5262-04441	SHAFT
M5262-04461	RACK
M5262-04471	GUIDE
M5262-04481	SPRING
M5262-05111	MOUNTING RING
M5262-05131	COVER
M5262-S3101	HELICOID ASS'Y
M5265-01011	#1, #2 LENS (LG360-01T1)
M5265-01021	#3, #4 LENS (LG360-03T1)
M5265-01031	#5, #6 LENS (LG360-05T1)
M5265-01041	#7 LENS (LG360-07T1)
M5265-02001	BARREL ASS'Y (LG363-2001)
M5265-02111	BARREL
M5265-0212T1	RING (LG363-212T1)
M5265-0221T1	BLADE (LG363-221T1)
M5265-0231T1	BELL CRANK (LG363-231T1)
M5265-02331	SCREW (LG363-2331)
M5265-02341	SPRING (LG363-2341)
M5265-02381	CAM RING (LG363-2381)
M5265-02411	BELL CASE (LG363-2411)
M5265-02421	RING (LG363-2421)
M5265-02431	SPACER (LG363-2431)
M5265-02451	LEVER (LG363-2451)
M5265-02471	STOPPER (LG363-2471)
M5265-0311T1	HELICOID (LG363-311T1)
M5265-04111	NAME RING (LG363-4111)
M5265-0412T1	FILTER RING (LF363-412T1)
M5265-04161	RUBBER GRIP (LG363-4161)
M5265-04211	RING (LG363-4211)
M5265-04231	STOPPER (LG363-4231)
M5265-04241	KEY (LG363-4241)
M5265-04251	RING (LG363-4251)
M5265-04261	SCREW (LG363-4261)
M5265-04271	BANK (LG363-4271)
M5265-04281	RUBBER GRIP (LG363-4281)
M5265-04291	VELVETEEN (LG363-4291)
M5265-04331	RING (LG363-4331)
M5265-04341	SCREW (LG363-4341)
M5265-04351	SCREW (LG363-4351)
M5265-04361	SPRING (LG363-4361)
M5265-04371	ANCHOR (LG363-4371)
M5265-04381	PLATE (LG363-4381)
M5265-0441T1	LEVER (LG363-441T1)
M5265-04461	SPRING (LG363-4461)
M5265-04491	SCREW (LG363-4491)
M5265-04511	RING (LF363-4511)
M5265-04521	ARM (LG363-4521)
M5265-04561	BAYONET BASE (LG363-4561)
M5265-05002	MOUNT (LF363-5002)
M5265-05112	RING (LG363-5112)
M5265-0512T1	LEVER (LG363-512T1)
M5265-0514T1	LEVER (LG363-514T1)

 



M5265-05231	SCREW (LG363-5231)
M5265-0531T1	RING (LG363-531T1)
M5266-01001	LENS ASS'Y
M5266-02121	SECURING RING
M5266-02131	SCTUATING RING
M5266-02151	TUBE
M5266-02161	SCREW
M5266-0221T1	DIAPHRAGM BLADE
M5266-03001	HELICOID ASS'Y
M5266-04111	NAME RING
M5266-04121	FILTER RING
M5266-04141	APERTURE RING
M5266-04211	FOCUSING RING
M5266-04221	RUBBER GRIP
M5266-04251	COLLAR
M5266-04281	GUIDE PLATE
M5266-04311	SHIFT SCREW
M5266-04321	GUIDE TUBE
M5266-04331	HOLD PLATE
M5266-04341	KNOB
M5266-04351	SCREW
M5266-04361	COLLAR
M5266-04411	D. OF FIELD SCALE RING
M5266-04421	FIXING NUT
M5266-04431	METER COUPLER RING
M5266-04491	SPRING
M5266-04551	LIGHT BAFFLE
M5266-05111	MOUNTING RING
M5266-S4262	SHIFTING RING ASS'Y
M5267-01011	F. REFLECTION MIRROR LENS
M5267-01021	I. REFLECTION MIRROR LENS
M5267-01031	REAR LENS UNIT
M5267-01111	RETAINING RING
M5267-01151	RETAINING RING
M5267-01191	RING
M5267-0123T1	FILTER
M5267-0127T1	FILTER
M5267-0311T1	HELICOID ASS'Y
M5267-04111	HOOD FIXING TUBE
M5267-04121	HOOD
M5267-04131	VELVETEEN
M5267-04141	VELVETEEN
M5267-04151	RUBBER GRIP
M5267-04211	DISTANCE SCALE RING
M5267-04221	FOCUSING RING
M5267-04231	STOPPER
M5267-04241	FIXING RING
M5267-04281	RUBBER GRIP
M5267-04311	APERTURE RING
M5267-04331	SPRING
M5267-04341	STOPPER PIN
M5267-04351	BASE RING
M5267-04371	RUBBER GRIP
M5267-04421	MOUNT BASE RING
M5267-04441	LEAF SPRING
M5267-04461	GUIDE PLATE

  



M5267-05111	MOUNTING RING
M5271-4111T1	BASE PLATE (SLS-4111T1)
M5271-41121	PLATE (SLS-41121) (*****)
M5271-41122	PLATE (SLS-41122)
M5271-41131	SCREW (SLS-41131)
M5271-41161	LEAF SPRING U (SLS-41161)
M5271-41171	LEAF SPRING L (SLS-41171)
M5271-4121T2	LEFT PANEL (SLS-4121T2)
M5271-41251	SPRING (SLS-41251)
M5271-41282	HUB (SLS-41282)
M5271-41311	SPOOL HOLDER (SLS-41311) (*****)
M5271-41312	SPOOL HOLDER (SLS-41312)
M5271-41352	SPOOL HOLDER (SLS-41312)
M5271-41342	SPOOL GEAR (SLS-41342)
M5271-41351	SPOOL (SLS-41351)
M5271-41352	SPOOL (SLS-41352)
M5271-41361	NUT (SLS-41361)
M5271-41391	SPRING (SLS-41391)
M5271-41411	GUIDE (SLS-41411)
M5271-41421	SPACER (SLS-41421)
M5271-41431	GUIDE (SLS-41431)
M5271-41441	SPACER (SLS-41441)
M5271-41471	COVER (SLS-41471)
M5271-4149T1	ROLLER (5271-449T2) (*****)
M5271-4149T3	ROLLER (SLS-4149T3)
M5271-4151T1	RIGHT PANEL (SLS-4151T1)
M5271-41531	GUIDE (SLS-41531)
M5271-41541	SPACER (SLS-41541)
M5271-41551	GUIDE (SLS-41551)
M5271-41561	SPACER (SLS-41561)
M5271-41581	PLATE (SLS-41581)
M5271-4161T1	SPOOL CLIP L (SLS-4161T1)
M5271-4162T1	SPOOL CLIP U (SLS-4162T1)
M5271-41631	HUB (SLS-41631)
M5271-41651	SCREW (SLS-41651)
M5271-41661	SCREW (SLS-41661)
M5271-41671	SHAFT (SLS-41671)
M5271-41681	SHAFT (SLS-41681)
M5271-41682	SHAFT (SLS-41682)
M5271-4172T1	FILM ROLLER (SLS-4172T1) (*****)
M5271-4172T3	FILM ROLLER (SLS-4172T3)
M5271-41731	SHAFT (SLS-41731) (*****)
M5271-41732	SHAFT (SLS-41732)
M5271-41741	SHAFT (SLS-41741)
M5271-4176T1	T-SPRING (SLS-4176S1)
M5271-4182T2	WHEEL (SLS-4182T2)
M5271-41832	GEAR (SLS-41832)
M5271-41841	SCREW (SLS-41841)
M5271-41851	SPRING (SLS-41851)VOIR 5271-41852
M5271-41852	SPRING (SLS-41852)
M5271-41861	COVER (SLS-41861)
M5271-41901	RELEASE LATCH ASS'Y
M5271-41911	LATCH BASE (SLS-41911)
M5271-41921	BRACKET (SLS-41921)
M5271-41922	BRACKET (SLS-41922)
M5271-41931	BRACKET (SLS-41931)

 



M5271-41932	BRACKET (SLS-41932)
M5271-41941	BRACKET (SLS-41941)
M5271-41951	SPRING (SLS-41951)
M5271-41961	PLATE 120 (SLS-41961)
M5271-41971	LATCH (SLS-41971)
M5271-41972	LATCH (SLS-41972)
M5271-41982	LATCH (SLS-41982)
M5271-42171	ANTIFRICTION (SLS-42171)
M5272-41322	FRICITION SPRING
M5272-41332	SCREW
M5272-42121	PLATE (SLS-42121)
M5272-42122	PRESSURE PLATE 220
M5272-42131	GUIDE (SLS-42131)
M5272-42132	GUIDE (SLS-42132)
M5272-42151	PLATE 220 (SLS-42151)
M5272-42161	SEALING STRIP (SLS-42161)
M5273-22151	RING (SLS-22111)
M5273-22121	BAYONET DISK
M5273-22151	PIN (SLS-22151)
M5273-22161	LEAF SPRING (SLS-22161)
M5273-22181	PLATE (SLS-22181)
M5273-22191	KNOB (SLS-22191)
M5273-22211	KNOB (SLS-22211)
M5273-22232	KNOB LID (SLS-22232)
M5273-22241	RING (SLS-22241)
M5273-22261	WASHER (SLS-22261)
M5273-2231T1	CRANK (SLS-2231T1)
M5273-22321	SHAFT (SLS-22321)
M5273-22331	LEAF SPRING (SLS-22331)
M5273-22362	ANGLE PLATE (SLS-22362)
M5273-22382	ANGLE PLATE (SLS-22382)
M5273-22411	KNOB (SLS-22411)
M5273-22431	SCREW (SLS-22431)
M5273-29371	LEATHERETTE
M5274-2211T1	F.A. CRANK (SLT-2211T1)
M5274-22121	SHAFT (SLT-22121)
M5274-22131	CRANK LID (SLT-22131)
M5274-22141	SPRING (SLT-22141)
M5274-22151	KNOB (SLT-22151)
M5274-22171	ANGLE PLATE (SLT-22171)
M5274-22191	SCREW (SLT-22191)
M5274-2221T1	BASE DISK (SLT-2221T1)
M5274-22241	SPRING (SLT-22241)
M5274-22251	BAYONET DISK (SLT-22251)
M5275-2711T2	FRAME (SLS-2711T2)
M5275-27121	CUSHION (SLS-27121)
M5275-27141	BOTTOM PLATE (SLS-27141)
M5275-27161	CUSHION (SLS-27161)
M5275-27171	EARTH PLATE (SLS-27171)
M5275-27191	COVER (SLS-27191)
M5275-27211	P. PRISM LARGE (SLS-27211)
M5275-27221	HOLDER (SLS-27221)
M5275-27231	CUSHION (SLS-27231)
M5275-27251	SWITCH (SLS-27251)
M5275-2725T1	OFF SWITCH (SLS-2725T1)
M5275-27291	LEAD WIRE (SLS-27291)

  


M5275-27321	FRAME (SLS-27321)
M5275-27331	HOLDER (SLS-27331)
M5275-27332	PRISM HOLDER (SLS-27332)
M5275-27341	CUSHION (SLS-27341)
M5275-27371	STOPPER (SLS-27371)
M5275-27381	SCREW (SLS-27381)
M5275-27391	ANCHOR (SLS-27391)
M5275-2741T1	LOCKING ARM (SLS-2741S1)
M5275-2742T1	LOCKING ARM (SLS-2742S1)
M5275-27441	SCREW (SLS-27441)
M5275-27451	SPRING (SLS-27451)
M5275-2746T1	COUPLING ARM (SLS-2746S1)
M5275-27481	SCREW (SLS-27481)
M5275-27491	COLLAR (SLS-27491)
M5275-2753T2	CONTACT (SLS-2753T2)
M5275-27542	COLLAR (SLS-27542)
M5275-27561	SPRING (SLS-27561)
M5275-27571	ANCHOR (SLS-27571)
M5275-27581	PIN (SLS-27581)
M5275-27611	TOP COVER (SLS-27611)
M5275-27632	BUTTON (SLS-27632)
M5275-27641	GUIDE PLATE (SLS-27641)
M5275-27651	RELEASE BAR (SLS-27651)
M5275-27661	SPRING (SLS-27661)
M5275-27671	LEVER (SLS-27671)
M5275-27681	LEVER (SLS-27681)
M5275-27711	SHOE (SLS-27711)
M5275-27712	SHOE (SLS-27712)
M5275-27721	PLATE (SLS-27721)
M5275-27742	SHOE COVER (SLS-27742)
M5275-2778T2	BASE PLATE (SLS-2778T2)
M5275-27791	COVER (SLS-27791)
M5275-27811	EYEPiece (SLS-27811)
M5275-27831	FRAME (SLS-27831)
M5275-27851	FRAME (SLS-27851)
M5275-27871	PLATE (SLT-27871)
M5275-27911	LEATHERETTE (SLS-27911)
M5275-27922	SHAFT (SLS-27922)
M5275-27931	CONTACT (SLS-27931)
M5275-27941	CONTACT (SLS-27941)
M5275-27951	LEAD WIRE (SLS-27951)
M5275-27961	LEAD WIRE (SLS-27961)
M5275-27981	PLATE (SLS-27981)
M5276-7111T1	BASE FRAME (SLS-7111T1)
M5276-71141	BOTTOM PLATE (SLS-71141)
M5276-71161	TOP COVER (SLS-71161)
M5276-71171	SCREW (SLS-71171)
M5276-71181	NAME FRAME (SLS-71181)
M5276-71221	PRISM HOLDER (SLS-71221)
M5276-71241	LOCKING ARM (SLS-71241)
M5276-71251	LOCKING ARM (SLS-71251)
M5276-71261	CUSHION (SLS-71261)
M5276-71271	ANGLE PLATE (SLS-71271)
M5276-71381	FRAME (SLS-71381)
M5276-7141T1	LOCKING ARM (SLS-7141T1)
M5276-7142T1	LOCKING ARM (SLS-7142T1)

  



M5276-71431	GUIDE SCREW (SLS-71431)
M5276-71441	COLLAR (SLS-71441)
M5276-71451	SCREW (SLS-71451)
M5276-71461	SPRING (SLS-71461)
M5276-71491	HOLDER PLATE (SLS-71491)
M5276-71581	GUIDE PLATE (SLS-71581)
M5276-71591	RELEASE BAR (SLS-71591)
M5276-71621	SPRING (SLS-71621)
M5276-71631	STOPPER (SLS-71631)
M5276-71661	ANCHOR (SLS-71661)
M5276-71671	LEATHERETTE (SLS-71671)
M5276-71682	LEATHERETTE (SLS-71682)
M5276-71741	SWITCH PIN (SLS-71741)
M5276-7176T1	EARTH PLATE (SLS-7176T1)
M5276-71771	FINDER COVER (SLS-71771)
M5276-7184T1	CONTACT (SLS-7184T1)
M5276-71901	COUPLING (SLT-71901)
M5276-7191T1	PLATE (SLS-7191S1)
M5276-7194T2	ARM (SLS-7194S2)
M5276-71951	GUIDE KEY (SLS-71951)
M5276-71962	SCREW (SLS-71962)
M5276-72141	SPRING (SLS-72141)
M5276-7215T1	LEVER (SLS-7215S1)
M5276-72161	SHAFT (SLS-72161)
M5276-72181	SPRING (SLS-72181)
M5276-72211	ARM (SLS-72211)
M5276-72231	STOPPER (SLS-72231)
M5276-72241	SHAFT (SLS-72241)
M5276-72261	SPRING (SLS-72261)
M5276-72271	ANCHOR (SLS-72271)
M5276-72281	PLATE (SLS-72281)
M5276-72311	BRUSH (SLS-72311)
M5276-72321	BRUSH STAND (SLS-72321)
M5276-72371	HOLDER PLATE (SLT-72371)
M5276-7241T1	BOARD (SLT-7241S1)
M5276-72431	LED (SLS-72431)
M5276-7244T1	LEAD COVER (SLS-7244T1)
M5276-72451	INDICATOR (SLS-72451)
M5276-7247T1	S.P.D. DIODE (SLS-7247T1)
M5276-72501	RESISTOR ASS'Y (SLT-72501)
M5276-7251T1	BASE FRAME (SLS-7251S1)
M5276-72521	S. DIAL HUB (SLT-72521)
M5276-7254T1	BASE PLATE (SLS-7254S1)
M5276-72561	SPRING (SLS-72561)
M5276-72581	DISK (SLT-72581)
M5276-72591	SPEED DIAL (SLT-72591)
M5276-72651	SPEED BRUSH (SLT-72651)
M5276-72691	SCREW (SLS-72691)
M5276-72711	TIME BOARD (SLT-72711)
M5276-7274T1	BRUSH DISK (SLS-7274S1)
M5276-72771	SCREW (SLS-72771)
M5276-72801	RESISTOR ASS'Y (SLT-72801)
M5276-72861	F.S.P. BOARD (SLT-72861)
M5276-7288T1	PLATE (SLS-7288S1)
M5276-72912	HUB (SLS-72912)
M5276-72931	WASHER (SLS-72931)

  



M5276-72981	DISK (SLS-72981)
M5276-72991	GUIDE PIN (SLS-72991)
M5276-7311T1	DIAL (SLS-7311T1)
M5276-73131	SPRING (SLS-73131)
M5276-73141	SCREW (SLS-73141)
M5276-73151	COVER DISK (SLS-73151)
M5276-73171	LEATHERETTE (SLS-73171)
M5276-73182	DISK (SLS-73182)
M5276-73311	CONTACT (SLS-73311)
M5276-73321	PLATE (SLS-73321)
M5276-73341	CONTACT (SLS-73341)
M5276-73361	LED LENS (SLS-73361)
M5276-73391	CUSHION (SLT-73391)
M5276-7341T2	MAIN SWITCH (SLT-7341T2)
M5276-73451	SWITCH BUTTON (SLS-73451)
M5276-73461	SWITCH GUIDE (SLS-73461)
M5276-73471	NUT (SLS-73471)
M5276-73481	SPRING (SLS-73481)
M5276-73502	BOARD (SLT-73502)
M5276-73521	HOLDER PLATE (SLS-73521)
M5276-73541	HOLDER (SLS-73541)
M5276-73641	I. FIM (SLS-73641)
M5276-73691	CUSHION (SLS-73691)
M5276-73711	LEAD WIRE (SLS-73711)
M5276-73721	LEAD WIRE (SLS-73721)
M5276-73741	LEAD WIRE (SLS-73741)
M5276-73761	LEAD WIRE (SLS-73761)
M5276-73781	LEAD WIRE (SLS-73781)
M5276-73791	LEAD WIRE (SLS-73791)
M5276-73811	LEAD WIRE (SLS-73811)
M5276-73821	LEAD WIRE (SLS-73821)
M5276-73861	LEAD WIRE (SLS-73861)
M5276-73871	LEAD WIRE (SLS-73871)
M5276-73911	LEAD WIRE (SLS-73911)
M5276-73921	LEAD WIRE (SLS-73921)
M5276-73991	RESISTOR (SLS-73991)
M5277-6511T1	BASE FRAME (SLS-6511T1)
M5277-65161	BOTTOM PLATE (SLS-65161)
M5277-65251	GLASS (SLS-65251)
M5277-65261	HOLDER (SLS-65261)
M5277-65281	CUSHION (SLS-65281)
M5277-6572T1	SUB SWTCH (SLS-6572T1)
M5277-6581T1	MAIN SWITCH (SLS-6581T1)
M5277-65881	HOLDER PLATE (SLS-65881)
M5277-65921	FRAME (SLS-65921)
M5277-6592T1	FRAME ASS'Y (SLS-6592K)
M5277-6612T1	CHAMBER (SLS-6612T1)
M5277-66131	COVER (SLS-66131)
M5277-66151	CONTACT (SLS-66151)
M5277-6618T1	BOARD (SLS-6618T1)
M5277-66401	COUPLING ASS'Y (SLS-66401)
M5277-6675T1	BOARD (SLS-6675T1)
M5277-66811	BASE PLATE (SLS-66811)
M5277-66821	BOARD (SLS-66821)
M5277-6684T1	BASE PLATE (SLS-6684T1)
M5277-66871	DISK (SLS-66871)

 



M5277-67111	DIAL (SLS-67111)
M5277-6712T1	DISK (SLS-6712T1)
M5277-67141	SHAFT (SLS-67141)
M5277-67151	DISK (SLS-67151)
M5277-67171	ASA WINDOW (SLS-67171)
M5277-67181	ASA DIAL (SLS-67181)
M5277-67211	SPRING (SLS-67211)
M5277-67221	SCREW (SLS-67221)
M5277-67251	DISK (SLS-67251)
M5277-6726T1	DISK (SLS-6726T1)
M5277-67291	NUT (SLS-67291)
M5277-67311	TOP COVER (SLS-67311)
M5277-67521	SHAFT (SLS-67521)
M5277-67531	CAM (SLS-67531)
M5277-67541	NUT (SLS-67541)
M5277-67551	SPRING (SLS-67551)
M5277-67561	SHAFT (SLS-67561)
M5277-67611	METER (SLS-67611)
M5277-6762T1	CDS CELL (SLS-6762T1)
M5277-67631	BOARD (SLS-67631)
M5277-67711	LEAD WIRE (SLS-67711)
M5277-67721	LEAD WIRE (SLS-67721)
M5277-67731	LEAD WIRE (SLS-67731)
M5277-67751	LEAD WIRE (SLS-67751)
M5277-67781	LEAD WIRE (SLS-67781)
M5277-67791	LEAD WIRE (SLS-67791)
M5277-67811	LEAD WIRE (SLS-67811)
M5277-67821	LEAD WIRE (SLS-67821)
M5277-67831	LEAD WIRE (SLS-67831)
M5277-67841	LEAD WIRE (SLS-67841)
M5277-67851	LEAD WIRE (SLS-67851)
M5277-67861	LEAD WIRE (SLS-67861)
M5277-67881	LEAD WIRE (SLS-67881)
M5277-67891	LEAD WIRE (SLS-67891)
M5277-6793T1	DISK (SLS-6793S1)
M5277-67941	DISK (SLS-67941)
M5277-67951	STOPPER (SLS-67951)
M5279-7511T2	BASE FRAME (SLT-7511T2)
M5279-75121	BOTTOM PLATE (SLT-75121)
M5279-75221	PRISM HOLDER (SLT-75221)
M5279-75381	FRAME (SLT-75381)
M5279-75411	TOP COVER (SLT-75411)
M5279-75431	HOLDER (SLT-75431)
M5279-75461	LEATHERETTE (SLT-75461)
M5279-75471	LEATHERETTE (SLT-75471)
M5279-75561	SPRING (SLS-75561)
M5279-75631	SCREW (SLT-75631)
M5279-75671	LOCKING ARM (SLT-75671)
M5279-75711	PLATE (SLT-75711)
M5279-75721	SCREW (SLT-75721)
M5279-75731	STOPPER (SLT-75731)
M5279-75741	SCREW (SLT-75741)
M5279-75751	SPRING (SLS-75751)
M5279-75761	ANCHOR (SLT-75761)
M5279-75771	RELEASE BAR (SLT-75771)
M5279-75781	SHAFT (SLT-75781)

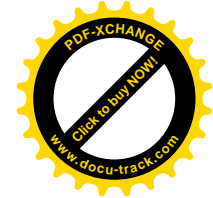  



M5279-75791	BUTTON (SLT-75791)
M5279-7581T1	PLATE (SLT-7581T1)
M5279-75831	SCREW (SLT-75831)
M5279-75841	BUTTON (SLT-75841)
M5279-75851	STOP LEVER (SLT-75851)
M5279-75861	SCREW (SLT-75861)
M5279-75871	SPRING (SLS-75871)
M5279-75881	SHAFT (SLT-75881)
M5279-75901	COUPLER (SLT-75901)
M5279-7591T	COUPLER (SLT-7591T1)
M5279-7594T1	PLATE (SLT-7594T1)
M5279-75951	GUIDE KEY (SLT-75951)
M5279-75961	SCREW (SLT-75961)
M5279-75991	SHAFT (SLT-75991)
M5279-76141	SPRING (SLS-76141)
M5279-76211	STOPPER PLATE (SLT-76211)
M5279-76231	SPRING (SLS-76231)
M5279-76241	BOARD (SLT-76241)
M5279-76261	BRUSH (SLT-76261)
M5279-76291	I. FILM (SLT-76291)
M5279-76311	BOTTOM PLATE (SLT-76311)
M5279-76321	CDS HOLDER (SLT-76321)
M5279-76331	CDS CELL (SLT-76331)
M5279-76371	DISK (SLT-76371)
M5279-76401	RESISTOR ASS'Y (SLT-76401)
M5279-7641T1	PLATE (SLT-7641T1)
M5279-76441	BOARD (SLT-76441)
M5279-7648T1	PLATE (SLT-7648T1)
M5279-76691	COVER (SLT-76691)
M5279-76881	SWITCH PIN (SLT-76881)
M5279-76911	DISK (SLT-76911)
M5279-76951	SEALING STRIP (SLT-76951)
M5279-77111	BOARD (SLT-77111)
M5279-77151	HOLDER PLATE (SLT-77151)
M5279-77181	FILM (SLT-77181)
M5279-77211	SWITCH DIAL (SLT-77211)
M5279-77231	BUTTON (SLT-77231)
M5279-77241	SPRING (SLS-77241)
M5279-77261	ON/OFF CAM (SLT-77261)
M5279-77271	PLATE (SLT-77271)
M5279-77291	ON/OFF PLATE (SLT-77291)
M5279-77301	PLATE (SLT-77301)
M5279-7731T1	PLATE (SLT-7731T1)
M5279-77341	CONTACT BASE (SLT-77341)
M5279-7741T1	SWITCH (SLT-7741S1)
M5279-77451	SPRING (SLS-77451)
M5279-77501	METER UNIT (SLT-77501)
M5279-77561	PLATE (SLT-77561)
M5279-77631	LEAD (SLT-77631)
M5279-7791T1	SIGNAL LEVER (SLT-7791T1)
M5279-7791T2	SIGNAL LEVER (SLT-7791T2)
M5279-77921	SHOULDER SCRWE (SLT-77921)
M5279-77951	SPRING (SLS-77951)
M5279-77971	STOPPER (SLT-77971)
M5279-77981	COLLAR (SLT-77981)
M5279-78251	CLLIP (SLT-78251)

  


M5279-78281	ADJUST KEY (SLT-78281)
M5279-78311	LEAD (SLT-78311)
M5279-78321	LEAD (SLT-78321)
M5279-78331	LEAD (SLT-78331)
M5279-78341	LEAD (SLT-78341)
M5279-78351	LEAD (SLT-78351)
M5279-78361	LEAD (SLT-78361)
M5279-78371	LEAD (SLT-78371)
M5279-78381	LEAD (SLT-78381)
M5279-78391	LEAD (SLT-78391)
M5279-78411	LEAD (SLT-78411)
M5279-78421	LEAD (SLT-78421)
M5279-78431	LEAD (SLT-78431)
M5279-78481	LEAD (SLT-78481)
M5279-78511	LEAD (SLT-78511)
M5279-78521	LEAD (SLT-78521)
M5279-78531	LEAD (SLT-78531)
M5279-78551	LEAD (SLT-78551)
M5279-78561	LEAD (SLT-78561)
M5280-82111	HAND GRIP L (SLT-82111)
M5280-82121	HAND GRIP R (SLT-82121)
M5280-8213T1	BASE PLATE (SLT-8213T1)
M5280-8217T1	BASE PLATE (SLT-8217T1)
M5280-8221T1	BASE PLATE (SLT-8221T1)
M5280-8228T2	BUTTON (SLT-8228T2)
M5280-82291	GUIDE SCREW (SLT-82291)
M5280-82292	GUIDE SCREW (SLT-82292)
M5280-8231T1	MOTOR (SLT-8231T1)
M5280-82331	NO. 1 GEAR (SLT-82331)
M5280-82342	COVER (SLT-82342)
M5280-82352	SET SCREW (SLT-82352)
M5280-8236T1	NO. 2 GEAR (SLT-8236S1)
M5280-8241T1	NO. 4 GEAR (SLT-8241T1)
M5280-8243T1	NO. 5 GEAR (SLT-8243S1)
M5280-8245T1	NO. 7 GEAR (SLT-8245S1)
M5280-82481	NO. 9 GEAR (SLT-82481)
M5280-8251T1	PLATE (SLT-8251T1)
M5280-82561	SPRING (SLT-82561)
M5280-82581	LEATHERETTE (SLT-82581)
M5280-82591	LEATHERETTE (SLT-82591)
M5280-82611	SWITCH (SLT-82611)
M5280-82652	LEAD WIRE (SLT-82652)
M5280-82661	LEAD WIRE (SLT-82661)
M5280-82672	HOLDER (SLT-82672)
M5280-82681	LEAD WIRE (SLT-82681)
M5280-82691	LEAD WIRE (SLT-82691)
M5280-8271T1	COUPLER (SLT-8271T1)
M5280-82741	SPRING (SLT-82741)
M5280-82751	CLAMP LEVER (SLT-82751)
M5280-82761	COUPLER KNOB (SLT-82761)
M5280-82771	SCRWE (SLT-82771)
M5280-82782	SHAFT (SLT-82782)
M5280-82791	TIGHTENER (SLT-82791)
M5280-82811	SPRING (SLT-82811)
M5280-82821	COVER (SLT-82821)
M5280-8284T1	LEVER (SLT-8284T1)

  



M5280-82871	LEVER (SLT-82871)
M5280-82881	SCREW (SLT-82881)
M5280-82891	PIN (SLT-82891)
M5280-8291T1	LEVER (SLT-8291T1)
M5280-82921	COLLAR (SLT-82921)
M5280-82931	SCREW (SLT-82931)
M5280-82941	SCREW (SLT-82941)
M5280-82951	SPRING (SLT-82951)
M5280-82981	PLATE (SLT-82981)
M5280-83111	TRIPOD SCREW (SLT-83111)
M5280-83121	SOCKET (SLT-83121)
M5280-83131	SCREW (SLT-83131)
M5280-83141	CHAMP LEVER (SLT-83141)
M5280-83151	SCREW (SLT-83151)
M5280-83161	SPRING (SLT-83161)
M5280-83171	CLICK PIN (SLT-83171)
M5280-83181	RING (SLT-83181)
M5280-83191	SCREW (SLT-83191)
M5280-83211	PIPE (SLT-83211)
M5280-83231	SCREW (SLT-83231)
M5280-83231-B	SCREW (SLT-83231-B)
M5280-83232	CONTACT PIN (SLT-83232)
M5280-83242	ELECTRODE (SLT-83242)
M5280-83251	WASHER (SLT-83251)
M5280-83261	PLATE (SLT-83261)
M5280-83281	LEAD WIRE (SLT-83281)
M5280-83291	LEAD WIRE (SLT-83291)
M5280-83311	GUIDE PLATE (SLT-83311)
M5280-83331	SOCKET (SLT-83331)
M5280-83341	COVER (SLT-83341)
M5280-83361	FRAME (SLT-83361)
M5280-83381	LEATHERETTE (SLT-83381)
M5280-83391	LEATHERETTE (SLT-83391)
M5280-8341T2	CHAMBER (SLT-8341T2)
M5280-83441	LEAD WIRE (SLT-83441)
M5280-83452	SPRING (SLT-83452)
M5280-8345T1	SPRING (SLT-8345T1)
M5280-8345T2	SPRING (SLT-8345T2)
M5280-83481	KNOB (SLT-83481)
M5280-8351T1	PLATE (SLT-8351T1)
M5280-8351T2	PLATE (SLT-8351T2)
M5280-8352T2	PLATE (SLT-8352T2)
M5280-83532	COLLAR (SLT-83532)
M5280-83541	COVER (SLT-83541)
M5280-83551	SPONGE (SLT-83551)
M5280-83571	COVER (SLT-83571)
M5280-83572	TERMINAL (SLT-83572)
M5280-83592	ELECTRODE (SLT-83592)
M5280-8361T2	PLATE (SLT-8361T2)
M5280-83621	POLE (SLT-83621)
M5280-83711	SWITCH (SLT-83711)
M5280-83731	LEAD WIRE (SLT-83731)
M5280-83741	LEAD WIRE (SLT-83741)
M5280-83751	LEAD WIRE (SLT-83751)
M5280-83761	POWER SWITCH (SLT-83761)
M5280-83771	SWITCH COVER (SLT-83771)

  



M5280-83811	LEAD WIRE (SLT-83811)
M5280-83821	GUIDE PIN (SLT-83821)
M5280-83831	GRIP BELT (SLT-83831)
M5280-83851	PLATE (SLT-83851)
M5280-83861	SCRWE (SLT-83861)
M5280-83871	COLLAR (SLT-83871)
M5280-83901	ATTACHMENT (SLT-83901)
M5280-83911	ATTACHMENT (SLT-83911)
M5280-83921	RUBBER GRIP (SLT-83921)
M5280-83982	PLATE (SLT-83982)
M5284-82111	GRIP LEFT (SLS-82111)
M5284-82121	GRIP RIGHT (SLS-82121)
M5284-82171	CAP (SLS-82171)
M5284-82211	ANGLE PLATE (SLS-82211)
M5284-8221T1	PLATE (SLS-8221S1)
M5284-82231	TRIGGER (SLS-82231)
M5284-82241	PLATE (SLS-82241)
M5284-82261	LINK LEVER (SLS-82261)
M5284-82271	SHAFT (SLS-82271)
M5284-82281	SPRING (SLS-82281)
M5284-82291	SPRING (SLS-82291)
M5284-82311	RELEASE LEVER (SLS-82311)
M5284-82321	SHOULDER SCREW (SLS-82321)
M5284-82331	COVER (SLS-82331)
M5284-82411	KNOB (SLS-82411)
M5284-82421	COVER DISK (SLS-82421)
M5284-82441	WASHER (SLS-82441)
M5284-82451	GRIP BELT (SLS-82451)
M5285-94111	PLATE (SLS-94111)
M5285-94121	GUIDE PIN (SLS-94121)
M5285-94131	TIPOD SCREW (SLS-94131)
M5285-94191	RUBBER PAD (SLS-94191)
M5285-94211	SHOE (SLS-94211)
M5285-9422T1	CAM (SLS-9422T1)
M5285-94241	BASE (SLS-94241)
M5285-94251	TRIPOD SOCKET (SLS-94251)
M5285-94281	NAME PLATE (SLS-94281)
M5285-9431T1	PALTE ASS'Y (SLS-9431T1)
M5285-94351	LEATHERETTE (SLS-94351)
M5288-56111	FRONT FRAME (SLS-56111)
M5288-56121	BELLOWS (SLS-56121)
M5288-56131	FRAME (SLS-56131)
M5288-56141	FRAME (SLS-56141)
M5288-56151	PLATE (SLS-56151)
M5288-56171	FRAME (SLS-56171)
M5288-56211	RING RT-58 (SLS-56211)
M5288-56221	RING RT-67 (SLS-56221)
M5288-56261	MASK GUIDE (SLS-56261)
M5288-56291	MASK (SLS-56291)
M5288-56311	BAR (SLS-56311)
M5288-56321	BAR (SLS-56321)
M5288-56331	SCREW (SLS-56331)
M5288-5637T1	SAFETY PIN (SLS-5637T1)
M5288-56391	SCREW (SLS-56391)
M5288-56441	HUB (SLS-56441)
M5291-51111	TUBE (SLS-51111)

 


M5291-5112T1	RING (SLS-5112S1)
M5291-51141	SPRING (SLS-51141)
M5291-51151	BAYONET (SLS-51151)
M5291-51171	COVER (SLS-51171)
M5291-5122T1	LEVER (SLS-5122T1)
M5291-51311	RING (SLS-51311)
M5291-51321	COUPLER (SLS-51321)
M5291-51351	LEVER (SLS-51351)
M5291-51361	SHAFT (SLS-51361)
M5291-51371	SPRING (SLS-51371)
M5291-51381	SCREW (SLS-51381)
M5292-51411	TUBE (SLS-51411)
M5292-5142T1	RING (SLS-5142S1)
M5292-51471	COVER (SLS-51471)
M5292-5152T1	LEVER (SLS-5152T1)
M5292-51591	SPRING (SLS-51591)
M5292-51611	RING (SLS-51611)
M5292-51621	COUPLER (SLS-51621)
M5293-51712	TUBE (SLS-51712)
M5293-5172T1	RING (SLS-5172S1)
M5293-5172T2	RING (SLS-5172S2)
M5293-51771	COVER (SLS-51771)
M5293-51772	COVER (SLS-51772)
M5293-51792	COVER (SLS-51792)
M5293-5182T1	LEVER (SLS-5182T1)
M5293-5182T2	LEVER (SLS-5182T2)
M5293-51911	RING (SLS-51911)
M5293-51912	RING (SLS-51912)
M5293-51921	COUPLER (SLS-51921)
M5294-52511	TUBE (SLS-52511)
M5294-5252T1	RING (SLS-5252S1)
M5294-52551	BAYONET (SLS-52551)
M5294-52571	COVER (SLS-52571)
M5294-5261T1	LEVER (SLS-5261T1)
M5294-52711	RING (SLS-52711)
M5294-52721	COUPLER (SLS-52721)
M5294-52811	RING (SLS-52811)
M5296-70131	FRESNEL NO. 2 (SLS-70131)
M5297-70231	FRESNEL NO. 3 (SLS-70231)
M5298-70331	FRESNEL NO. 4 (SLS-70331)
M5299-26131	FRESNEL LENS (SLS-26131)
M5470-15211	SPRING (RHL.1521)
M5600-46621	NUT (FC-4662)
M5602-4323T1	DISCK
M5602-43251	FRICITION
M5603-49961	WASHER (DFC-4996D)
M5603-49971	WASHER (DFC-4997D)
M5603-49981	WASHER (DFC-4998D)
M5608-46281	SHOE COVER (EFC-4628-D)
M5609-46141	ACCESSORY SHOE (EFC-K-4614)
M5609-46151	SPOTTER SCREW (EFC-K 4615)
M5613	RACK KNOCK PIN (EFC4654)
M5613-15101	COUNTER DIVIDING DEVICE ASS'Y
M5614-1331T3	GEAR
M5614-13301	WINDING BASE PLATE ASS'Y
M5614-22121	GUIDE PLATE R

  


M5614-23151	LEATHERETTE
M5614-24501	S COVER UNIT
M6173-78111	HOOD COVER
M6173-78141	EYERIECE RING
M6173-78151	EYERIECE BARRET
M6173-78161	GUIDE SCREW
M6173-78311	BASE FRAME
M6173-78711	LED HOUSING
M6173-78731	COVER
M6173-78761	TV SCALE
M6173-78791	SHIELD COVER
M6173-78811	BASE FRAME
M6173-7883T1	SIDE PANEL
M6173-78851	SIDE PANEL R
M6173-78871-1	ADJUSTING WASHER T=0.1
M6173-78871-2	ADJUSTING WASHER T=0.2
M6173-78871-3	ADJUSTING WASHER T=0.3
M6173-78901	PRISM
M6173-78931	HOLDER
M6173-7896T1	SPD HOUSING ASS'Y
M6173-79211	DIAL CLICK PLATE
M6173-79231	HOLDER
M6173-79601	MAIN PC BOARD
M6173-79602	MAIN PC BOARD
M6173-79681	CUSHION
M6173-79691	SHIELD COVER
M6173-79971	CUSHION
M6173-79981	SHIELD COVER
M6174-42101	REVOLVIDG BACK FRAME
M6174-42102	REVOLVIDG BACK FRAME
M6174-43201	WINDING BASE PLATE
M6174-44131	NO.2 SMALL GEAR
M6174-44201	NO.3 GEAR
M6174-4433T1	FILM COUNTER GEAR
M6174-4441T1	COUNTER DIVIDING DEVICE
M6174-44541	COUNTER DIVIDING DEVICE
M6174-445T1	AUXILIARY DIVIDING DISK
M6174-4511T1	BOTTOM PLATE
M6174-45251	WASHER
M6174-4531T1	BASE FRAME
M6174-45381	PLATE
M6174-45411	PRESSURE PLATE
M6174-45421	SHAFT
M6174-45711	TOP COVER
M6174-46311	MASK
M6174-4633T1	PLATE
M6174-46471	PLATE
M6175-08111	LENS SHUTTER
M6175-08121	HOLDER BAR
M6175-08131	SCREW
M6175-08191	SPACER FOR WINDER RZ
M6175-08251	FORESIGHT
M6175-08261	BASE STRIP LUG
M6175-08361	SPACER
M6175-08381	RUBBER COVER
M6180-01111	LENS HOLDER

  


M6180-01121	HOLDER BAR
M6180-01131	SCREW
M6180-01311	SPACER FOR WINDER RZ
M6180-01321	STOPPER PIN
M6180-01341	RUBBER COVER
M6181-01111	FILTER RING FRAME
M6181-01121	HOOD PLATE
M6181-0117T2	FEED GEAR R
M6181-0118T2	FEED GEAR L
M6181-0119T2	FEED GEAR
M6181-01241	HOLDER
M6181-01251	HOLDER
M6181-01271	KNOB
M6181-01291	LEVER
M6181-01311	KNOB
M6181-01351	BELLOWS
M6181-01361	FRAME S
M6181-01381	FRAME L
M6181-0141T1	FH PANEL
M6181-0146T1	CROSSED PLATE ASS'Y
M6181-01531	SHOULDER SCREW
M6181-01551	INTERLINK
M6181-01561	SCREW
M6181-01571	HOLDER
M6181-01611	WASHER
M6181-01621	WASHER
M6181-01631	SHAFT
M6181-01651	JOINT
M6181-01671	SCALE PLATE
M6181-01691	RUBBER SHEET
M6181-01721	MASK
M6182-01111	FH REAR PANEL
M6182-01121	LEAF SPRING
M6182-0114T1	F HOOD FRONT PANEL
M6182-01191	BELLOWS
M6182-0123T1	CROSSED PLATE ASS'Y
M6182-01281	F HOOD GUIDE
M6184-01011	ZOOM LENS MOUNT RING
M6184-01211	HOOD ROTATING STOPPER
M6188-11111	BASE FRAME
M6188-11121	SHAFT A
M6188-11131	SHAFT B
M6188-11141	WASHER
M6188-11151	WASHER
M6188-11161	SHAFT C
M6188-11201	MOTOR
M6188-11261	1,2 GEAR
M6188-11301	M BASE FRAME ASS'Y
M6188-1151T1	4,5 GEAR
M6188-11601	COUPLING GEAR ASS'Y
M6188-11801	S CONTACT SWITCH ASS'Y
M6188-12101	CONTACT PLATE ASS'Y
M6188-12111	MAIN FRAME
M6188-12151	CONTACT PLATE ASS'Y
M6188-12191	PLATE
M6188-12201	SIDE PANEL ASS'Y

 



M6188-12301	LOCKING KEY ASS'Y
M6188-12321	COVER
M6188-12401	CONTACT PIN HOUSING
M6188-12431	WASHER
M6188-12651	CUSHION
M6188-12661	CUSHION
M6188-12701	S HOUSING ASS'Y
	MAIN PC BOARD
M6188-14001	BATTERY CASE ASS'Y
M6188-14211	RUBBER
M6188-16101	TOP COVER ASS'Y
M6188-16151	BATTERY SWITCH CONTACT
M6188-16171	RUBBER
M6188-16181	TAPE
M6188-16191	TAPE
M6188-16311	BOTTOM COVER
M6188-16331	PLATE
M6188-16351	COVER
M6188-16361	RUBBER
M6188-16371	TAPE
M6195-77631	PLATE (5002-77631)
M6200-11141	CUSHION
M6200-11151	SEALING PAPER
M6200-11161	SEALING STRIP
M6200-11191	COLLAR
M6200-11211	BAYONET RING (S145-10411)
M6200-11261	SCREW
M6200-1131T1	SHADING FRAME
M6200-11401	STRAP LUG L (6200-1142T1)
M6200-11441	NUT
M6200-11511	STRAP LUG R (S145-40121)
M6200-11521	NUT (S145-40221)
M6200-11611	ISO SIGNAL PIN
M6200-11621	SPRING
M6200-11631	SIGNAL PINS HOUSING
M6200-11641	ISO F.P.C.
M6200-11651	FITTING PLATE
M6200-11681	SEALING
M6200-11701	BATTERY CASE ASS'Y
M6200-11741	CONTACT PLATE
M6200-11771	RIBBON
M6200-11801	B. CHAMBER (6200-1181T1)
M6200-1181T2	COVER
M6200-11831	SPRING
M6200-11941	RC COVER
M6200-12111	R HOOK PLATE
M6200-12201	BOTTOM BASE PLATE ASS'Y
M6200-12211	BOTTOM BASE PLATE
M6200-12311	T. SOCKET (S145-20011)
M6200-12321	TRIPOD SCREW (S145-20041)
M6200-12411	INSULATION PLATE
M6200-12421	X CONTACT
M6200-12431	CONTACT
M6200-13103	WINDING MECHANISM (Y01012)
M6200-1311T2	M BASE PLATE
M6200-13261	SPRING

 



M6200-1327T1	ADVANCE CLUTCH
M6200-1327T2	ADVANCE CLUTCH
M6200-1331T1	S2 GEAR
M6200-13331	SPRING
M6200-13341	ROLLER
M6200-13371	CLUTCH RELEASE LEVER
M6200-13432	SPRING
M6200-13433	SPRING
M6200-13551	SPRING
M6200-13591	SPRING
M6200-13641	SPRING
M6200-13671	COLLAR
M6200-13681	SEALING STRIP
M6200-13731	SPRING
M6200-1376T1	M LEVER
M6200-13781	SPRING
M6200-13931	SPRING
M6200-1426T1	SECTOR GEAR
M6200-1431T1	F1 GEAR
M6200-1441T1	COUPLER PLATE
M6200-14441	SPRING
M6200-14451	SCREW
M6200-1451T2	G BASE PLATE
M6200-1461T1	SECTOR GEAR
M6200-1465T1	GEAR
M6200-14671	HOLDER
M6200-1471T2	F. PLATE (6200-1466T2)
M6200-15102	BASE PLATE
M6200-15121	SPACER
M6200-1515T1	WINDING LEVER
M6200-1515T2	WINDING LEVER
M6200-15161	SUPPORT
M6200-15171	SPRING
M6200-15251	SPRING
M6200-15281	SPRING
M6200-15331	SPRING
M6200-15391	SPRING
M6200-15411	SWITCH
M6200-15471	SEALING STRIP
M6200-15541	SPRING
M6200-15611	P.C. BOARD
M6200-1611T2	WINDING BASE PLATE
M6200-16131	SCREW
M6200-16161	F2 GEAR
M6200-16201	CONNECTOR
M6200-16331	SPRING
M6200-17002	SHUTTER ASS'Y (Y01013)
M6200-17111	SHUTTER BASE PLATE
M6200-17152	SIGNAL PINS HOUSING
M6200-17162	GUIDE SIGNAL PIN
M6200-17172	ANGLE PLATE
M6200-17191	CURTAIN
M6200-17202	SHUTTER CURTAIN ASS'Y*****
M6200-17221	SCREW (6200-17121)
M6200-17231	SCREW B (S00111740 B)
M6200-17261	R.A. LEATHERETTE

 


M6200-17561	ANTIFRICTION
M6200-17621	SCREW
M6200-18002	S3 BASE PLATE ASS'Y
M6200-18321	SPRING
M6200-18311	WASHER
M6200-18332	PLATE
M6200-18392	PLATE
M6200-18442	SPRING
M6200-18451	NUT
M6200-1851T1	MOVING COIL
M6200-18791	SHAFT
M6200-18991	STUD
M6200-19102	LEVER
M6200-19141	SPRING
M6200-19261	HUB
M6200-19271	SPRING
M6200-19401	TRIGGER PLATE ASS'Y
M6200-19431	X SYNCHRO CONTACT
M6200-19471	STUD
M6200-19582	WASHER
M6200-19591	COLLAR
M6200-19741	SPRING
M6200-19781	SPRING
M6200-19841	SPRING
M6200-21101	SR BASE ASS'Y (Y01014)
M6200-21561	RSW CONTACT
M6200-24111	MIRROR
M6200-2412T1	MIRRO HOLDER PLATE
M6200-2412T2	MIRROR HOLDER PLATE
M6200-24131	R.A. LEATHERETTE
M6200-24171	RETAINING PLATE
M6200-24191	PLATE
M6200-24232	COLLAR
M6200-2431T2	MIRROR ARM ASSY
M6200-24341	SPRING
M6200-24371	APERTURE COUPLING LEVER
M6200-24372C	APERTURE COUPLING LEVER
M6200-24391	SEALING STRIP
M6200-24392B	SEALING STRIP
M6200-2451T1	MB BASE PLATE
M6200-24541	R.A. LEATHERETTE
M6200-24551	R.A. LEATHERETTE
M6200-24561	R.A. LEATHERETTE
M6200-24571	R.A. LEATHERETTE
M6200-24581	R.A. LEATHERETTE
M6200-24611	MIRROR SHOCK ABSORBER
M6200-24611C	MIRROR SHOCK ABSORBER*****
M6200-24611C-	MIRROR SCHOCK ABSORBER
M6200-24631	SPRING
M6200-24641	SCREW
M6200-24671	SCREW
M6200-25131	SEALING STRIP
M6200-25251	PROTECTING GLASS
M6200-25261	FRAME
M6200-25271	FITTING PLATE
M6200-25301	FOCUSING SCREEN FRAME

  


M6200-2531T1	F SCREEN FRAME ASS'Y
M6200-25351	SPRING
M6200-25371	SPACER (T=0.2)
M6200-25381	SPACER (T=0.2)
M6200-25391	SPACER (T=0.5)
M6200-25411	SPACER (T=0.3)
M6200-25421	SPACER (T=0.1)
M6200-25431	SPACER (T=0.05)
M6200-25441	SPACER (T=0.03)
M6200-25451	SPACER (T=0.5)
M6200-25461	SPACER (T=0.3)
M6200-25471	SPACER (T=0.1)
M6200-25481	SPACER (T=0.05)
M6200-25491	SPACER (T=0.03)
M6200-25511	MB BASE FRAME
M6200-25531	MB PLATE
M6200-25551	MB CLICK PLATE
M6200-25561	MB PLATE
M6200-25661	SEALING INSULATION
M6200-27111	FRONT COVER
M6200-27131	FRONT COVER LED
M6200-27211	BC CONTACT
M6200-27231	BC CONTACT
M6200-27302	LEAF SIDE PANEL ASS'Y
M6200-27311	LEFT SIDE PANEL
M6200-27321	SCREW
M6200-27331	SCREW
M6200-27341	RED DOT
M6200-27351	RUBBER
M6200-27361	S GUIDE STOPPER
M6200-27411	SHUTTER RELEASE BUTTON
M6200-27422	SHUTTER BUTTON GUIDE
M6200-27431	SPRING
M6200-27451	MULTIPLE EXPOSURE LEVER
M6200-27461	MULTIPLE CHANGING PLATE
M6200-27481	COLLAR
M6200-27501	RIGHT SIDE PANEL ASS'Y
M6200-2751T1	RIGHT SIDE PANEL
M6200-27531	CONTACT PLATE
M6200-27551	PIN
M6200-27561	BC BUTTON GUIDE
M6200-27571	LEAD WIRE
M6200-27611	BASE PLATE
M6200-27651	CONTACT PLATE
M6200-27811	RELEASE LEVER
M6200-27821	PLATE
M6200-27841	SPRING
M6200-27851	BC BUTTON
M6200-27911	MIRROR-UP LEVER
M6200-27921	SPRING
M6200-27931	CAM
M6200-28112	BOTTOM COVER
M6200-28121	NUMBER PLATE
M6200-28131	SCREW (PB1.7X3.5 GR2)
M6200-29101	NAME PLATE ASS'Y
M6200-29111	NAME PLATE ASS'Y

  


M6200-2912T1	COUPLING BASE PLATE
M6200-29162	SPACER
M6200-29172	FRAME PLATE
M6200-2921T1	VARIABLE RESISTOR PLATE
M6200-2924T1	APERTURE CONTROL PLATE
M6200-29341	GUIDE KEY
M6200-293431	GUIDE KEY
M6200-29351	PLATE
M6200-29371	RETURN LEVER
M6200-29381	COLLAR
M6200-29391	RELEASE LEVER
M6200-29441	BRUSH
M6200-29451	SEALING INSULATION
M6200-29471	SPRING
M6200-29481	SPRING
M6200-31101	RIGHT SIDE BOARD ASS'Y
M6200-31241	SPRING
M6200-32201	TV BASE PLATE ASS'Y
M6200-32261	SPRING
M6200-32301	TV CLICK
M6200-32401	TV BRUSH DISK
M6200-32441	COLLAR
M6200-32451	WASHER
M6200-32452	WASHER
M6200-32471	TV DIAL
M6200-32481	TV INDICATOR PLATE
M6200-32482	TV INDICATOR PLATE
M6200-32511	TV COVER
M6200-32531	TV RELEASE BUTTON
M6200-32541	SPRING
M6200-33103	F.P.C. BOARD
M6200-33151	MC BASE PLATE
M6200-33181	C-RING
M6200-3322T1	CAPACITOR PLATE ASS'Y
M6200-33262	SUB F.P.C. BOARD
M6200-33441	CAPACITOR PLATE ASS'Y
M6200-33471	IC-3
M6200-33641	RESISTOR
M6200-33651	THERMISTOR
M6200-33731	CONDENSER
M6200-33861	SUB PC BOARD
M6220-01011	FRONT LENS ASS'Y
M6220-01121	RING
M6220-04111	NAME RING
M6220-04131	FOCUSING RING
M6220-04141	RUBBER GRIP
M6220-04211	APERTURE RING
M6220-S3111	HELICOID ASS'Y
M6223-0004T1	#4 & #5 LENS
M6223-00061	#6 LENS
M6223-01141	SEPARATOR RING
M6223-01151	RETAINING RING
M6223-01211	WASHER
M6223-01221	WASHER
M6223-01231	WASHER
M6223-02111	DIAPHRAGM FRAME

 


M6223-0213T1	SECURING RING
M6223-02161	RETAINING RING
M6223-02171	SPRING
M6223-0221T1	DIAPHRAGM BLADE
M6223-0231T1	APERTURE CAM
M6223-02331	SHAFT
M6223-02341	COLLAR
M6223-02351	APERTURE CONTROL CAM
M6223-02361	RETAINER
M6223-04111	NAME RING
M6223-04121	FILTER RING
M6223-04141	FOCUSING RING
M6223-04161	RUBBER GRIP
M6223-04171	RING
M6223-04211	APERTURE RING
M6223-04231	SPRING
M6223-04251	INDICATOR RING
M6223-04271	RED DOT
M6223-04281	CAM RING
M6223-04291	RETAINER
M6223-0512T1	OPERATING LEVER
M6223-05142	SHAFT
M6223-05152	SPRING
M6223-05221	AM CHANGING KNOB
M6223-05311	MOUNTING COVER
M6223-S3102	HELICOID ASS'Y
M6231-0311T1	HELICOID ASS'Y
M6231-04211	APERTURE RING
M6231-08111	FOCUSING RING
M6231-08221	NAME RING
M6234-00011	FRONT LENS ASS'Y
M6234-00021	MIDDLE LENS ASS'Y
M6234-00031	REAR LENS ASS'Y
M6234-02121	OPERATING RING
M6234-0213T1	SECURING RING
M6234-02161	RETAINING RING
M6234-02331	SHOULDER SCREW
M6234-0311T1	HELICOID ASS'Y
M6234-04111	NAME RING
M6234-04141	FOCUSING RING
M6234-04311	MOUNT BASE RING
M6237-01001	LENS ASS'Y (6237-00001)
M6237-0221T1	DIAPHRAGM BLADE
M6237-0221T2	DIAPHRAGM BLADE
M6237-04111	NAME RING
M6237-04141	FILTER RING
M6237-04161	RUBBER GRIP
M6237-04251	INDICATOR RING
M6237-04281	CAM RING
M6237-S3111	HELICOID ASS'Y
M6241-0211T1	OPERATING DISK
M6241-02141	DIVIDING DISK
M6241-0311T1	HELICOID ASS'Y
M6241-04111	FOCUSING RING
M6241-08111	FILTER RING
M6241-08131	RUBBER GRIP

 


M6244-01011	FRONT LENS (6244-00011)
M6244-0245T1	CAM RING
M6244-04111	NAME RING
M6244-04141	HOOD RING
M6244-04161	FOCUSING RING
M6244-04171	RUBBER GRIP
M6244-04211	APERTURE RING
M6244-S3111	HELICOID ASS'Y
M6247-01001	LENS ASS'Y
M6247-04111	FOCUSING RING
M6247-04121	RUBBER GRIP
M6247-04211	APERTURE RING
M6247-S3111	HELICOID ASS'Y
M6248-01001	LENS ASS'Y
M6248-0311T1	HELICOID ASS'Y
M6248-04111	FOCUSING RING
M6248-04211	APERTURE RING
M6255-03001	HELICOID ASS'Y
M6255-03411	FOCUSING RING
M6255-0351T1	BARREL M
M6255-03541	FIXING RING
M6255-04001	MAGNIFYING RING ASS'Y
M6255-04611	APERTURE RING
M6255-08111	NAME RING
M6255-08121	RUBBER GRIP
M6257-01001	LENS ASS'Y
M6257-0211T1	OPERATING RING
M6257-02171	SECURING RING
M6257-02181	FIXING RING
M6257-0221T1	DIAPHRAGM BLADE
M6257-0223T1	APERTURE CAM
M6257-0226T1	CONTROL CAM
M6257-02291	RETAINER
M6257-03181	FITTING BARREL
M6257-03261	SPRING
M6257-03311A	COLLAR (P 4.98)
M6257-03311B	COLLAR (P 4.99)
M6257-03311C	COLLAR (P 5.00)
M6257-03311D	COLLAR (P 5.01)
M6257-03311E	COLLAR (P 5.02)
M6257-03331A	COLLAR (P 4.98)
M6257-03331B	COLLAR (P 4.99)
M6257-03331C	COLLAR (P 5.00)
M6257-04121	FILTER RING
M6257-04151	RUBBER GRIP
M6257-04181A	COLLAR
M6257-04181B	COLLAR
M6257-04181C	COLLAR
M6257-04201	RING ASS'Y (6257-S4211)
M6257-04231	RUBBER GRIP
M6257-04241A	COLLAR A
M6257-04251	SCREW
M6257-04361	OPERATING RING
M6257-04371	OPERATING LEVER
M6257-04381	RETAINER
M6257-0441T1	COUPLING RING

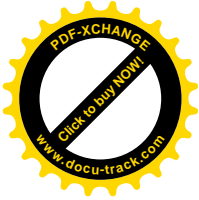 

M6257-04431	ANCHOR
M6257-05111	MOUNTING RING
M6257-05141	OPERATING LEVER
M6257-0515T1	OPERATING PLATE
M6257-0811T1	LIGHT BAFFLE
M6257-08131	BARREL M
M6257-08141	LIGHT BAFFLE
M6257-08151	NAME RING
M6257-08511	APERTURE RING
M6257-08611	WASHER
M6257-08621	WASHER
M6257-08631	WASHER
M6257-08641	WASHER
M6257-08651	WASHER
M6257-08711	MOUNTING COVER
M6257-S3111	HELICOID ASS'Y
M6264-01001	LENS ASS'Y
M6264-01211	FIXING RING
M6264-02111	FIXING TUBE
M6264-02211	BAYONET RING
M6264-02241	STOPPER PIN
M6264-02251	RELEASE LEVER
M6264-02291	RELEASE BUTTON
M6264-0411T1	BARREL
M6264-04121	COUPLING RING
M6264-04131	COUPLING LEVER
M6264-04141	SPRING
M6264-04151	HOLDER
M6264-04171	METER COUPLER
M6264-04221	SHAFT
M6264-04251	COUPLING LEVER
M6264-04311	BARREL
M6264-05111	MOUNTING RING
M6264-05131	SPRING
M6264-05151	MOUNTING COVER
M6269-72901	EYE-CUP ASS'Y (Y01541)
M6269-72961	FRAME
M6270-41111	RH BODY HOUSING
M6270-41131	LEVER
M6270-41141	SPRING
M6270-41151	HOOK PLATE
M6270-41181	SEALING STRIP
M6270-41211	LATCH PLATE
M6270-41221	COLLAR
M6270-41231	SPRING
M6270-41251	LEFT HINGE HOLDER
M6270-41271	RIGHT HINGE HOLDER
M6270-41302	RAIL FRAME ASS'Y (Y01613)
M6270-41321	HOOK PLATE
M6270-41331	LOCK PLATE
M6270-41341	SHOULDER SCREW
M6270-41351	SPRING
M6270-41361	LOCK LEVER
M6270-41371	SHOULDER SCREW
M6270-41381	SPRING
M6270-41391	WASHER

 


M6270-41402	ONTACT PIN (6270-4142T2)
M6270-41442	LEVER
M6270-41452	SHOULDER SCREW
M6270-41461	SEALING STRIP
M6270-41512	FILM ROLLER
M6270-41522	COLLAR
M6270-41532	LEAF SPRING
M6270-41561	FILM GUIDE PLATE
M6270-41571	FILM GUIDE PLATE
M6270-41611	CATCH PLATE
M6270-41621	LEAF SPRING
M6270-4164T1	SHIELD SPRING ASS'Y
M6270-4166T1	LOCK CLAW
M6270-41671	SHOULDER SCREW
M6270-41681	SPACER
M6270-41711	RH FRAME
M6270-41721	SCREW
M6270-41761	SEALING STRIP
M6270-41801	BACK COVER ASS'Y (Y01614)
M6270-42102	WINDING BASE PLATE ASS'Y
M6270-4211T1	WINDING BASE PLATE
M6270-4221T2	LINK LEVER
M6270-42222	COLLAR
M6270-42341	SPRING
M6270-42551	SPRING
M6270-42561	GUIDE RING
M6270-42671	SPRING
M6270-42671B	SPRING
M6270-42711	F6 GEAR
M6270-42721	F6 SHAFT
M6270-4274T1	ADVANCE CLUTCH ASS'Y
M6270-42881	SCREW
M6270-42931	F6 RETAINER
M6270-43131	SPRING
M6270-43141	C1 GEAR
M6270-43162	C1 FRICTION WASHER
M6270-43171	C2 GEAR
M6270-43182	SHAFT
M6270-4321T1	COUNTER DIVIDING DEVICE
M6270-4321T1C	COUNTER DIVIDING *****
M6270-43311	COUNTER
M6270-43312	COUNTER
M6270-43341	SPRING
M6270-43351	C PLATE
M6270-43361	INDICATOR RING
M6270-43431	SPRING*****
M6270-43431C	SPRING
M6270-4344T1	F CLUTCH
M6270-43461	SPRING
M6270-4352T1	F SIGNAL LEVER
M6270-43561	SPRING*****
M6270-43561B	SPRING
M6270-43661	SPRING
M6270-44103	UPPER COVER ASS'Y (Y01615)
M6270-44181	LEAF SPRING
M6270-44211	ISO PC PLATE

 



M6270-44251	DIAL
M6270-44301	LEFT SIDE PANEL ASS'Y
M6270-4431T1	LEFT SIDE PANEL
M6270-44321	SCREW
M6270-44331	SCREW
M6270-44351	WINDOW
M6270-44411	FILM ADVANCE KNOB*****
M6270-44421	ADVANCE GEAR
M6270-44422	ADVANCE GEAR
M6270-44441	SPRING
M6270-44451	DISK
M6270-44471	RUBBER
M6270-44503	RIGHT SIDE PANEL ASS'Y
M6270-44512	RIGHT SIDE PANEL
M6270-44513	RIGHT SIDE PANEL
M6270-44552	KNOB
M6270-44562	SPRING
M6270-44563	SPRING
M6270-44572	KNOB
M6270-44582	LEAF SPRING
M6270-44612	KNOB
M6270-44632	KNOB
M6270-44652	LOCK PLATE
M6270-44653	LOCK PLATE F
M6270-44662	LOCK PLATE B

M6272-28241	UPPER BODY CAP (304490)
-------------	-------------------------


M6273-61211	ISO HOLDER
M6273-61311	LEAF SPRING
M6273-61331	COVER
M6273-61411	BASE FRAME
M6273-61421	SEALING STRIP
M6273-61431	PLATE
M6273-61511	CLAW LEVER
M6273-61521	COLLAR
M6273-61541	SPRING
M6273-61551	SHOULDER SCREW
M6273-6161T2	LEVER
M6273-61632	COLLAR
M6273-61651	SPRING
M6273-61671	KNOB
M6273-61711	LOCK LEVER
M6273-61722	SHOULDER SCREW
M6273-61731	SPRING
M6273-6181T1	CLAW PLATE
M6273-61821	SHOULDER SCREW
M6273-61831	SPRING
M6273-6191T1	LEVER
M6273-61942	COLLAR
M6273-6211T1	SWITCH
M6273-6223T1	SIGNAL PINS HOUSING
M6273-62251	SEALING STRIP
M6273-6231T1	LEAF SPRING
M6273-62421	LEAF SPRING
M6273-62511	SHIELD PLATE
M6273-62621	HONDER PLATE
M6273-62711	RUBBER

 



M6274-11111	BASE FRAME
M6274-11121	RELEASE LATCH
M6274-11131	SPRING
M6274-11141	HOLDER
M6274-11161	GUIDE
M6274-11171	SPRING HOLDER
M6274-11211	PRESSURE PLATE
M6274-11221	GUIDE
M6274-11241	SPRING
M6274-11251	SCREW
M6274-11271	S MARK PLATE
M6274-11301	SPROCKET GEAR
M6274-11311	SPROCKET
M6274-11351	SCREW
M6274-1137T1	SPOOL ASS'Y
M6274-11391	COLLAR
M6274-11401	SPOOL SHAFT ASS'Y
M6274-11501	SPOOL UPPER PLATE
M6274-11561	SPRING
M6274-11571	SCREW
M6274-11581	SPRING
M6274-11601	LEVER
M6274-11631	SIGNAL GEAR
M6274-1164T1	SIGNAL PLATE
M6274-11671	SPRING
M6274-11701	REWIND GEAR DISK
M6274-11761	REWIND GEAR DISK
M6274-11811	HOLDER
M6274-11821	STOPPER PLATE
M6274-11851	ROLLER
M6274-11871	SHAFT
M6274-11891	FILM GUIDE PLATE
M6274-11901	SPOOL HOLDER ASS'Y
M6274-1191T1	HOLDER
M6274-11921	FRAME
M6274-11931	SHAFT
M6274-11941	SPRING
M6274-12111	UPPER COVER
M6274-12202	BOTTON COVER
M6274-12251	GEAR
M6274-12261	GEAR
M6274-12272	PAWL
M6274-12281	SPRING
M6274-12311	SPOOL GEAR
M6274-12321	WASHER
M6274-12342	PAWL
M6274-12352	PAWL
M6274-12372	PAWL
M6274-12381	WASHER
M6274-41111	MAIN FRAME
M6274-41171	LIGHT BAFFLE
M6274-41301	RAIL FRAME ASS'Y (Y01613)
M6274-41511	FILM ROLLER
M6274-41531	LEAF SPRING
M6274-41571	WASHER T=0.1
M6274-41581	WASHER T=0.05

  



M6274-41591	WASHER T=0.03
M6274-4166T1	LOCK CLAW
M6274-41801	BASE COVER ASS'Y
M6274-41901	WINDING GEAR ASS'Y
M6274-42102	WINDING BASE PLATE ASS'Y
M6274-42103	WINDING BASE PLATE ASS'Y
M6274-42501	F5 PLATE (6274-425T1)
M6274-42541	F5 RETAINER
M6274-42711	F6 GEAR
M6274-42721	F6 SHAFT
M6274-42841	F RATCHET GEAR
M6274-42851	F5 GEAR
M6274-42891	F FRICTION PLATE
M6274-43131	SPRING
M6274-4314T1	STOP LEVER ASS'Y
M6274-43181	SPRING
M6274-43191	SHOULDER SCREW
M6274-43261	LEVER
M6274-43271	SPRING
M6274-43291	SPACER
M6274-43311	E-COUNTER DISK
M6274-43312	E-COUNTER DISK
M6274-43361	INDICATOR
M6274-43591	SPRING
M6274-43661	SPRING
M6274-43731	SPRING
M6274-43771	LIGHT BAFFLE
M6274-43781	SCREW
M6274-4413T1	UPPER PLATE ASS'Y
M6274-44301	LEFT SIDE PANEL ASS'Y
M6274-4431T1	LEFT SIDE PANEL
M6274-44491	R COVER
M6274-44503	RIGHT SIDE PANEL ASS'Y
M6274-44513	RIGHT SIDE PANEL
M6274-44541	PLATE
M6274-44701	REWIND GEAR DISK
M6274-44801	REWINDER KNOB ASS'Y
M6274-44811	KNOB
M6274-4482T1	LEVER
M6274-44841	SHAFT
M6274-44851	SPRING
M6274-44861	HUB
M6274-44881	PAWL
M6274-44891	SPRING
M6274-44911	PLATE
M6274-44921	MARK PLATE
M6274-44931	SEALING STRIP
M6274-44941	SEALING STRIP
M6274-44951	SEALING STRIP
M6274-45111	BOTTOM PLATE
M6274-45141	REWIND BUTTON
M6274-45161	SPRING
M6275-91111	COUPLER COLLAR
M6275-9112T1	COUPLING DISK
M6275-91131	BASE DISK
M6275-91161	SPACER

 



M6275-91171	PLATE
M6275-91211	BAYONET DISK
M6275-91231	KNOB
M6275-91251	LEAF SPRING
M6275-91271	COLLAR
M6275-91281	FILM ADVANCE KNOB
M6275-91282	FILM ADVANCE CASE
M6275-91321	SHAFT
M6275-91331	ANGLE PLATE
M6275-91332	ANGLE PLATE
M6275-91351	KNOB
M6275-91352	KNOB
M6275-91411	WINDING KNOB LID
M6275-91412	WINDING KNOB LID
M6275-91432	KNOB BASE RING
M6278-81101	BASE FRAME
M6278-8112T1	COUPLING DISK
M6278-81131	BAYONET DISK
M6278-81151	COLLAR
M6278-81161	LEAF SPRING
M6278-81181	KNOB
M6278-81211	HUB
M6278-81261	W5 GEAR
M6278-8134T1	PLATE
M6278-81371	HOLDER
M6278-81401	BASE PLATE
M6278-81421	W2 GEAR
M6278-8144T1	W3 GEAR
M6278-8147T1	W4 GEAR
M6278-81511	WASHER
M6278-81551	MOTOR
M6278-81552	MOTOR
M6278-81571	W1 GEAR
M6278-81611	KNOB
M6278-81622	COLLAR
M6278-81632	SCREW
M6278-81641	SHAFT
M6278-81661	GEAR
M6278-81671	SPRING
M6278-81681	IDLE GEAR
M6278-81721	HUB
M6278-8211T1	BASE PLATE
M6278-82211	POWER SWITCH
M6278-82311	WINDING SWITCH
M6278-82411	BC SWITCH
M6278-82511	RELEASE SWITCH
M6278-82611	HOLDER
M6278-8311T1	TOP COVER
M6278-83131	FRAME
M6278-83161	LEAF SPRING
M6278-83211	RELEASE BUTTON
M6278-83221	SPRING
M6278-83251	SELECTOR LEVER
M6278-83261	PLATE
M6278-83301	DISK
M6278-8411T1	CONNECTOR

  


M6278-84211	LED
M6278-84221	LED HOLDER
M6278-8431T2	PRINTED CIRCUIT BOARD
M6278-8511T1	GRIP
M6278-85131	CONTACT
M6278-85181	FITTING PLATE
M6278-85221	RUBBER GRIP F
M6278-85231	RUBBER GRIP R
M6278-85251	SIDE PANEL
M6278-85261	RUBBER
M6278-85271	SPACER
M6278-86101	BATTERY CASE ASS'Y
M6278-86111	BATTERY CASE
M6278-86121	CONTACT A
M6278-86131	CONTACT B
M6278-86141	CONTACT C
M6278-86151	CONTACT D
M6278-86161	SHAFT
M6278-86171	STOPPER DISK
M6278-86181	PIN
M6278-89111	LOCK BUTTON
M6278-89121	LEAF SPRING
M6278-89231	SCREW
M6279-41791	RH COVER
M6280-96101	BASE FRAME ASS'Y (Y01511)
M6280-9621T1	LOCKING PLATE
M6280-96241	KNOB
M6280-96271	SPRING
M6280-96311	KNOB
M6280-96321	SPRING
M6280-96411	HOLDER
M6280-96421	LEAF SPRING
M6280-96431	GUIDE SCREW
M6280-96451	COVER
M6280-9651T1	FRONT FRAME
M6280-96521	SHAFT
M6280-96531	SIDE PANEL
M6280-96541	SIDE PANEL
M6280-96611	SIDE PANEL
M6280-96621	SIDE PANEL
M6280-9671T1	REAR PANEL
M6280-96731	HINGE PLATE
M6280-96811	FLAP PLATE
M6280-96831	HINGE PLATE
M6280-97111	HOOD COVER
M6280-97131	RUBBER
M6280-97161	SPRING
M6280-97171	SPRING
M6280-97321	SHAFT
M6280-97511	FINDER MASK
M6280-9761T1	VIEWING FRAM ASS'Y
M6280-97681	COVER
M6281-35101	EYEPiece LENS
M6281-35121	PRISM M
M6281-35131	PRISM L
M6281-35141	PRISM G

  



M6281-35151	PRISM S
M6281-35511	HOLDER
M6281-35541	COVER L
M6281-35561	COVER R
M6281-35801	FINDER COVER
M6282-71111	BASE PLATE
M6282-71131	GUIDE SCREW
M6282-71201	LOCK LEVER
M6282-71231	COLLAR
M6282-71241	COLLAR
M6282-71261	SPRING
M6282-71311	RELEASE LEVER
M6282-71341	SPRING
M6282-71351	KNOB
M6282-71361	SHAFT
M6282-71371	SPRING
M6282-71401	LED BASE FRAME (Y01532)
M6282-71411	PRISM NO. 1
M6282-71421	PRISM NO. 2
M6282-71461	FRAME
M6282-71501	HOUSING ASS'Y (Y01533)
M6282-71601	HOUSING ASS'Y (Y01534)
M6282-71701	HOUSING ASS'Y (Y01535)
M6282-71911	PRISM HOLDER
M6282-71931	CUSHION
M6282-71941	CUSHION
M6282-71951	SPACER A
M6282-71961	SPACER B
M6282-71971	SPACER C
M6282-72111	PRISM COVER
M6282-72121	CUSHION F
M6282-72131	CUSHION R
M6282-72151	PRISM HOLDER
M6282-72161	CUSHION
M6282-72181	SPRING
M6282-72201	SPD HOLDER ASS'Y (Y01536)
M6282-72312	CONTACT PIN BOARD
M6282-7231T1	CONTACT PIN BOARD
M6282-72321	DIAL
M6282-72331	HOLDER
M6282-72341	BRUSH
M6282-72371	CV BUTTON
M6282-72381	EXPOSURE SCALE
M6282-72391	SPRING
M6282-72411	HOLDER
M6282-72421	SELECTOR PLATE
M6282-72432	CONTACT PIN BOARD
M6282-7243T1	CONTACT PIN BOARD
M6282-72481	LEAF SPRING
M6282-72511	SHIELD COVER U
M6282-72521	SHIELD COVER L
M6282-72701	EYEPIECE BLIND ASS'Y
M6282-72711	EYEPIECE FRAME
M6282-72791	SPRING
M6282-72801	LEVER
M6282-72811	KNOB

  



M6282-72851	CLICK PLATE
M6282-72861	SPRING
M6282-72901	FINDER COVER
M6282-7312T4	F.P.C. BOARD
M6282-73131	IC
M6282-73141	DIODE
M6282-73151	RESISTOR
M6282-73161	CAPACITOR
M6282-73661	TAPE
M6282-73671	TAPE
M6282-73681	TAPE
M6282-73691	TAPE
M6282-73711	TAPE
M6284-85111	ANGLE PLATE LARGE
M6284-85121	PLATE
M6284-85141	PRINTED CIRCUIT BOARD
M6284-8521T1	BASE FRAME
M6284-85231	GUIDE SCREW
M6284-85241	RELEASE LOCK GUIDE
M6284-85261	SPRING WASHER
M6284-85271	NUT
M6284-85311	SHUTTER RELEASE BUTTON
M6284-85321	PLATE
M6284-85341	SPRING
M6284-85351	SPACER
M6284-8541T1	PLATE
M6284-85511	SHAFT
M6284-85521	LEAF SPRING
M6284-85531	COLLAR
M6284-85561	LUG PLATE
M6284-8561T1	GRIP HOUSING RIGHT
M6284-85651	COVER
M6284-85661	PRINTED CIRCUIT BOARD
M6284-85671	CONTACT PIN
M6284-85811	BOTTOM PLATE
M6284-85831	TRIPOD SCREW
M6284-85841	DISK
M6284-85861	GRIP HOUSING LEFT
M6284-85891	PIN
M6284-8592T1	BASE PLATE
M6284-85961	GRIP BELT
M6284-85971	GUIDE SCREW
M6284-85991	SCREW
M6284-86111	TRIPOD SOCKET
M6284-86131	BOTTOM COVER
M6284-86511	CONTACT BASE
M6284-86521	COUPLING RING
M6284-8653T1	P.C. BOARD
M6284-86562	CONTACT D
M6284-86572	CONTACT C
M6284-86582	CONTACT BASE
M6284-86611	CONTACT
M6284-86711	COVER
M6285+L(-158)C-85111	ANGLE PLATE (MIDDLE)
M6285-8561T1	GRIP HOUSING RIGHT
M6285-85861	GRIP HOUSING LEFT

 

M6286-85111	ANGLE PLATE (SMALL)
M6286-85121	PLATE
M6286-8561T1	GRIP HOUSING RIGHT
M6286-85861	GRIP HOUSING LEFT
M6293-41741	DARK SLIDE ASS'Y
M8W4X0.1	WASHER (S060116801)
M8W4X0.2	WASHER (S06016802)
M91010-11111	CAMERA PLATFORM
M91010-11121	CAMERA MOUNTING SCREW
M91010-11201	WRIST STRAP
M91010-1125T1	MAIN SHAFT
M91010-1131T1	SHAFT (A)
M91010-11321	LOCK GRIP (A)
M91010-11331	LOCK GRIP RUBBER (A)
M91010-11351	LEG LOCK (A)
M91010-11361	SPACER RING (A)
M91010-1141T1	SHAFT (B)
M91010-11421	LOCK GRIP (B)
M91010-11431	LOCK GRIP RUBBER (B)
M91010-11451	LEG LOCK (B)
M91010-11461	SPACER RING (B)
M91010-1151T1	SHAFT (C)
M91010-11521	LOCK GRIP (C)
M91010-11531	LOCK GRIP RUBBER (C)
M91010-11551	LEG LOCK (C)
M91010-11561	SPACER RING (C)
M91010-11621	COVER
M91010-11631	FERRULE
M91070-11111	BASE FRAME ASS'Y
M91070-11131	PLATE
M91070-11171	LOCK PLATE
M91070-11181	SEALING STRIP
M91070-1121T1	LOCK LEVER ASS'Y
M91070-11231	SHOULDER SCREW
M91070-11311	HOOK
M91070-11321	SHOULDER SCREW
M91070-11331	SPRING
M91070-1141T1	LEVER
M91070-11431	SHOULDER SCREW
M91070-11441	SPRING
M91070-11511	PLATE
M91070-1152T1	ARM
M91070-11551	SPRING
M91070-11561	STUD
M91070-1161T1	RELEASE LEVER ASS'Y
M91070-11631	SPRING
M91070-11641	STUD
M91070-11651	SPRING
M91070-11671	SPRING
M91070-11711	PLATE
M91070-11731	LEATHER
M91070-12111	FRAME
M91070-12131	CAMERA MOUNTING SCREW
M91070-12141	HANDLE
M91070-12151	SPRING
M91070-12161	PLATE

  

M91070-12211	PLATE
M91070-12231	PIN
M91070-12251	RUBBER
M91080-12111	FRAME
M91080-13211	UPPER PLATE
M91080-13231	ANGLE PLATE
M91080-13251	RUBBER
MCE-7	C-RING
MCE-8	C-RING
ME-10	E-RING
ME-13	E-RING
ME-17	E-RING
ME-20	E-RING
ME-24	E-RING
EFC4561KE	BELLOWS L
MGS-2.0	GS-RETAINING RING (S03410020)
MM5001-31611	SPRING
MN26	NUT
MNO,8300	MOEBIUS 8300/20CC
MO2-004	STOP RING
MP171	OBTU RZ
MP175	OBTURATEUR RZ 250 (VOIR REF MY175)
MP4830000	OBTURATEUR 645 PRO N/L (VOIR REF MY 483)
MP791	OBTURATEUR RB(VOIR REF MY791)*****
MP975-6008	STEEL PIVOT
MPB1.7X4	SCREW
MPB2X3.5	SCREW(S00012035)
M(3)PB1.7x3.5	SCREW
M(3)PB2.6x4.5	SCREW (S00112645)
MPD1.7X2.0	SCREW (S00211720)
MPD1.7X2.2	SCREW (S00211722)
MPD1.7X3.5	SCREW
MPD2X5,0	SCREW(S00212650)
MPD2.6X4.5	SCREW (S00212645)
MPD2.6X5.0	SCREW (S00212650)
MPD2.6X6.0	SCREW (S00212660)
M2.8W1.4X0.3	WASHER
M12W6X0.05	WASHER
M12WX0.05	WASHER*****
M12WX0.05-	WASHER
MRS2617	CUSHION
MRS5506	GUIDE
MRS-5612K	BELLOWS(5083-5612T1)
MRS5635	STOPPER*****
MRS5635-	STOPPER
MRS5646-	EXTENSION
MRS-7005	GUIDE PIN
MRS-7219	EYE-CUP
MRSW-8328	SHOULDER SCREW
MRZ18	SYNCRO TERMINAL SPANNER
MS00032625	SCREW PB2,6x2,5Ni
MS000111735	SCREW
MS00212050	SCREW PD2X5
MS00212650	SCREW*****
MS00212650	SCREW PD2,6X5
MS00212680	SCREW PD2,6X8

  

MS00411745	SCREW TB(1,7 X 5,5)
MS00611735	SCREW
MS00811740	SCREW A1.7x4
MS00911722	SCREW (4)
MS00911730	SCREW (4)PB1.7x3
MS00911735	SCREW (3)
MS0021660	SCREW PD2,5X6
MS03410020	GS RING*****
MS03410020-	GS RING
MS06011502	WASHER
MS06013601	WASHER
MS06015601	WASHER 6W3X0.1
MS06015602	WASHER 6W3X0.2
MS06016802	WASHER
MS06017701	WASHER 7W5X0,1
MS06017901	WASHER
MS07010015	STEEL BALL (B015)
MS07010001	STEEL BALL
MSE-21	DB-BOND 1600 -B
MSE-64	TREEBOND#1401 B
MS145-05011	TERMINAL (5027-S3621)*****
MS145-05011	TERMINAL (5027-S3621)
MS145-05021	TERMINAL (5122-S4411)*****
MS145-05022	TERMINAL (5122-S4411)
MS145-10211	BAYONET RING (5100 3123T1)
MS145-10221	BAYONET RING (21010 21211)
MS145-10411	BAYONET RING
MS145-20041	TRIPOD SCREW (6200-12321)
MS145-20091	TRIPOD SCREW (5100-24142)
MS145-40211	NUT
MS147-50011	NUMBER PLATE
MS351-0013	E-RING
MS391-1011	FRONT LENS CAP
MS391-1021	FRONT LENS CAP
MTB.7X2.5	SCREW (S00411725)
MTB1.7X2.5	SCREW (S00411725)
MTB2X3.0	SCREW (S00412030)
MTL2427	LUG PLATE
MTP2X8	PIN*****
MTP2X8-	PIN
MU17B	DRIVER BIT SPECIAL
MU51D	DRIVER BIT SMALL
MU65A	SYNCHRO TERMINAL
MY02-004	STOP RING
MY02313	DIAPHRAGM BARREL ASS'Y
MY02314	FOCUS BARREL ASS'Y
MY02315	MOUNT RING ASS'Y
MY02317	PROTECTOR LENS ASS'Y
MY02335	MOUNT RING ASS'Y
MY05037	BATTERY CASE UNIT*****
MY05037-	BATTERY CASE UNIT
MY11-006	DUMMY BATTERY
MY11-008	EYEPIECE CAP
MY11-007-A	FINDER FRAME CHART & INFINITY CHART

